 


NORTHSKY

ELECTRIC INFRARED HEATER INDOOR/OUTDOOR

QHA-15DA (H3-1010)

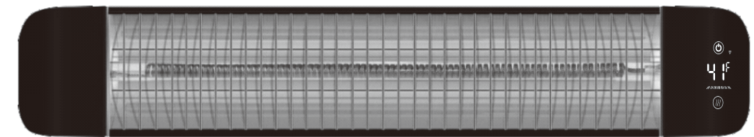

Please read the instructions carefully before use.

Sincerely thank you for purchasing our products. In order to make our products better serve you, please read this manual carefully before use, and save it for future maintenance.

We are not responsible for any damages resulting from failure to comply with the following instructions and instructions.

Safety precautions

Use of electrical appliances should always follow basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following:

WARNING: To avoid overheating, do not cover the heater!

The "no cover" symbol on the heater means that no object can be covered on the appliance or the heating element. If any object (including ash, salt, chemical liquid, etc.) is covered in the heater housing or the heating element, do not use, or stop using it immediately. Disconnect the power supply and wait until the unit has completely cooled. Before using again ensure the surface of the heater housing and element is not covered, and it is clean and dry.

If the heater is used in a humid environment (such as sea or seaside, etc.) or in areas with high salt content in the air, please check whether there is any salt, alkali, or other solid, crystal, etc. on the surface of the cover or heating element before opening each time. If you find any of the above, do not use it, or stop using it immediately. Disconnect the power supply and wait until the unit has completely cooled. Before using again ensure the surface of the heater housing and element is not covered, and it is clean and dry.

Care and cleaning:

If the inside of the heater or the heating element is covered with dust or dirt, please have it cleaned by a qualified service provider. Do not operate the heater in this situation.

Disconnect the heater from the power supply. Do not clean before cooling to avoid burns!

The only thing that needs to be cleaned is the exterior surface of the heater.

Do not use strong abrasives or solvent cleaners when cleaning the heater as they may damage the plastic parts. Wipe the outside of the heater with a slightly damp cloth.

When not in use, remove it from the mounting position and store the heater carefully in a safe, dry place out of reach of children. In humid environments (such as sea or seaside, etc.) or in areas with high salinity in the air, if you do not use the heater for a long time, please clean and dry it and store it in a safe package.

Do not touch the heating element with your fingers, as the residue on your hands can affect the lifetime of the heating element. If you accidentally touch it, remove the finger marks with a soft cloth with 70% isopropyl alcohol.


Do not attempt to repair or adjust any electrical or mechanical functions on this heater.

The heater does not contain user-serviceable parts and must be returned to the manufacturer or its agent if the product is damaged or defective

NORTHSKY
ELECTRIC INFRARED HEATER
INDOOR/OUTDOOR
QHA-15DA (H3-1010)

NorthSky Supply Inc.
Mfd for NorthSky Supply Inc.
The Woodlands, TX 77380
www.northskysupply.com
1-800-805-6686
MADE IN CHINA

Operation guide:

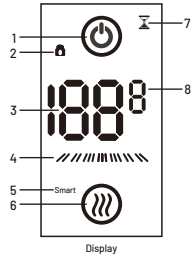


1. Power indicator icon
2. Child lock indicator icon
3. Temperature indicator icon
4. Gear indication icon
5. Intelligent heating operation indicator icon
6. Heating indicator icon
7. Timing indicator icon
8. Temperature unit indicator icon

Operating:

1. Plug the heater power cord into the socket that matches the voltage and current of the body nameplate.
2. Press the On/Off button on the remote to power on the heater.
3. Press the Power Select button to select the gear position, a total of four gear power selection, the gear position indicator icon displays the corresponding gear position symbol.
4. Press the Up/Down button to select the setting temperature. The temperature setting range is 41-113 degrees.
5. Press the timer button to enter the timing setting state. Select the timed shutdown time by the up/down button. The timing range is 0-24 hours. The timing indicator is illuminated when the timer is running.
6. Press the Eco button once, the digital screen only displays the temperature, and press the Eco button twice to display only the heating symbol.
7. Press the Smart heating button, the heater enters the intelligent heating mode, the gear position will automatically switch according to the temperature change, and the intelligent heating operation indication icon will light when the intelligent heating mode is running.
8. To Lock: Press the Set button and then press the On/Off button. Confirm by pressing any other button with no response.
To Unlock: Press the Set button and then press the On/Off button.
9. Press the Set button and then press the up button to switch between Fahrenheit and Celsius.
10. Press the On/Off button again to shut down.

Remote control:

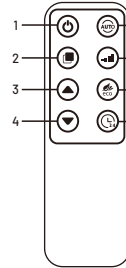

1. On/Off
2. Set
3. Up
4. Down
5. Smart Heating
6. Power Select
7. Eco
8. Timing

WARNING: Risk of fire hazard when installed near curtains and other combustible materials!

- The distance between the heater and furniture, pillows, bedding, paper, clothes, curtains, and objects should be at least 5 feet.
- The heater must be installed at a height of at least 6 feet above the ground.
- This heater uses a 120V AC power supply. Please select the qualified socket according to the current of the product model.
- Consult the dealer or manufacturer before using it for anything other than home use.
- The fire protection cover of the heater is to prevent direct contact with the heating element. When using the heater, the fire protection cover must be installed in place.
- The heater does not adequately protect young children or infirm people.
- This heater must be grounded. Must be used on a properly grounded outlet.
- When using, make sure that the plug and socket are clean and free of dust.
- When disconnecting the heater from the power source, turn off the heater switch, then unplug it from the power outlet and pull it out, not pulling the power cord.
- Do not touch the plug with wet hands.
- Do not extend the heater's power cord.
- Regularly check the power cord and plug for wear or damage, do not use damaged wires, plugs or loose sockets, and never use a heater that has failed, been discarded or damaged for any possible reason.
- If the power cord is damaged, it must be replaced by the manufacturer, the service department or a qualified professionals to avoid danger.
- Do not use a heater if the heating element is broken or damaged.
- The heater cannot be placed directly under the power outlet or terminal box.
- When using the heater, do not place the power cord on the heater body, do not place it in front of the heater, and do not hang it in front of the heater.
- Do not use the heater where gasoline, paint, flammable liquids or flammable dust are stored.
- If the heater is used in the bathroom, please be careful to ensure that the heater switch or remote is not touched by the user of the bathtub or shower at any time.
- Do not install the heater in a location where it may fall into a bathtub or other water container.
- Care should be taken when leaving the heater running and unattended .
- Do not use a heater while sleeping.
- Do not insert anything into the heater.
- Do not touch the heater while in use.
- Before adjusting the heater position or working on it, be sure to always disconnect the heater from the

•This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

•Children should be supervised to ensure that they do not play with the appliance.

Product specifications:

Model	Voltage	Power	Product size
H3-1010	120V	1500W	30.32 x6.30 x2.76 in

Installation Notes:

This heater must be installed by a qualified person, or electrician.

Before installation and during installation, ensure that the heater is always disconnected from the power supply and is in a cool state.

The heater can be installed horizontally or vertically.

The minimum point of the heater must be higher than 6 feet from the ground, ensuring that the heater can not be touched directly during operation.

Do not place the heater at an angle of more than 90 degrees, or below 45 degrees.

If the heater installation is vertical or close to vertical, make sure the power cord is always under the heater.

During the use of the heater, there is a certain increase in the temperature of the heater body. Make sure that the power cord never touches the heater body and is away from the heater housing.

Do not install heaters on the surface of any flammable materials.

When installing the heater, make sure that the distance between the heater and the surface of the flammable material is always not less than the minimum safe distance.

Make sure the heater is always at least 19.7 inches away from adjacent walls and ceilings.

If you want to use the heater outdoors, use a weatherproof, qualified outlet.


Make sure there are no wires or water pipes in the area where the heater is installed before drilling.

The heater must be installed on the mounting bracket provided by the manufacturer (see Figure A below).

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.


Statement: Heater should not be located immediately below a socket-outlet.

Figure A:

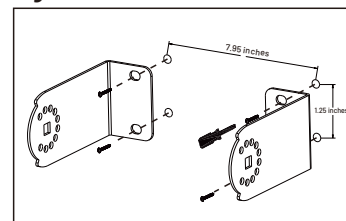


- 1.Remove the wall plugs (expansion rubbers) and screws from the accessory pack.
- 2.Mark and drill four holes in the wall:
 - Hole diameter: 0.31"
 - Hole depth: 2.76"
 - Vertical spacing: 1.25" apart
 - Horizontal spacing: 7.95"
- 3.Insert the wall plugs into the drilled holes.
- 4.Attach the mounting bracket to the wall using the 5x60mm screws provided.

Figure B:

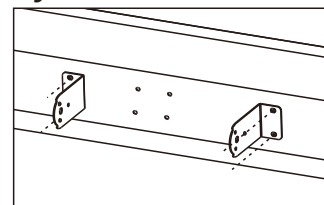

Place the wall bracket with the corresponding screw on the back of the heater, and then adjust the wall bracket to the proper position with the nut from the accessory bag and then lock it to ensure it will not loosen.

Figure C:

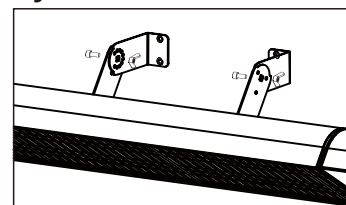

Connect the bracket mounted on the back of the heater to the wall bracket, adjust the heater to a suitable position, and lock the brackets with the nut and screw from the accessory bag to ensure that it will not loosen.

Product specifications:

