

Hotel Electronic Safe


Please do not keep emergency keys in your safe!

Dear valued customer:

Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, thank you for choosing our products!

Schematic drawing of case

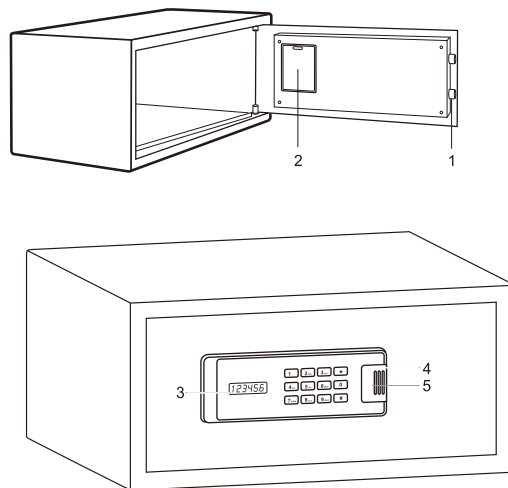

- | | |
|------------------------|------------------------|
| 1. Bolts | 4. Usb(for CEU) |
| 2. Battery Compartment | 5. Emergency Key Cover |
| 3. Display | |

POWER SUPPLY

Battery

The working voltage for the product is equal to 4 AA batteries.

System will turn into micro power consuming state automatically.

If the displays reads "BA—L", it means the voltage are low and must be replaced as soon as possible.

CAUTION: When replacing batteries, do replace all the batteries at once and never use old and fresh batteries together. Never mix the specified batteries with other types of batteries in use.

Using personal code to close and Open the safe

Enter any 4 to 6 digit number then press the "#" key, the word "CLOSE-" appears and the safe will be closed

Enter your 4 to 6 digit number then the word "-OPEN-" appears and the safe will be opened automatically, finally display showed "OPENED", which means safe open successfully.

Setting the personal code

In the state of door open, you can change any personal code(4-6 digitals) when you close door.

Using master code open the safe

Enter your 6 digital master code, then the word "-OPEN-" appears and the safe will be opened automatically, finally display showed "OPENED", which means safe open successfully.

Setting the master code

Keep the door open, Press "*" twice, and "PROG" appears. After "PROG" disappears, input the original master code (factory master code is 011223) and "NEW" appears. After "New" disappears, input the new master code (6 digitals) you prefer within 5 seconds and "AGAIN" appear. After "AGAIN" disappears, input the new master code again within 5 seconds and "DONE" appears; which means the master code has been changed successfully. If "ERROR" appear, it means new master code setting failed.

The new code cannot be set as function code (such as: 751019 and 123456) to avoid confusion.
The original factory master code is 011223

Opening the safe in emergency

Once the electronic circuit malfunctioned or codes unknown. You could also use the override key to open the safe.

SECURITY FUNCTION

HIDE THE CODE

Press "*", code hiding function will be activated, all the number input within 5 seconds will be not showed, only show "-". If no number input within 5 seconds or after one time input finished, the hiding function will be closed automatically. If you want to re-start this function, press "*" directly.

If press "*" when you input the code, then after the door closed, code will be not show back.

AUTOMATICAL LOCK

After five consecutive times of error codes, the system will be locked out automatically. During that time, the display will display "HOLD15" every press. 15 minutes later, the system will start again, allowing button entry.

规格：145X210mm，颜色：黑，材料：157克铜板纸