

<div><div>IMPORTANT NOTICES</div><div><div><div>1. Do not leave safe unattended while open.</div><div>2. Keep Children Away from safe.</div><div>3. Keep your safe locked and closed at all times when not in use, to avoid children being accidentally locked in safe.</div><div>4. Place your safe in a cool and dry location.</div><div>5. Remember to record the serial number of your safe from the tag on the back of your safe. You will need this serial number for all warranty or customer service inquiries.</div><div>6. Electronic media, photographic media and all audio-visual media should not be stored in the safe for fire protection. These materials will not survive the rated internal temperature of the safe and may be damaged or destroyed.</div></div></div><div><div><div><div></div><div>WARNING</div></div><div>Safe must be secured as detailed in these instructions. A child or Adult can tip the safe and can be killed or seriously injured. Failure to secure the safe can result in death or serious injury.</div></div></div><div>1</div></div> <td><div><div>BATTERY INSTALLATION AND REPLACEMENT</div><div><div><div>1. Turn the lock cover as illustrated below.</div><div>2. Hold the battery connecting cap and attach the 9V alkaline battery.</div><div>3. Then, screw the cover back into place.</div></div><div>Repeat the steps above for battery replacement.</div></div><div><div>NOTE:</div><div><div><div>1. When changing the battery, always hold the battery connecting cap while disconnecting or attaching the battery. Do not pull on wires. Doing this could cause the power supply to become disconnected from the lock.</div><div>2. When the battery runs out, the red light will flash when you press any button on the keypad. Replace the batteries when the red light flashes.</div></div></div></div><div><div><div><div></div><div>E-LOCK</div></div></div></div><div>2</div></div></td> <td><div><div>OPENING THE SAFE</div><div><div><div>After installing the battery, open the safe by entering the preset code: 1 - 5 - 9 - #.</div><div>NOTE: You should change the entry code as soon as possible after opening the safe to insure proper security.</div><div>After you have entered the Preset code, you will need to turn the handle clockwise to open the door. You will have 5 seconds to turn the handle before the locking mechanism is reactivated.</div></div></div><div><div>SETTING THE PASSCODE & PASSCODE RESET</div><div><div><div>To enter your own security code you will need to follow the steps listed below:</div><div><div><div>1. After opening the electronic safe (with the preset code of 1,5,9,#) locate the small red button on the inside of the door (near the hinge).</div><div>2. Press and hold the red button for a few seconds, then release. You will hear two beeps, then the yellow light on the panel will activate, allowing you to enter your code for a period of time. You can only enter your personal code while the yellow light is on.</div></div></div><div>With the door open and the yellow light on, enter your own personal security code, which can be 3-8 digits long. Confirm your new code by pressing the "*" symbol on the touch pad. Before closing the door, try the new security code to ensure the code was entered properly and you can unlock the door.</div></div></div><div><div><div><div></div><div></div></div></div></div><div>3</div></div></div></td> <td><div><div><div>DO NOT SHUT THE DOOR UNTIL YOU HAVE CONFIRMED THAT YOUR NEW SECURITY CODE HAS BEEN ENTERED CORRECTLY .</div><div>If the code fails, go through steps 1 and 2 again.</div><div>If you write down your combination, keep it in a secure place, away from children. Do not keep your combination inside the safe.</div><div>If the incorrect security code is entered 3 times, you will have an automatic lockout for 20 seconds before you can try your code again.</div><div>If the incorrect security code is entered 3 additional times, there will be a 5-minute lockout before the code can be tried again.</div><div>Back up key</div><div><div><div>1. Remove the cover by turning it counterclockwise as shown in the illustration. The lock can hang by the connecting cable while unlocking the safe.</div><div>2. Insert the key in the key hole and turn counterclockwise 1/4 turn (until stopped) in order to unlock the safe. Rotate the handle and open the door.</div><div>3. Keep the door open until you have entered a new security code. Before entering your new code, remove the key and screw the cover back in place.</div><div>4. Enter your new security code by following the instructions.</div></div></div><div><div>Turning the keypad sound off/on with Mute-U™ system</div><div>You can mute the keypad by entering the code "633".</div><div>To turn it back on, enter code "66".</div></div><div><div><div></div></div></div><div>4</div></div></div></td>	<div><div>BATTERY INSTALLATION AND REPLACEMENT</div><div><div><div>1. Turn the lock cover as illustrated below.</div><div>2. Hold the battery connecting cap and attach the 9V alkaline battery.</div><div>3. Then, screw the cover back into place.</div></div><div>Repeat the steps above for battery replacement.</div></div><div><div>NOTE:</div><div><div><div>1. When changing the battery, always hold the battery connecting cap while disconnecting or attaching the battery. Do not pull on wires. Doing this could cause the power supply to become disconnected from the lock.</div><div>2. When the battery runs out, the red light will flash when you press any button on the keypad. Replace the batteries when the red light flashes.</div></div></div></div><div><div><div><div></div><div>E-LOCK</div></div></div></div><div>2</div></div>	<div><div>OPENING THE SAFE</div><div><div><div>After installing the battery, open the safe by entering the preset code: 1 - 5 - 9 - #.</div><div>NOTE: You should change the entry code as soon as possible after opening the safe to insure proper security.</div><div>After you have entered the Preset code, you will need to turn the handle clockwise to open the door. You will have 5 seconds to turn the handle before the locking mechanism is reactivated.</div></div></div><div><div>SETTING THE PASSCODE & PASSCODE RESET</div><div><div><div>To enter your own security code you will need to follow the steps listed below:</div><div><div><div>1. After opening the electronic safe (with the preset code of 1,5,9,#) locate the small red button on the inside of the door (near the hinge).</div><div>2. Press and hold the red button for a few seconds, then release. You will hear two beeps, then the yellow light on the panel will activate, allowing you to enter your code for a period of time. You can only enter your personal code while the yellow light is on.</div></div></div><div>With the door open and the yellow light on, enter your own personal security code, which can be 3-8 digits long. Confirm your new code by pressing the "*" symbol on the touch pad. Before closing the door, try the new security code to ensure the code was entered properly and you can unlock the door.</div></div></div><div><div><div><div></div><div></div></div></div></div><div>3</div></div></div>	<div><div><div>DO NOT SHUT THE DOOR UNTIL YOU HAVE CONFIRMED THAT YOUR NEW SECURITY CODE HAS BEEN ENTERED CORRECTLY .</div><div>If the code fails, go through steps 1 and 2 again.</div><div>If you write down your combination, keep it in a secure place, away from children. Do not keep your combination inside the safe.</div><div>If the incorrect security code is entered 3 times, you will have an automatic lockout for 20 seconds before you can try your code again.</div><div>If the incorrect security code is entered 3 additional times, there will be a 5-minute lockout before the code can be tried again.</div><div>Back up key</div><div><div><div>1. Remove the cover by turning it counterclockwise as shown in the illustration. The lock can hang by the connecting cable while unlocking the safe.</div><div>2. Insert the key in the key hole and turn counterclockwise 1/4 turn (until stopped) in order to unlock the safe. Rotate the handle and open the door.</div><div>3. Keep the door open until you have entered a new security code. Before entering your new code, remove the key and screw the cover back in place.</div><div>4. Enter your new security code by following the instructions.</div></div></div><div><div>Turning the keypad sound off/on with Mute-U™ system</div><div>You can mute the keypad by entering the code "633".</div><div>To turn it back on, enter code "66".</div></div><div><div><div></div></div></div><div>4</div></div></div>
--	---	--	--

封面

P1

P2

P3

<div><div>LOCKING THE SAFE</div><div><div>Close the door and turn the handle to the lock position.</div><div>WARNING: Do not leave safe unattended while open, and keep children away from safe.</div></div></div> <div><div>SECURING THE SAFE</div><div><div>This safe must be mounted to the floor. Failure to do so will compromise the safety, security and warranty of the safe. Place your safe in a cool and dry location.</div></div></div> <div><div>TOOLS REQUIRED</div><div><div><div>Drill</div><div>Pencil</div><div>Hammer</div></div><div><div></div></div></div><div><div>As all installation may vary, please contact your local Hardware Professional for additional installation recommendations.</div></div><div>5</div></div>			
--	--	--	--

P4

P5

P6

封底