








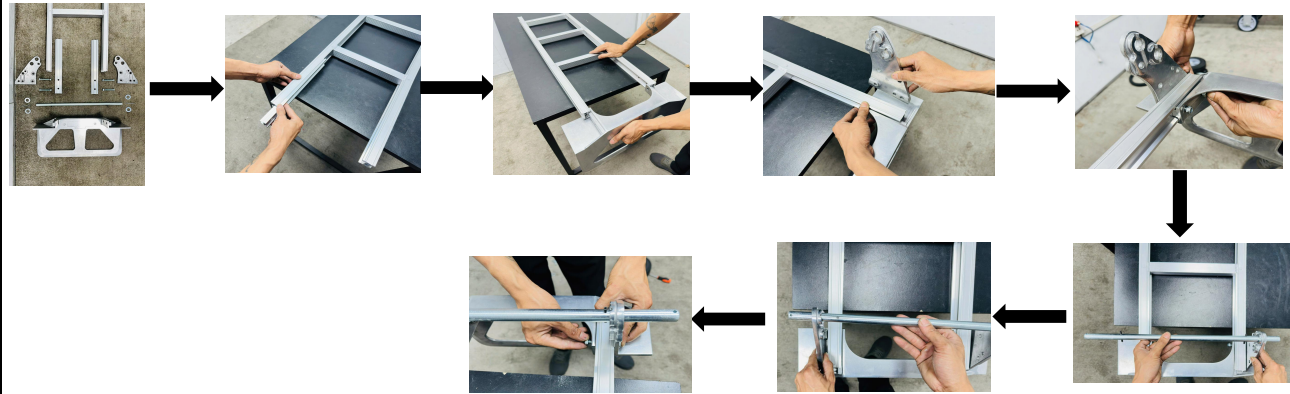
| Part List | | | |
|-----------|---|-----------------|----------|
| Part# | Picture | Description | Quantity |
| A |  | Frame | 1 |
| B |  | Curved Handle | 1 |
| C |  | Toe Plate | 1 |
| D |  | Wheel Carrier | 2 |
| E |  | Axle | 1 |
| F |  | Strengthen Part | 2 |
| G |  | 10inch Wheel | 2 |

| Hardware List | | | |
|---------------|--|-------------------------|----------|
| Part# | Picture | Description | Quantity |
| 1 |  | Plastic Covers | 2 |
| 2 |  | M8 Nuts | 8 |
| 3 |  | M8*55mm Bolt | 4 |
| 4 |  | M8*40mm Hex Socket Bolt | 4 |
| 5 |  | Cotter Pin | 2 |
| 6 |  | Washer | 4 |

Assembly Instructions

Assembly the Axle, Toe Plate and Strengthen Part

- 1.Put the Strengthen Part(part F) into the bottom of Frame(part A).
- 2.Insert Toe Plate(part C) into the between Strengthen Part(part F).
- 3.Firstly assembly one side Wheel carrier(part D) and be fixed by Bolt(part 3)and Nuts(part 2), then insert the Axle(part E) into the Wheel carrier(part D), the last repeat the same operation to assembly anoter side Wheel carrier(part D).



Assembly the Wheel

1. Firstly put the Washer(Part 4) into the both of side of the Axle(Part E)
2. Insert the 10inch wheel(part G) into the Axle(part E),then be fixed by Washer(part 6) and Cotter pin(part 5). and repeat the same operation to assembly anoter side PU wheel(part G).



Assembly the Curved handle

1. Insert the Curved handle(part B) into the Frame(part A)
2. Insert the Plastic Covers(part 1) into the Frame(part A),then be fixed by Hex Socket Bolt(part4) and nuts(part 2)

