

NORTHSKY

60"PALLET FORK WITH UPRIGHTS AND LINKAGES

M1-1202

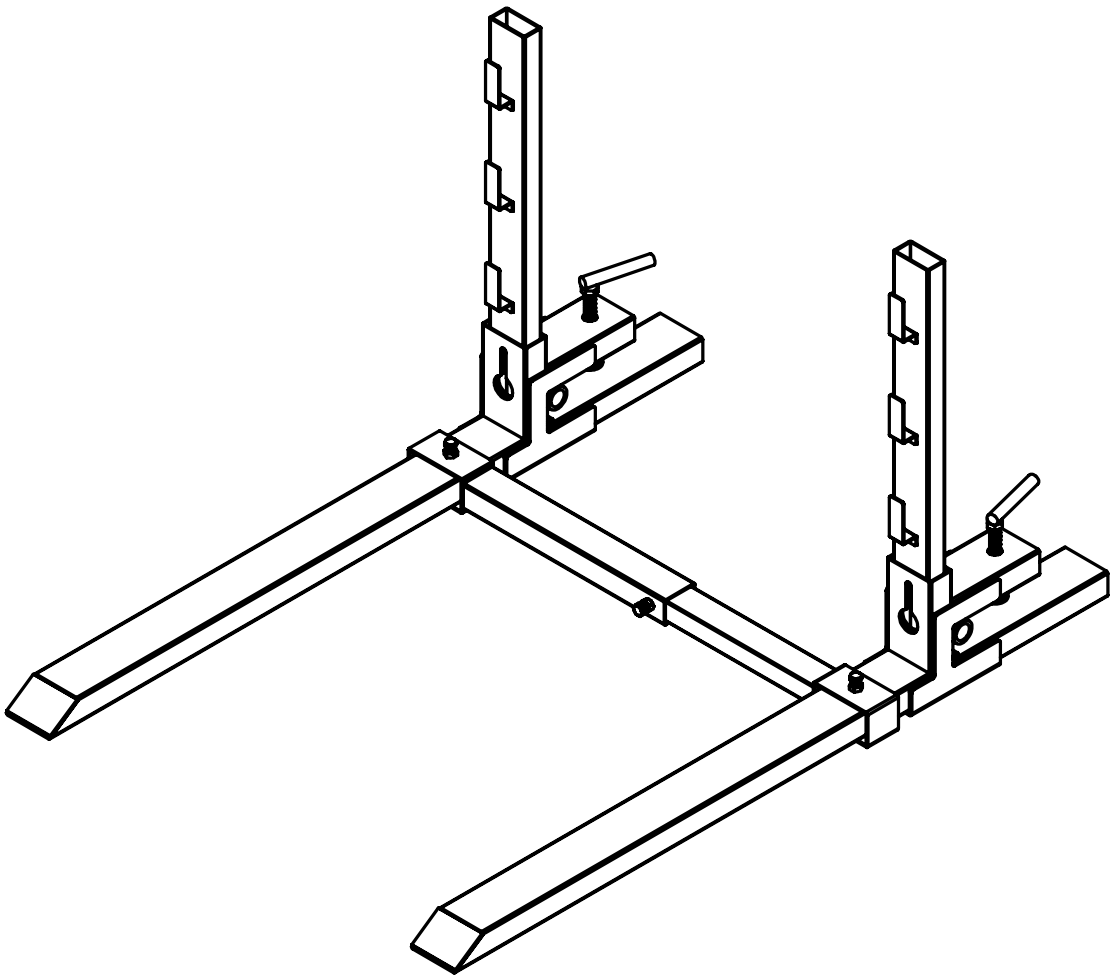

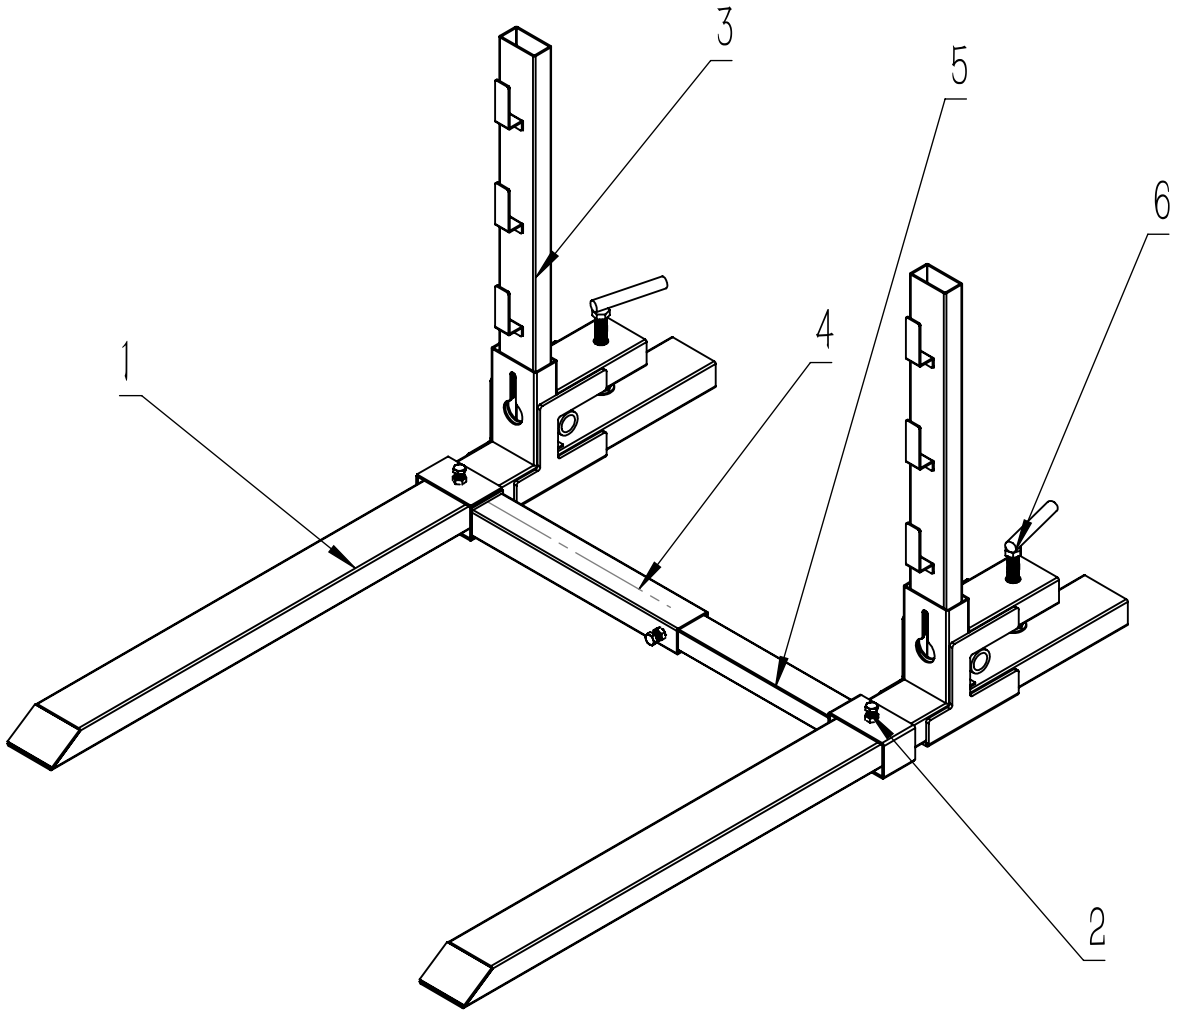

Part#	Description	QTY
①	Fork arm	2
②	M16*40 Screw	3
③	Extension bar	2
④	Link rod 1	1
⑤	Link rod 2	1
⑥	Lead screw	2

- INSTALLATION
  1. Slide the fork into the edge of the bucket.
  2. Twist the lead screw and clamp it down to lock.
  3. Assemble the two parts of the link rods , and then put it on the forks, tighten the bolts.
  4. According to the actual conditions, the iron chain can be passed through the two holes to strengthen the fixation and to increase the bearing capacity.
  5. Insert the extension rod between the fork arms.