

尺寸 : 14X21CM

NORTHSKY

ASSEMBLY INSTRUCTIONS

PP RESIN OUTDOOR STORAGE SHED

M2-1040 (M2-1040-A & M2-1040-B)

M2-1041 (M2-1041-A & M2-1041-B)



E-mail:

support@northskysupply.com




Please read the instruction manual strictly,
Please assemble the resin garden shed in
the following steps.

SITE PREPARATION

Level the ground surface.



Use a flat concrete base as the foundation. Have a spirit level ready.

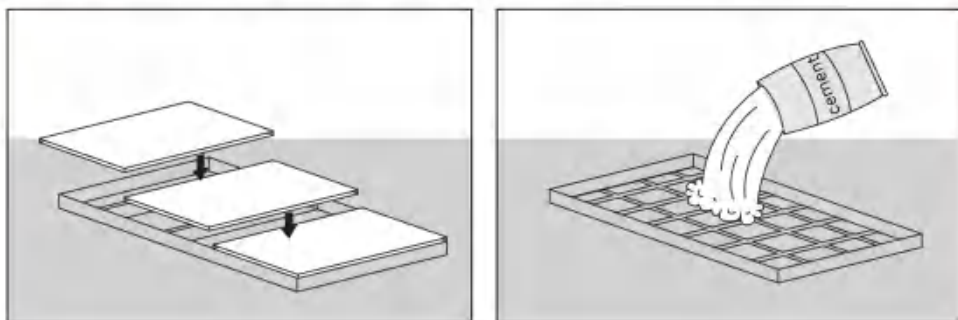

BEFORE STARTING ASSEMBLY


Remove all of the pieces from the 2 packages and spread them out on the ground. Before installation, please check the type and quantity of parts first.

It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.

Be sure to follow all steps thoroughly.

Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS

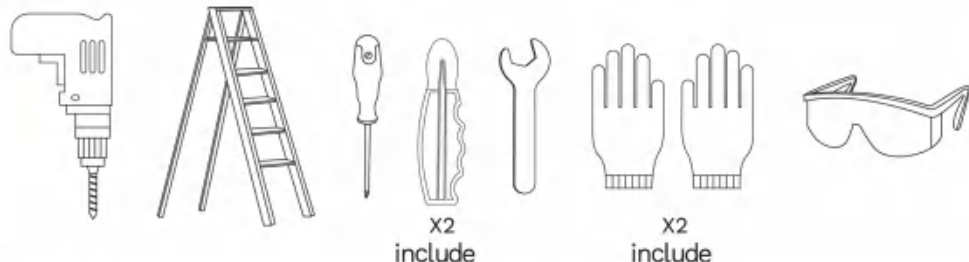

CAUTION

Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.



Requires two people and takes 1-2 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.


DO NOT RETURN YOUR UNIT
TO THE STORE
Contact us first
support@northskysupply.com.




SCAN ME

For inquiries and after-sales service
please scan the QR code or email
support@northsky.com.



FLOOR PARTS

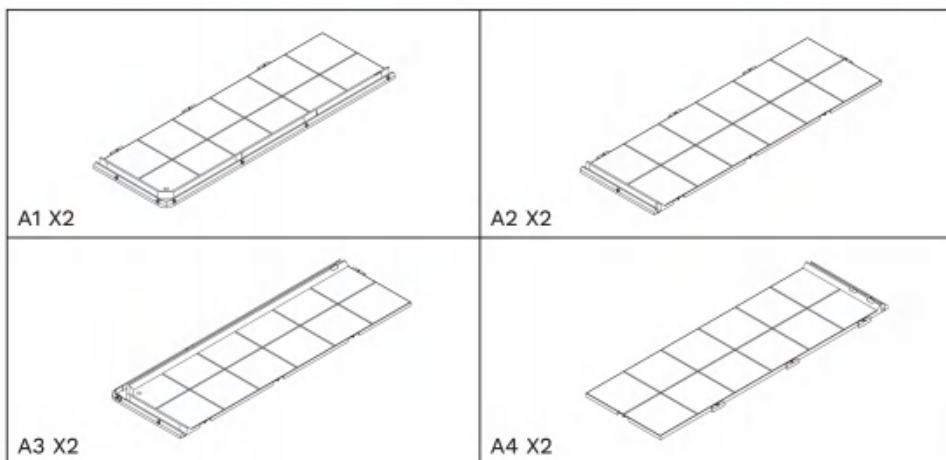


WALL PARTS

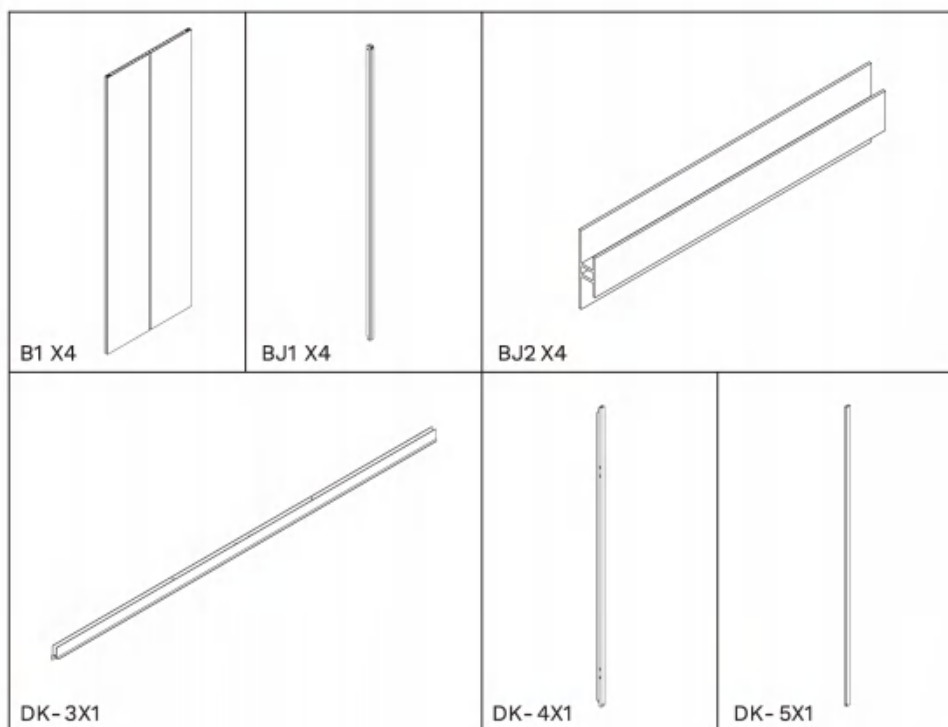


WALL PARTS

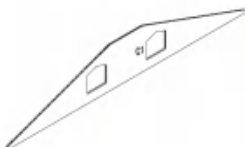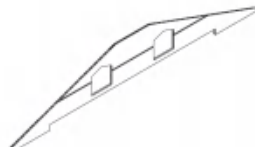		
B1-1 X3	B1-2 X1	4-B2 X10
		
4-B3 X2	B5 X6	
		
C1 X1	C2 X1	
		
C4 X4		

ROOF PARTS

 4-E1 4-E1 X6	 4-E2 X1
 4-E4 X2	 4-F4 X1
 E3 X4	 F1 X2
 F2 X1	 F3 X1

DOOR PARTS

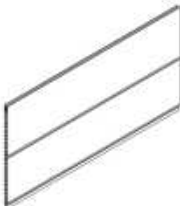			
D1 X10	DB-1 X4	DB-8 X2	DB-11 X1
			
DB-12 X1	DB-13 X1	DB-14 X1	W1 X2


ACCESSORIES

			
C3 X2	D1-1 X1	D1-2 X1	D1-3 X1
			
E5 X4	E6 X2	E7 X4	E8 X2
			
DB15 X4	DB-6 X1	DB-7 X1	

SCREW


 10+2 pcs   S1 M5*25	 122+10 pcs   S2 M3.9*25
 4+1 pcs   S3 M5*45	 146+10 pcs   S4 M4*10
 8+1 pcs   S5 M4*10	 16+2 pcs   S6 M4*30
 8+1 pcs M4	 4+1 pcs M5

CONTENTS

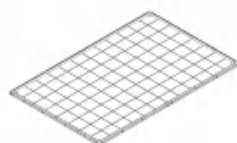

Floor Part Instruction

11 - 15
(page)

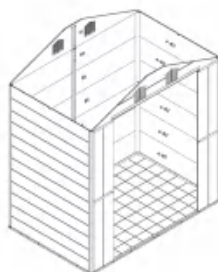

Wall Part Instruction

16 - 34
(page)



Roof Part Instruction


34 - 43
(page)




Door Part Instruction

44 - 57
(page)


STEP 1

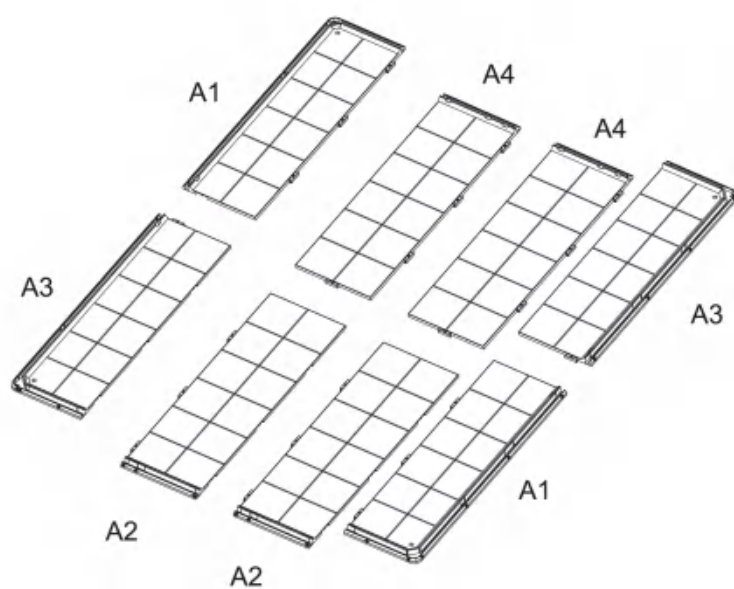


STEP 2

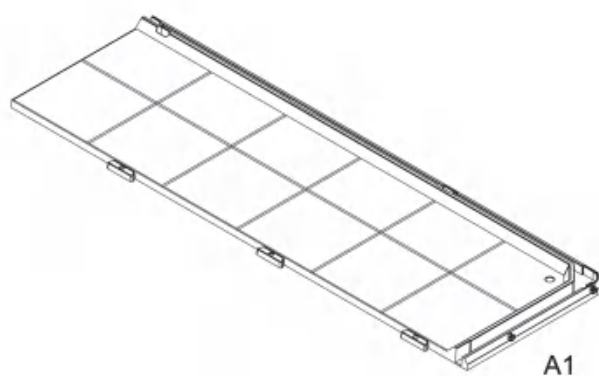


STEP 3

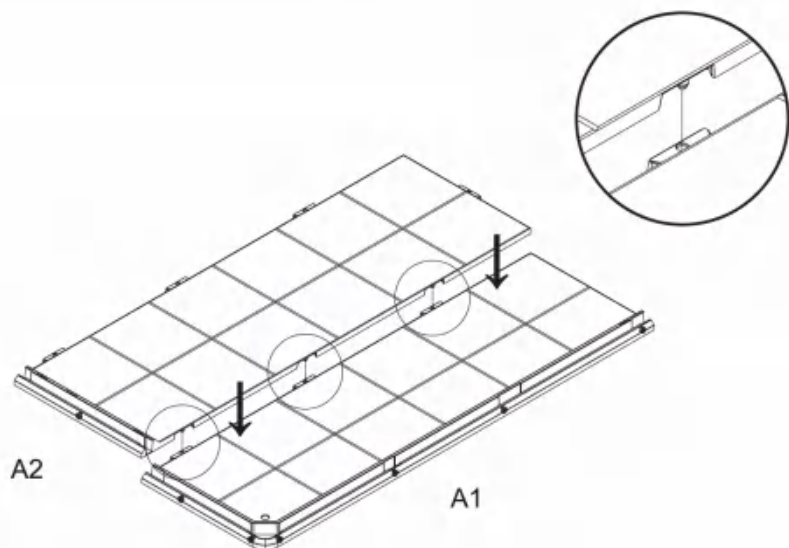


STEP 4

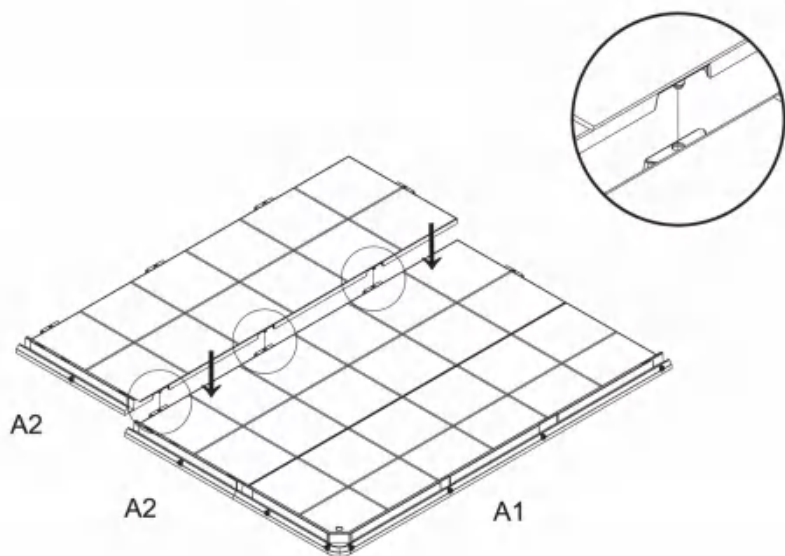


STEP 5

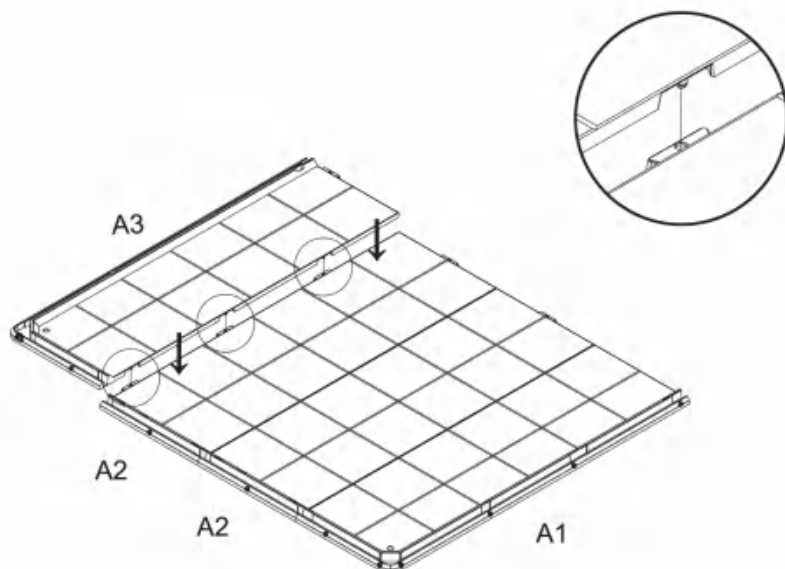


STEP 6

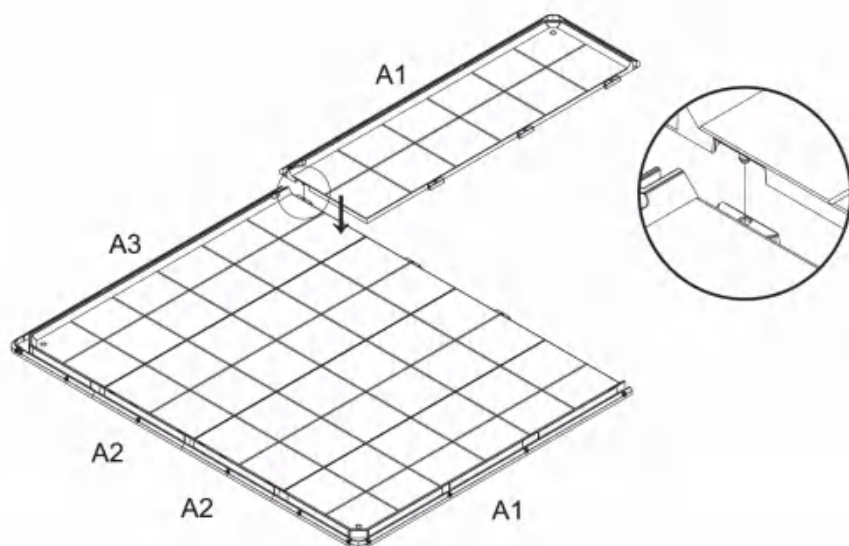


STEP 7

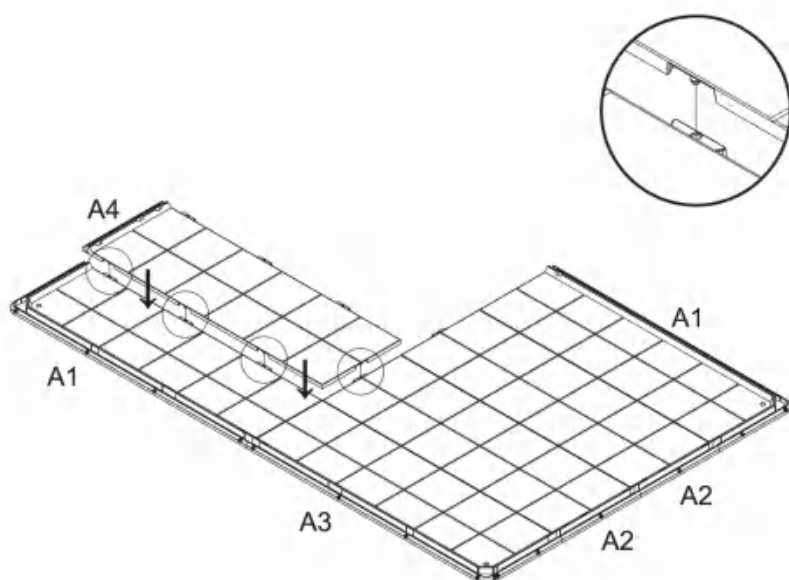


STEP 8

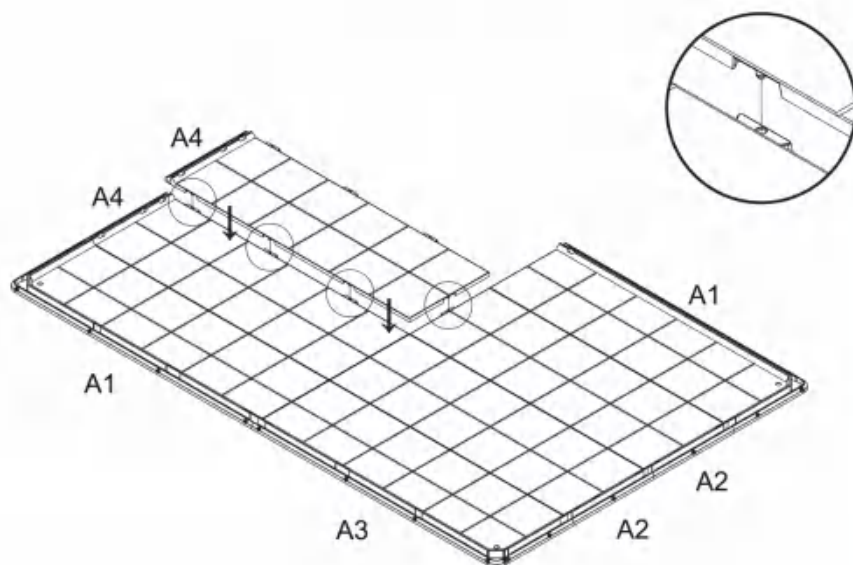

STEP 9

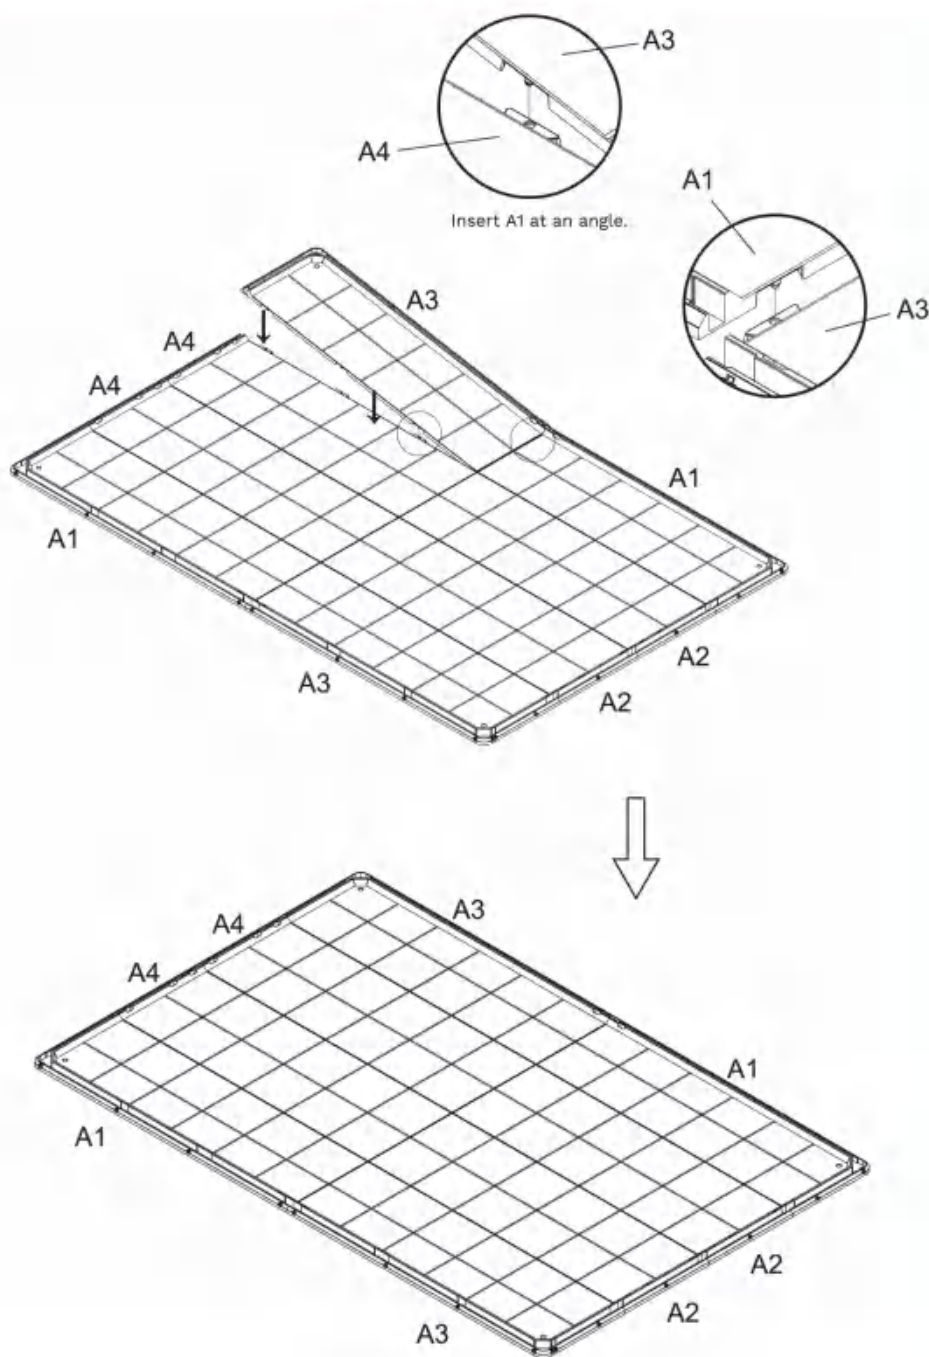


STEP 10

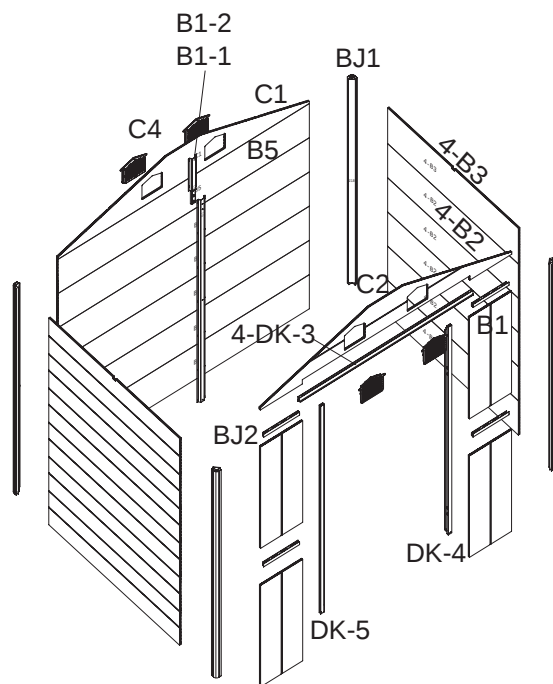


1. B1X4
2. 4-B2 X10
3. 4-B3 X2
4. B5 X6
5. C1 X1
6. C2 X1
7. C4 X4
8. BJ1 X4
9. BJ2 X4
10. B1-1 X1
11. B1-2 X1
12. 4-DK-3 X1
13. DK-4 X1
14. DK-5 X1

STEP 11

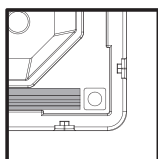

Put 4-B2, B5 into the floor corresponding grooves.

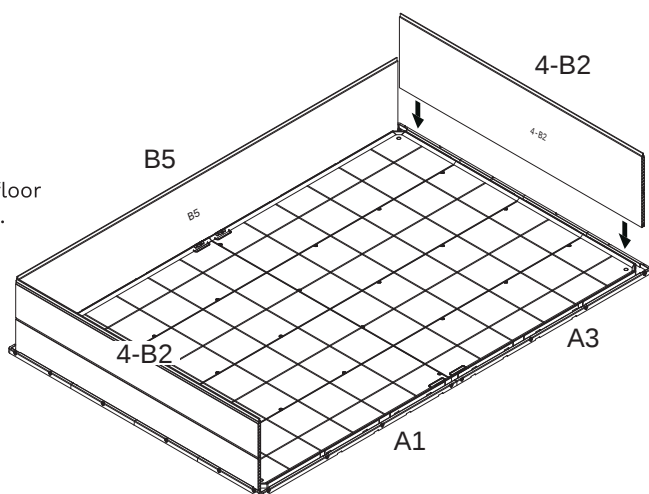


15


16

STEP 12



✓

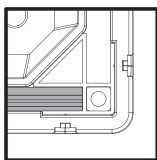

✗

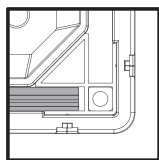


After placing BJT1, note the gap between BJT1 and 4-B2,B5.

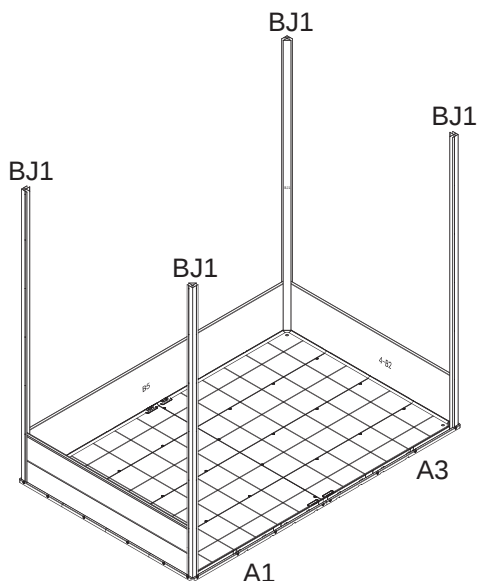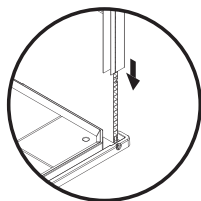


STEP 13



✓

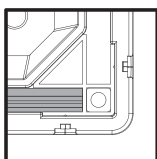

✗

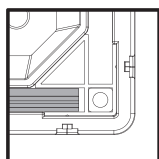


After confirming the gap between BJT1 and 4-B2,B5, then use S3 to connect and fix.

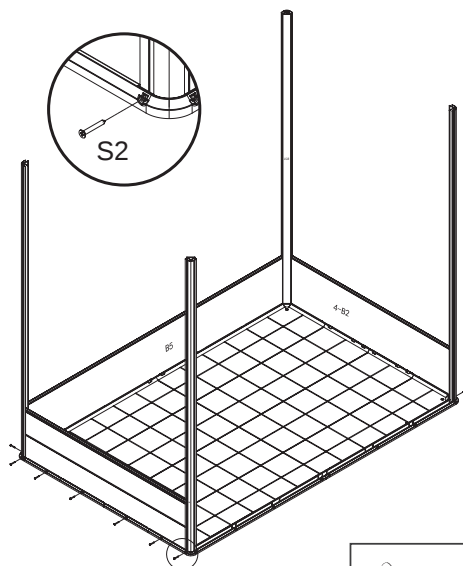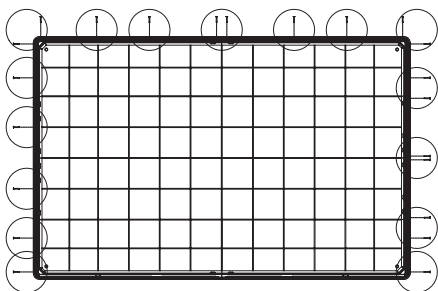


S2
24 pcs

STEP 14

✓

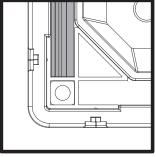


✗

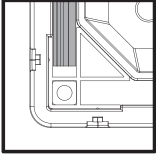


Confirm the gap between BJ1 and 4-B2.


✓

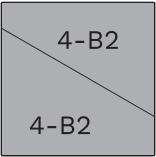




✗

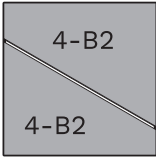

Check the gap between the inside of two plates 4-B2.

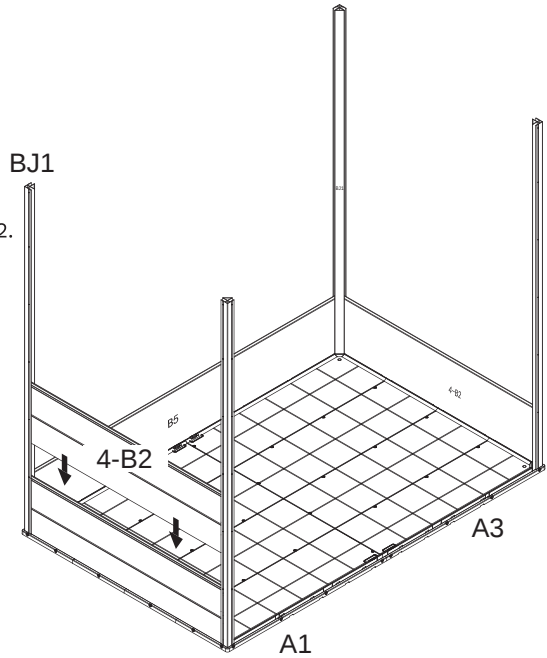


After confirming the gap of the above accessories, fix BJ1 and 4-B2 by hand, and then connect and fix with S2.

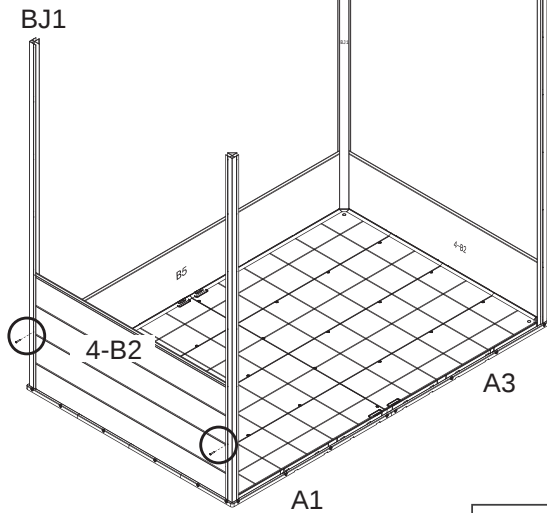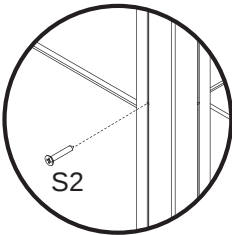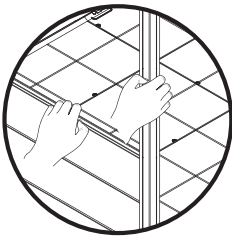



S2
2 pcs

STEP 15

For details, see STEP 14.

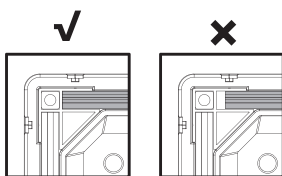


Confirm the gap between BJ1 and B5.

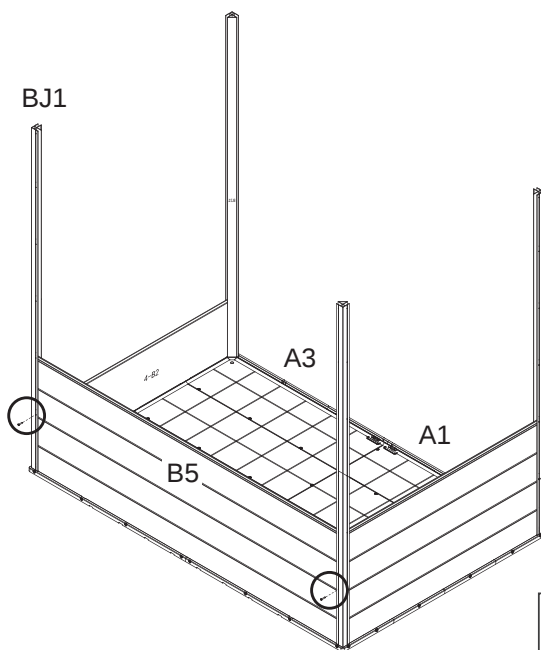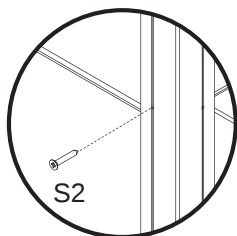



S2
2 pcs

STEP 16

For details, see STEP 14.

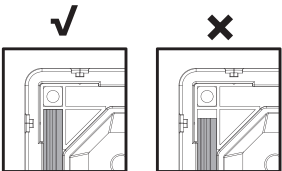



Confirm the gap between BJ1 and 4-B2.

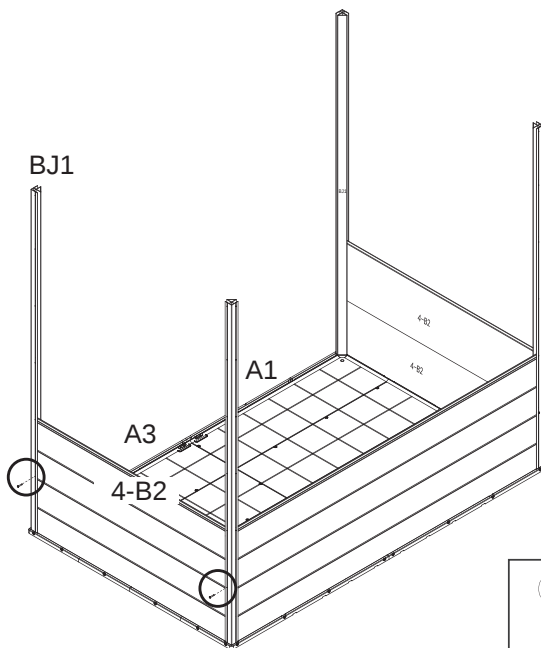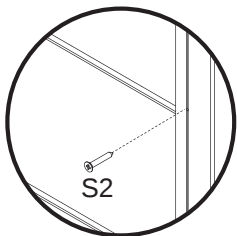



S2
2 pcs

STEP 17

For details, see STEP 14.

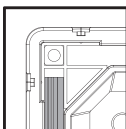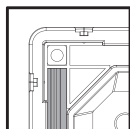



Confirm the gap between BJ1 and 4-B2.

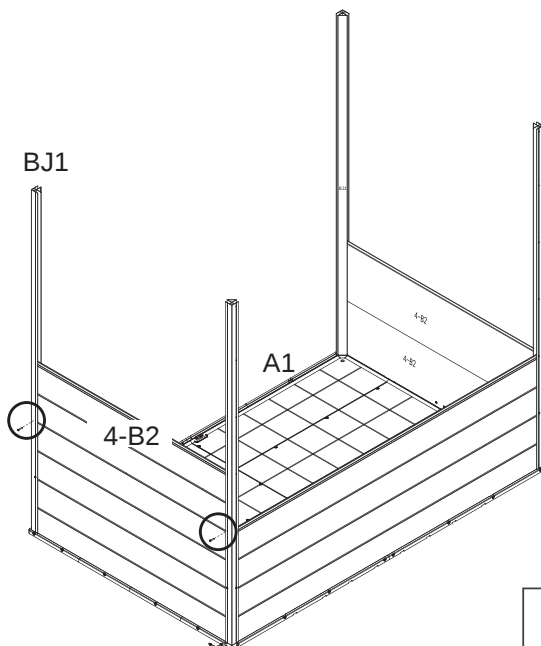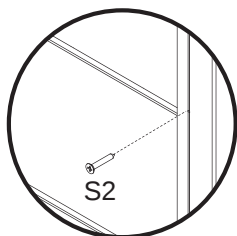



S2
2 pcs

STEP 18

For details, see STEP 14.

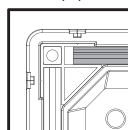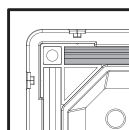


Confirm the gap between BJ1 and B5.

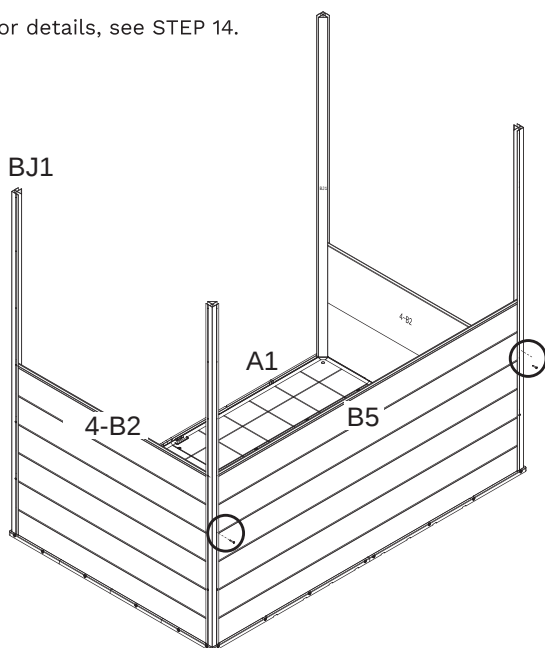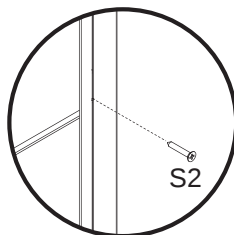



S2
2 pcs

STEP 19

For details, see STEP 14.

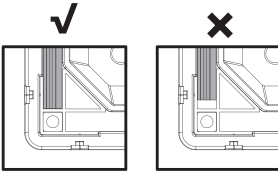


Confirm the gap between BJ1 and 4-B2.

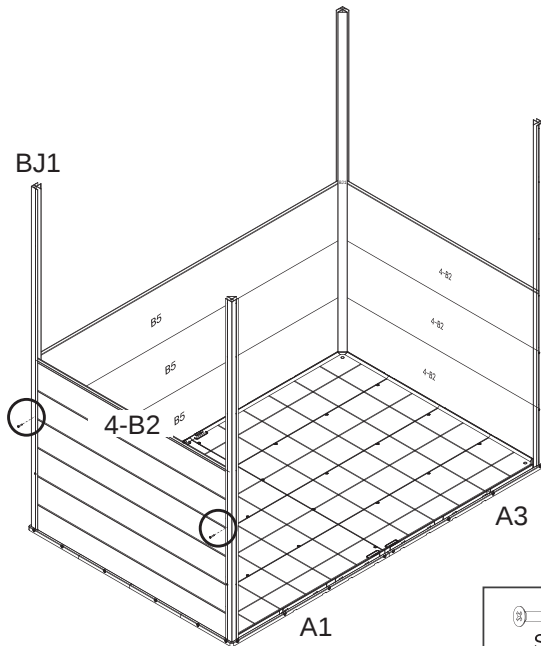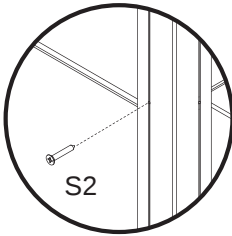



S2
2 pcs

STEP 20

For details, see STEP 14.

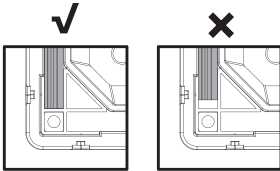


Confirm the gap between BJ1 and 4-B2.

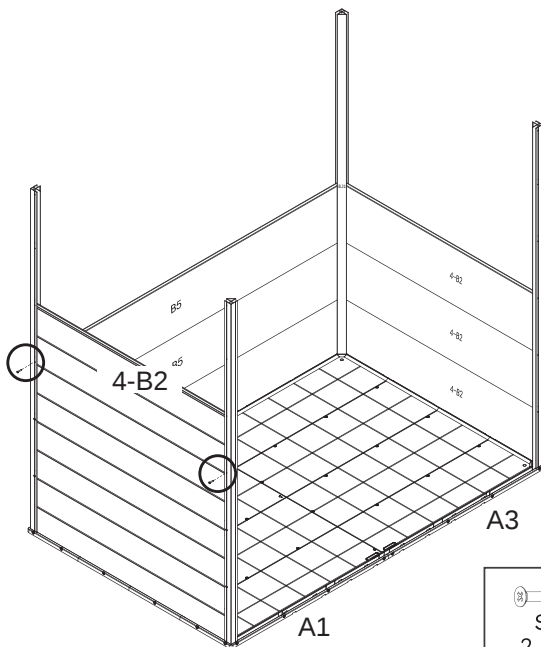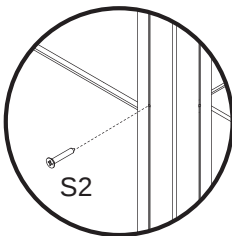


S2
2 pcs

STEP 21


For details, see STEP 14.

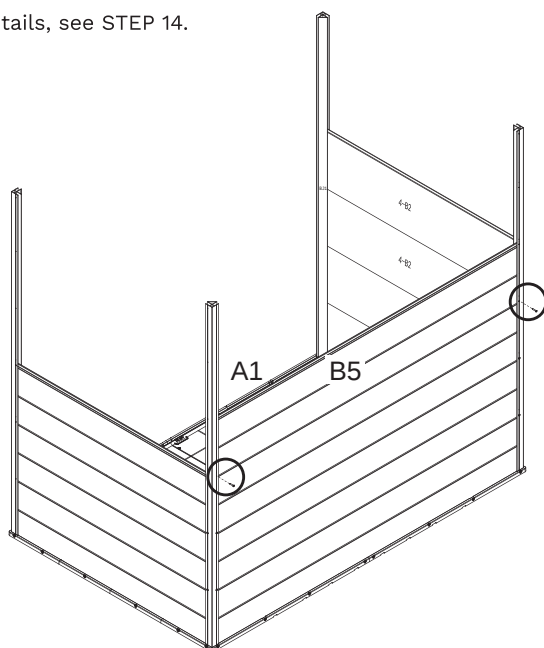


✓

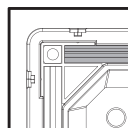

✗

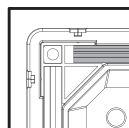

Confirm the gap between BJ1 and B5.

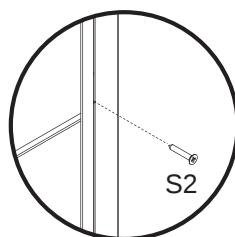


S2

S2
2 pcs


STEP 22

For details, see STEP 14.


✓

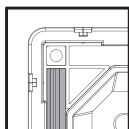


✗

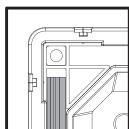

Confirm the gap between BJ1 and 4-B2.

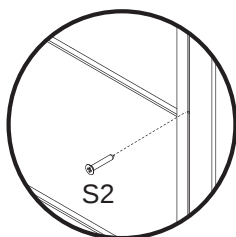

S2

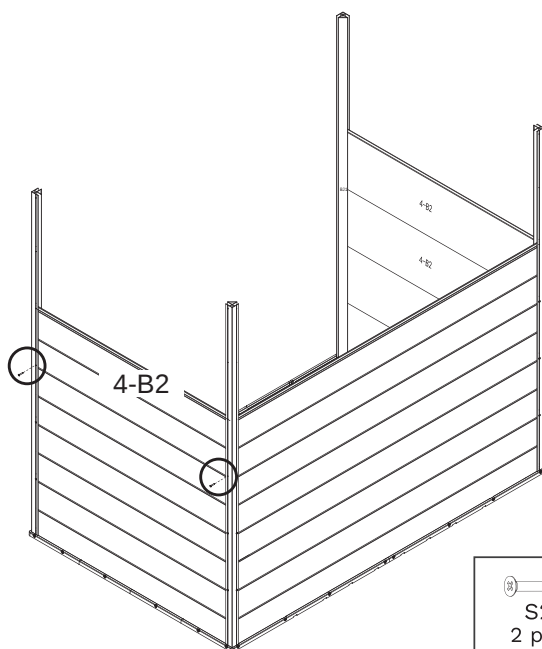


S2
2 pcs

22


STEP 23

For details, see STEP 14.



✓

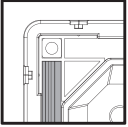

✗

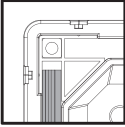

Confirm the gap between
B1 and 4-B2.

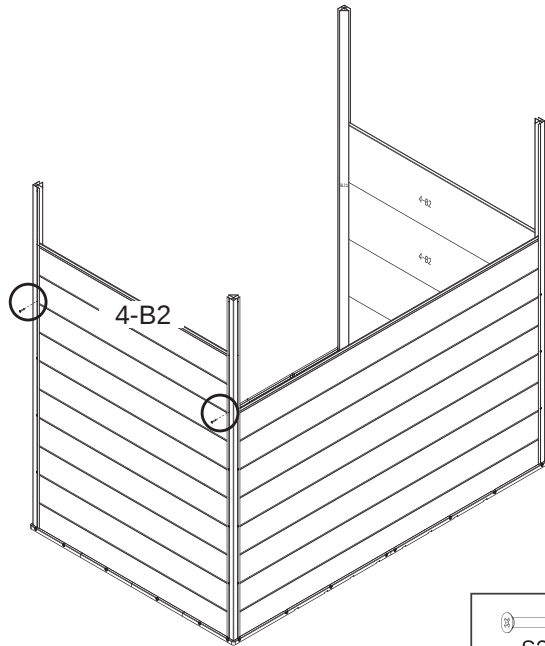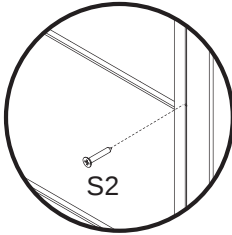


S2
2 pcs


STEP 24

For details, see STEP 14.




✓

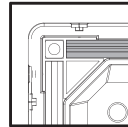

✗

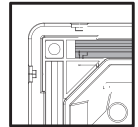


Confirm the gap between
B1 and B5.

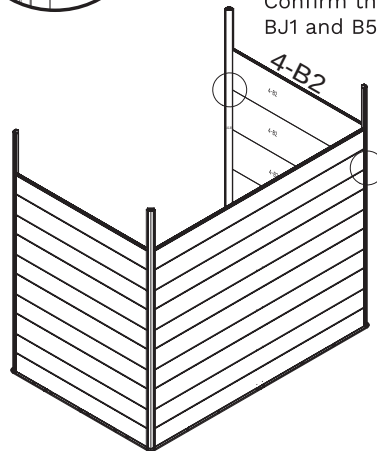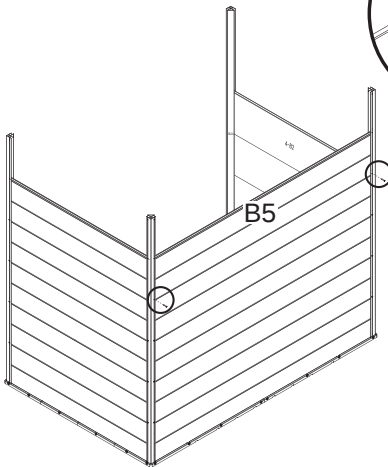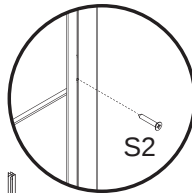


S2
4 pcs

STEP 25

For details, see STEP 14.




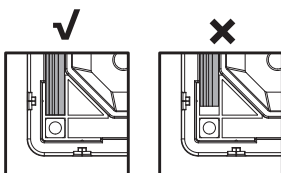


Confirm the gap between B5 and 4-B3.

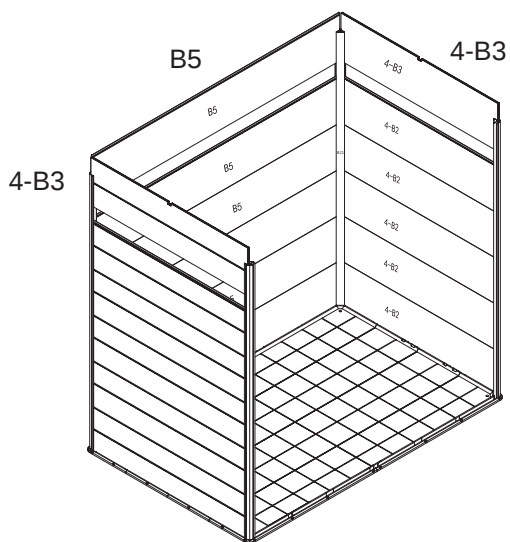




STEP 26

For details, see STEP 14.

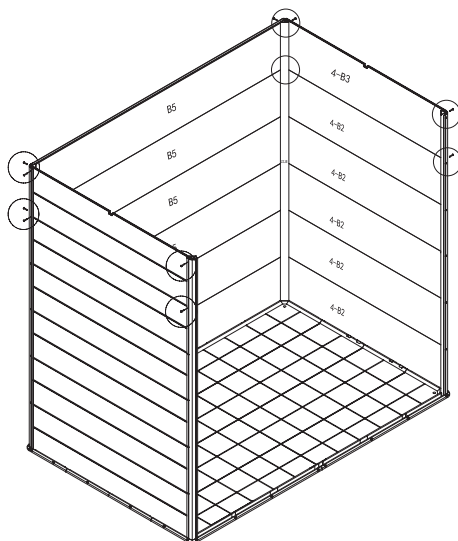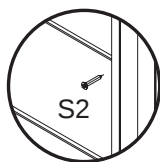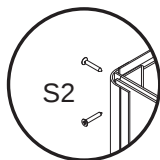


STEP 27

For details, see STEP 14.

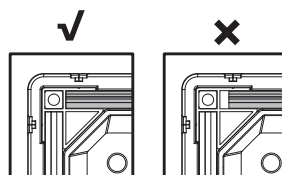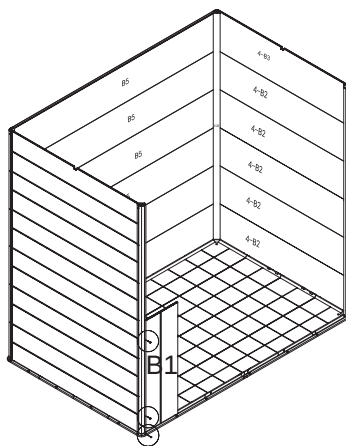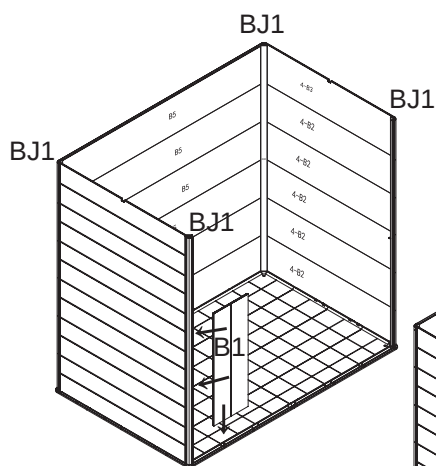


Confirm the gap between
BJ1 and B5.




STEP 28


For details, see STEP 14.

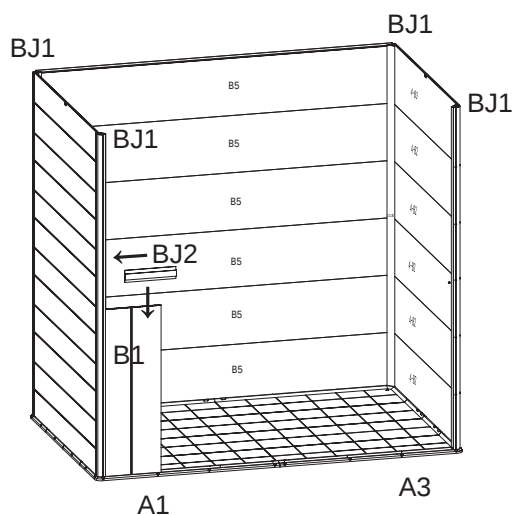



STEP 29

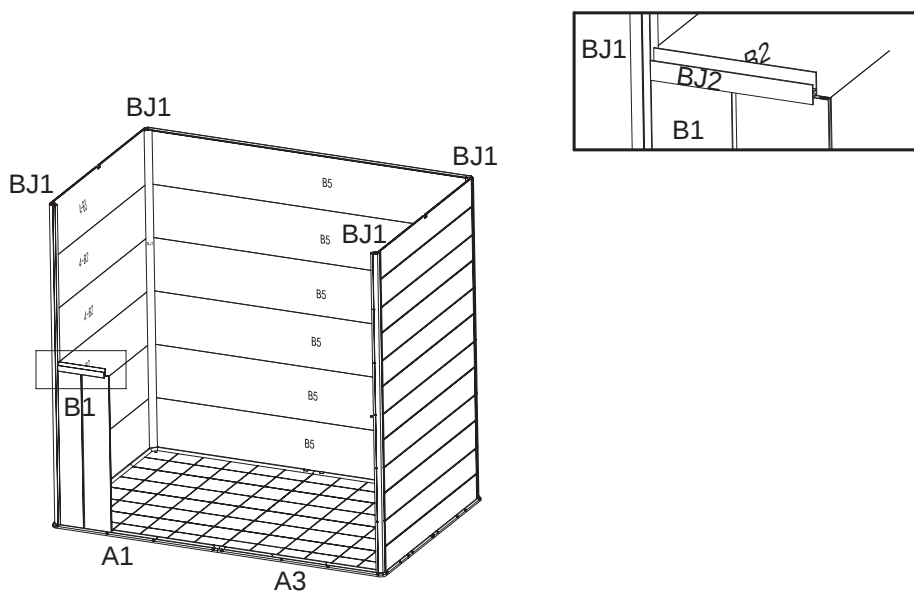

STEP 30


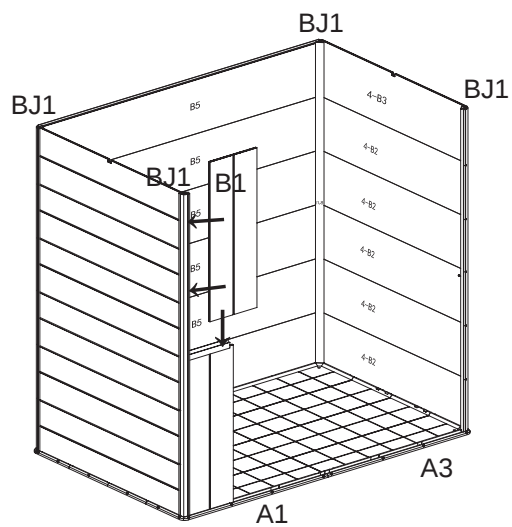


STEP 31

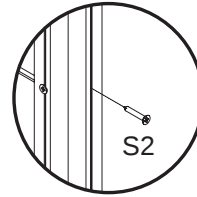
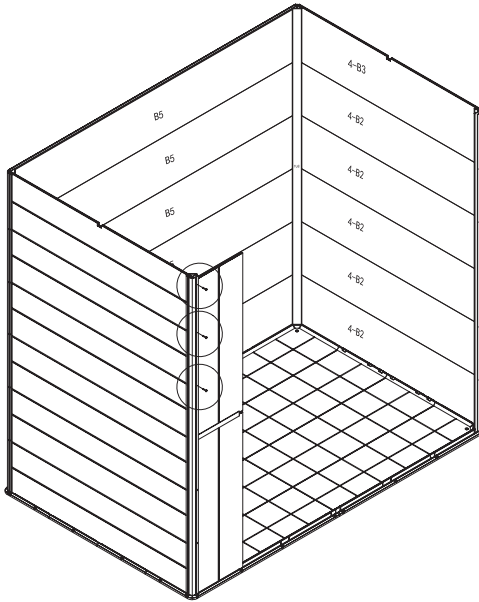



S2
3 pcs

STEP 32

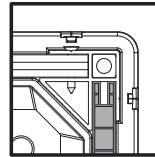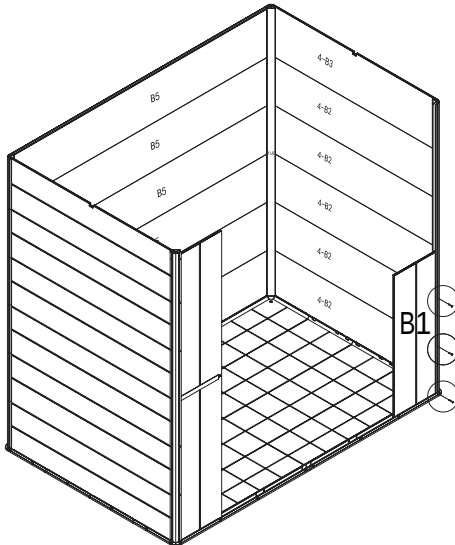


Confirm the gap between BJ1 and B1.

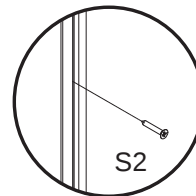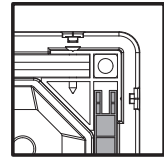



S2
3 pcs




STEP 33

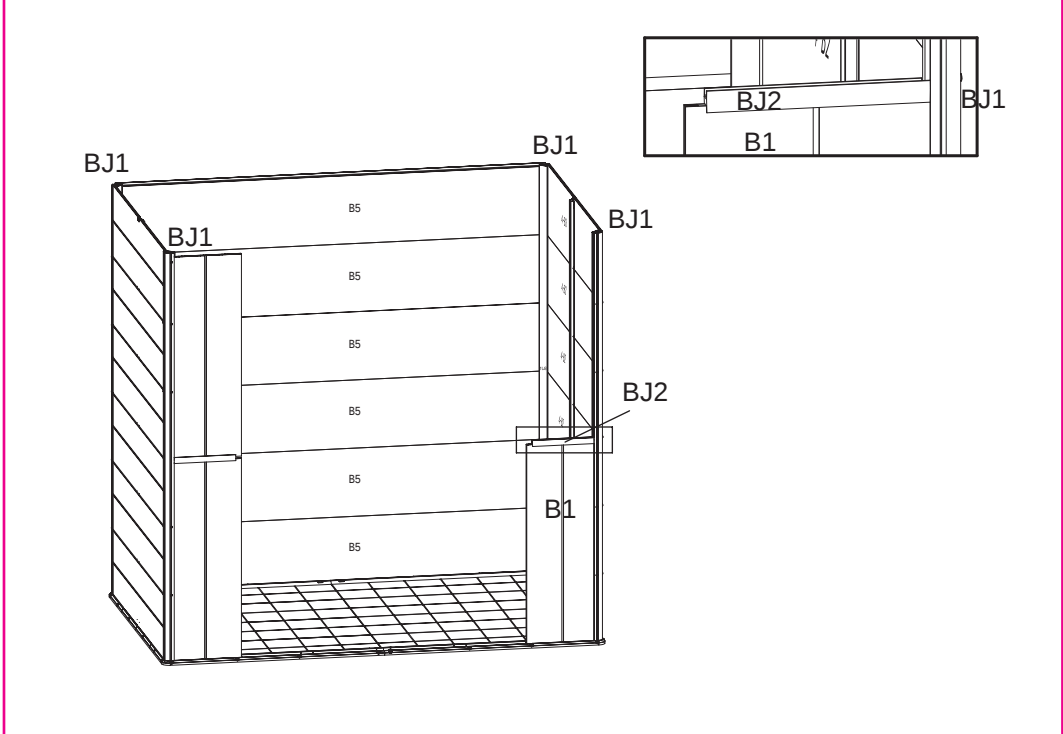


STEP 34

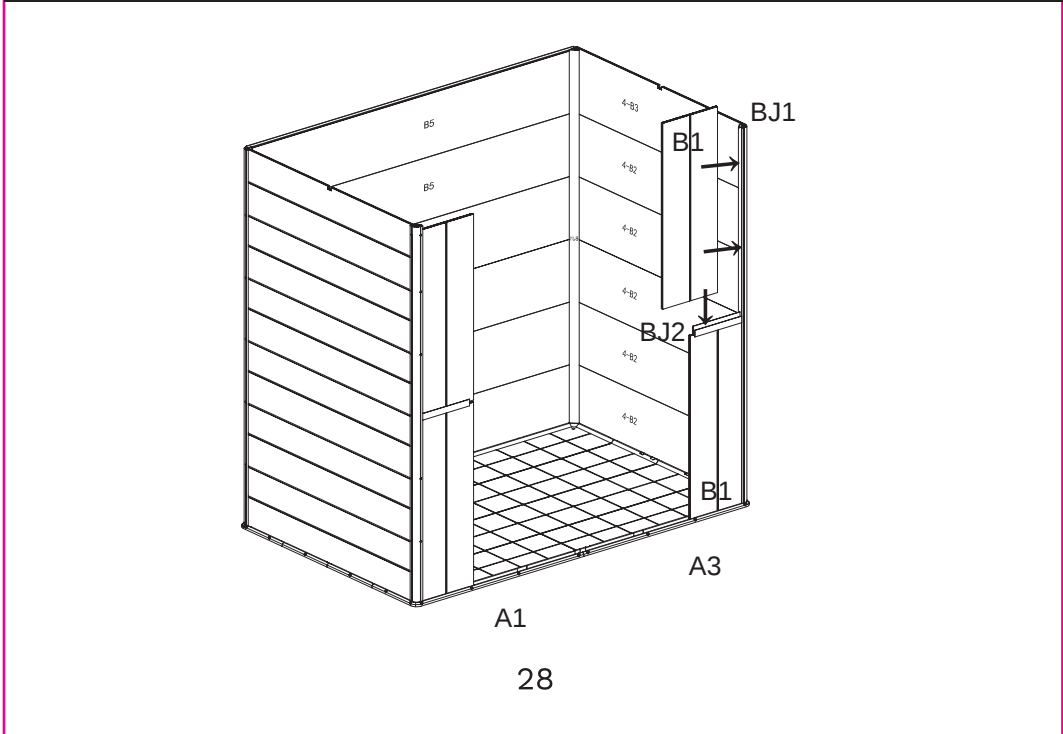


STEP 35

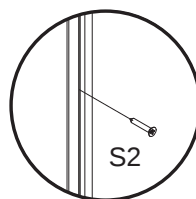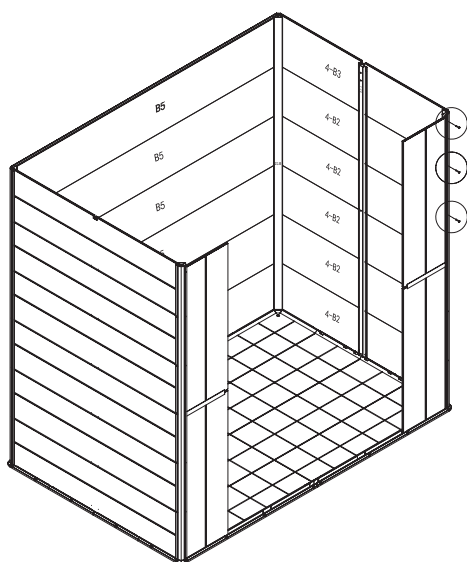


STEP 36

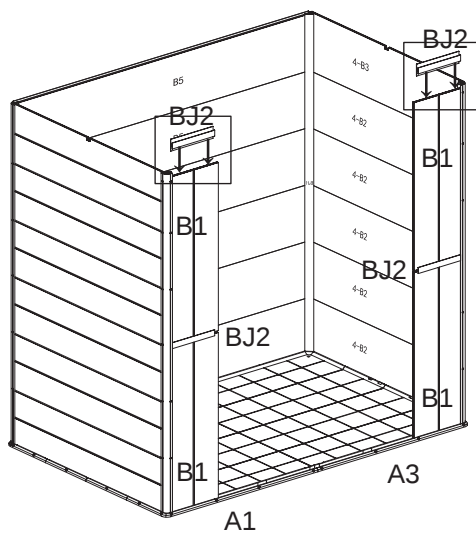


STEP 37

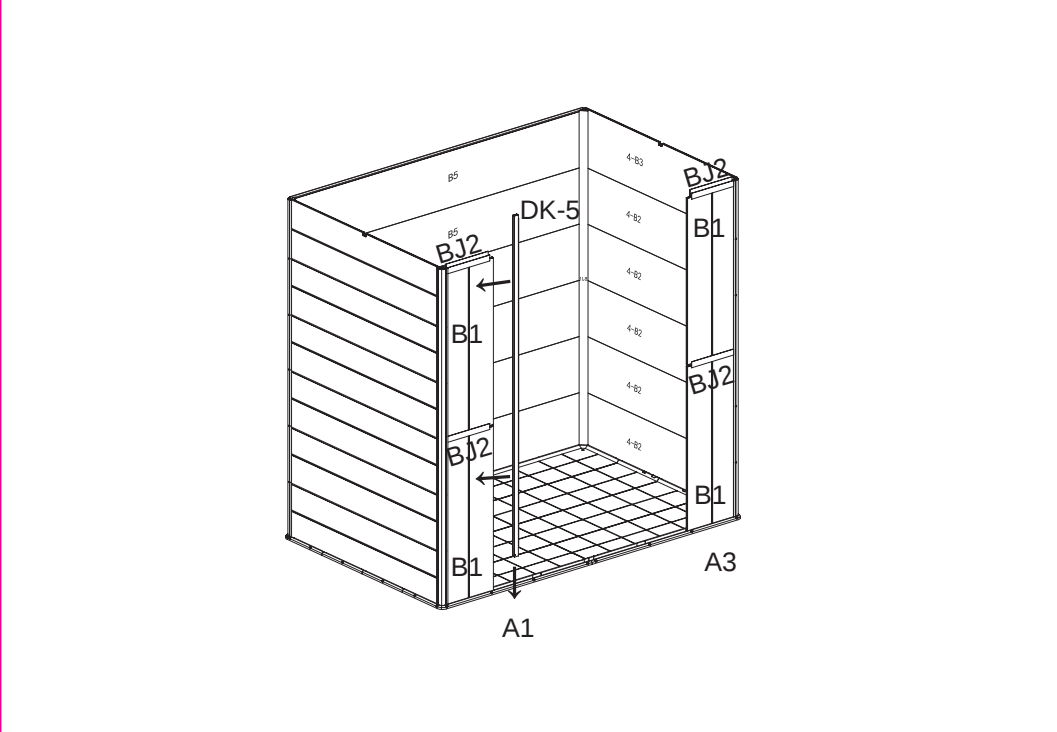


STEP 38

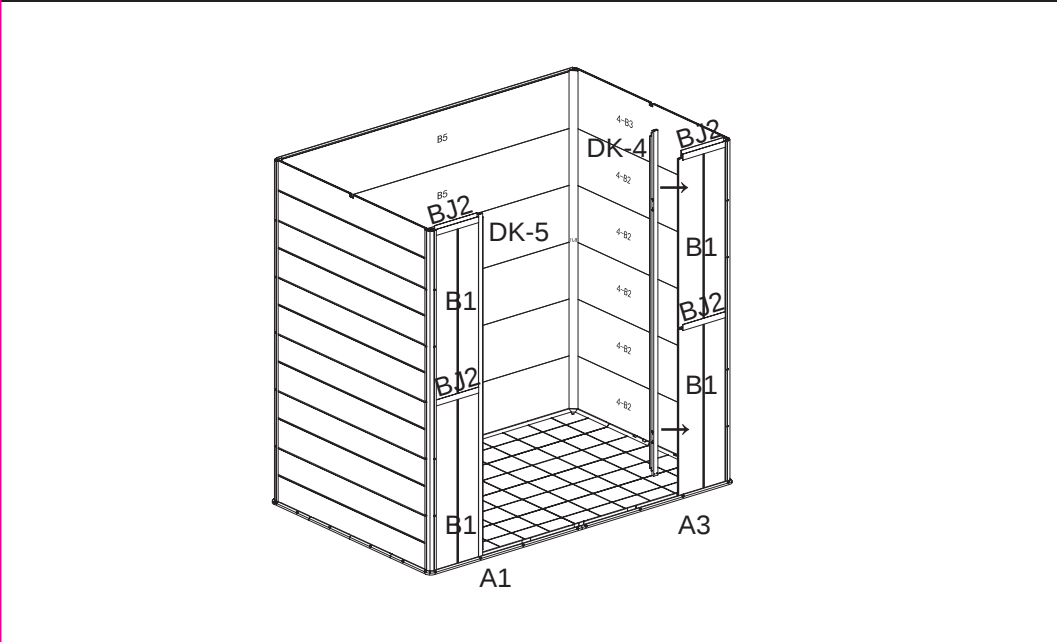



STEP 39

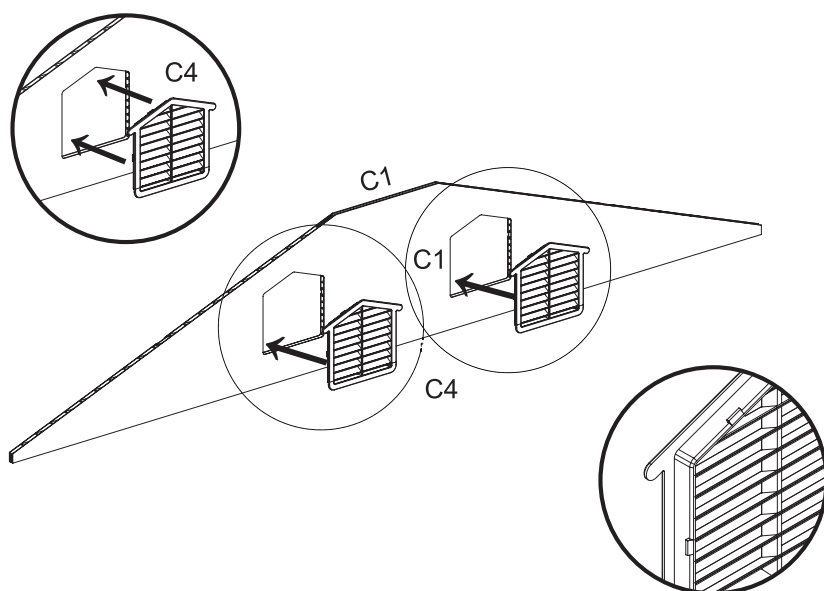


STEP 40

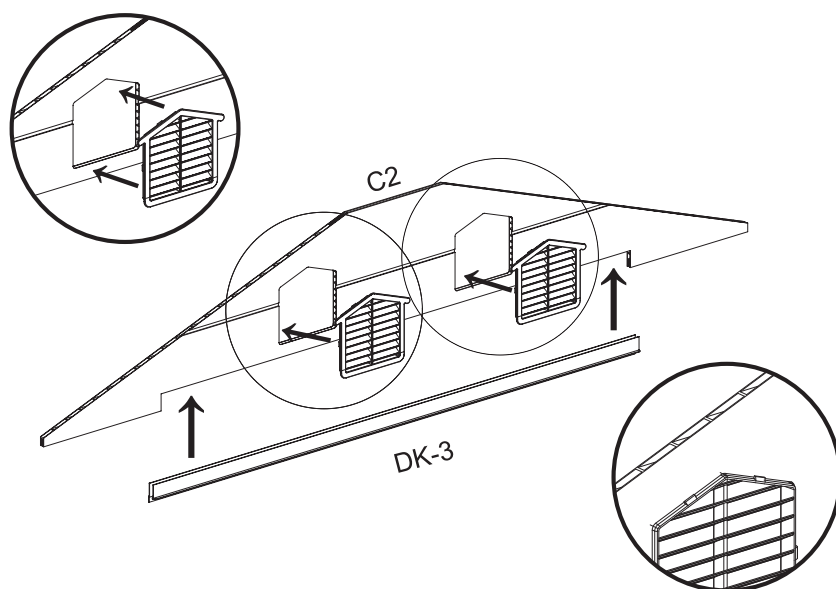

STEP 41


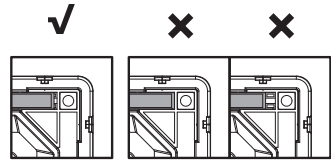
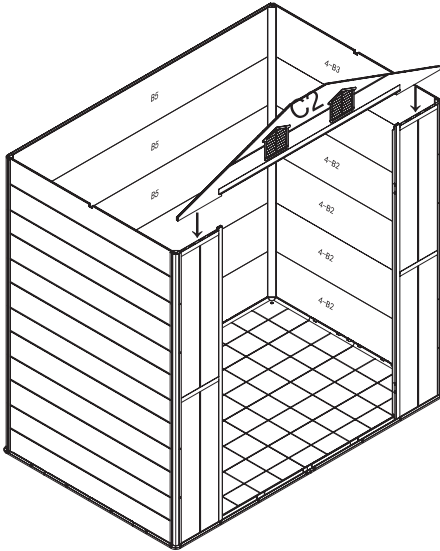


After confirming the correct position of C2 (refer to ✓ picture)

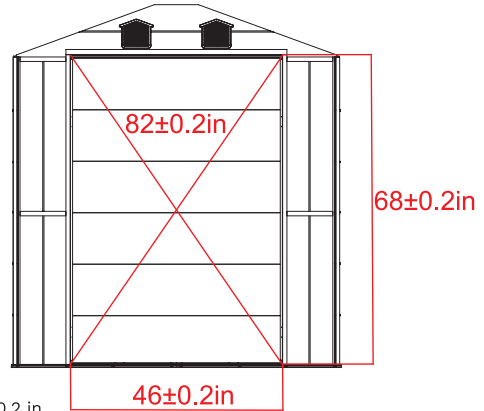


After installing C2, ensure the door frame height is 68 ± 0.2 in, width is 46 ± 0.2 in, and the diagonal measurement is 82 ± 0.2 in. Once the dimensions are correct, install the rear screws.

STEP 42

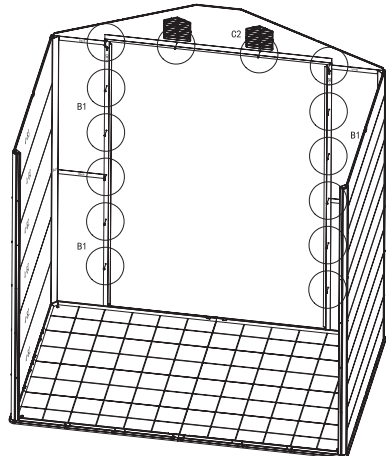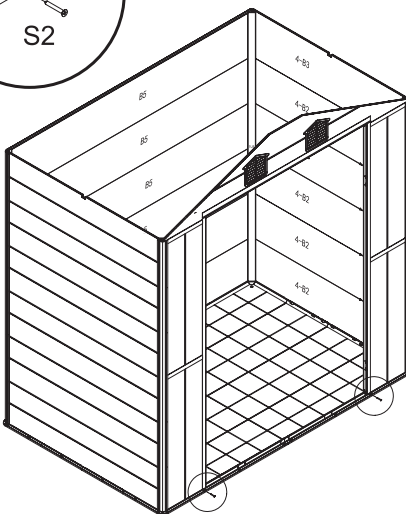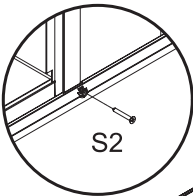




STEP 43

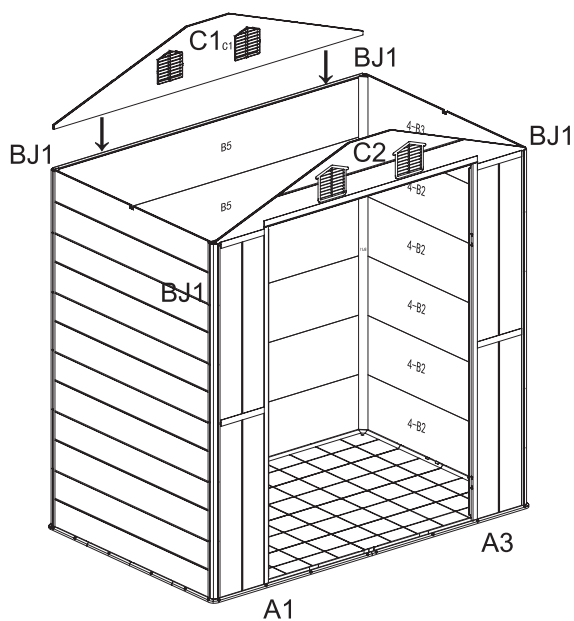

✓


✗

✗



After confirming the correct position of C1 (refer to ✓ picture), connect and fix with S4.

STEP 44



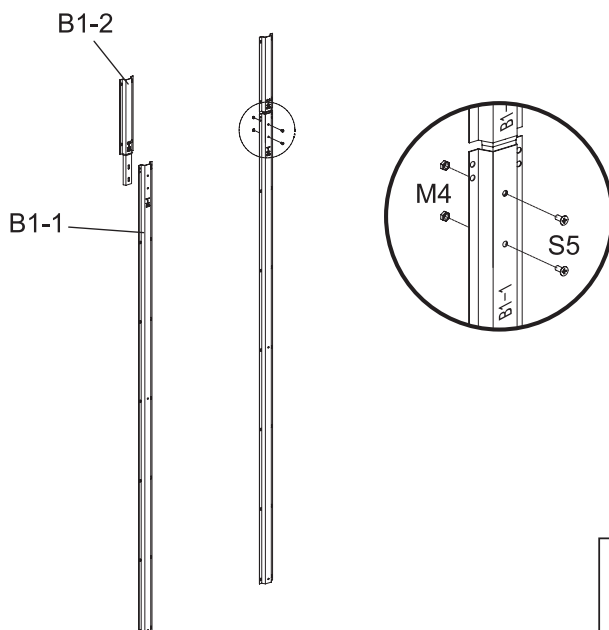


S5
2 pcs




M4
2 pcs

STEP 45

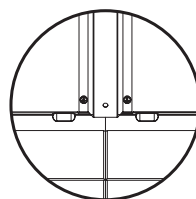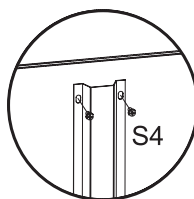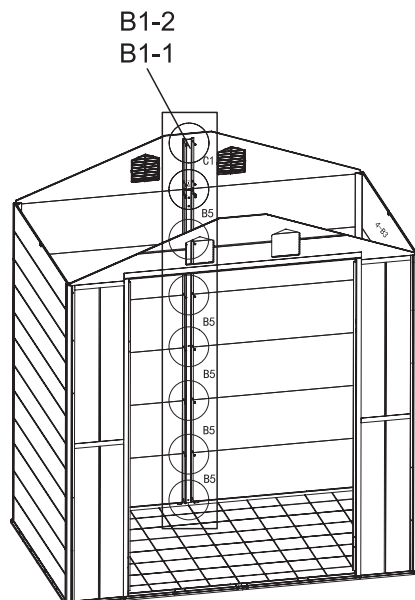


Align the B1-1 with the gap between the base plates.

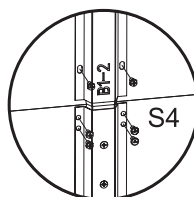

S4
20 pcs


STEP 46

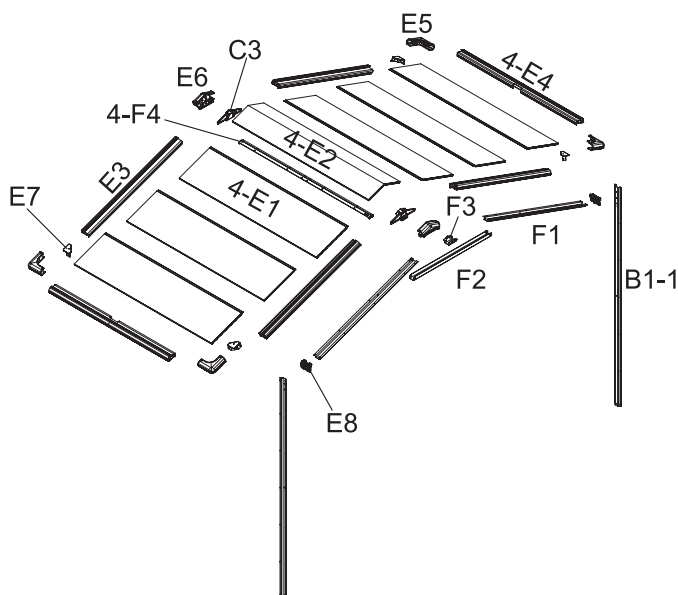


Parts List

1. 4-E1X6
2. 4-E2X1
3. E3X4
4. 4-E4X2
5. E5X4
6. E6X2
7. E7X4
8. E8X2
9. C3X2
10. F1X2
11. F2X1
12. F3X1
13. 4-F4X1
14. B1-1X2


STEP 47

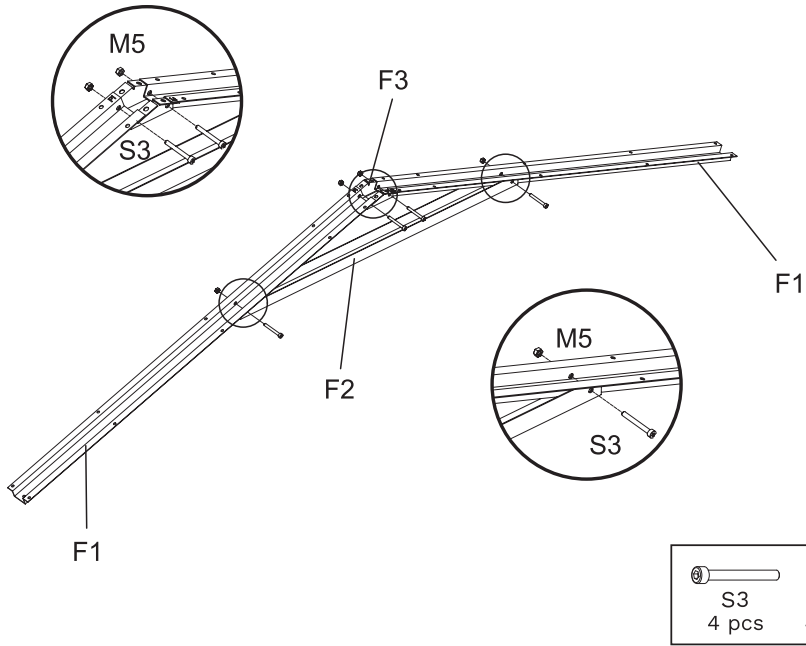


STEP 48

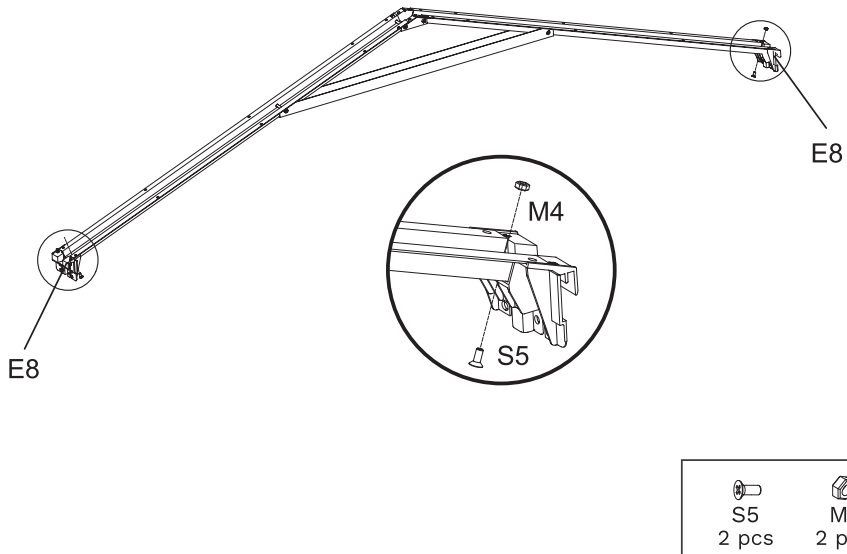


STEP 49

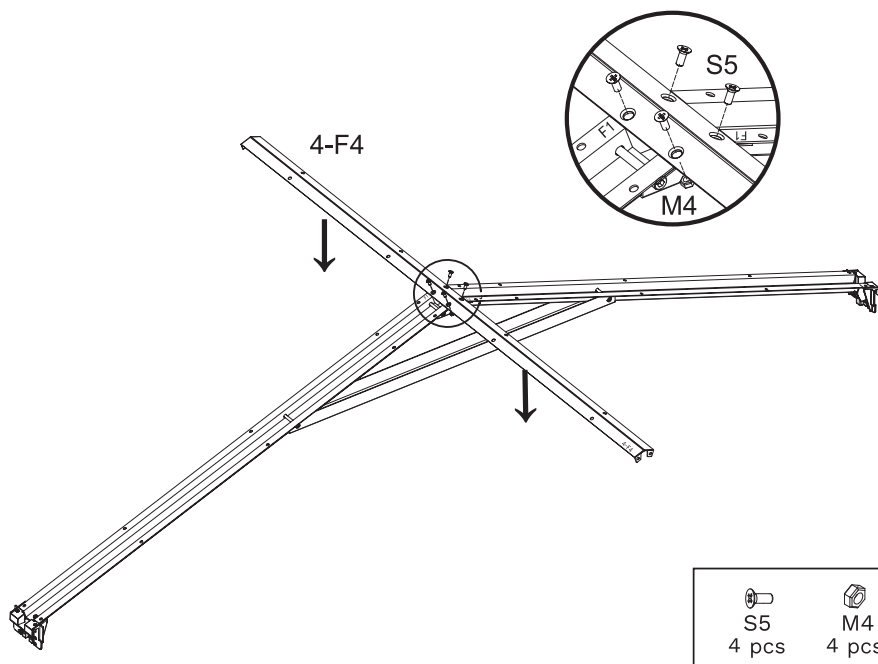


STEP 50

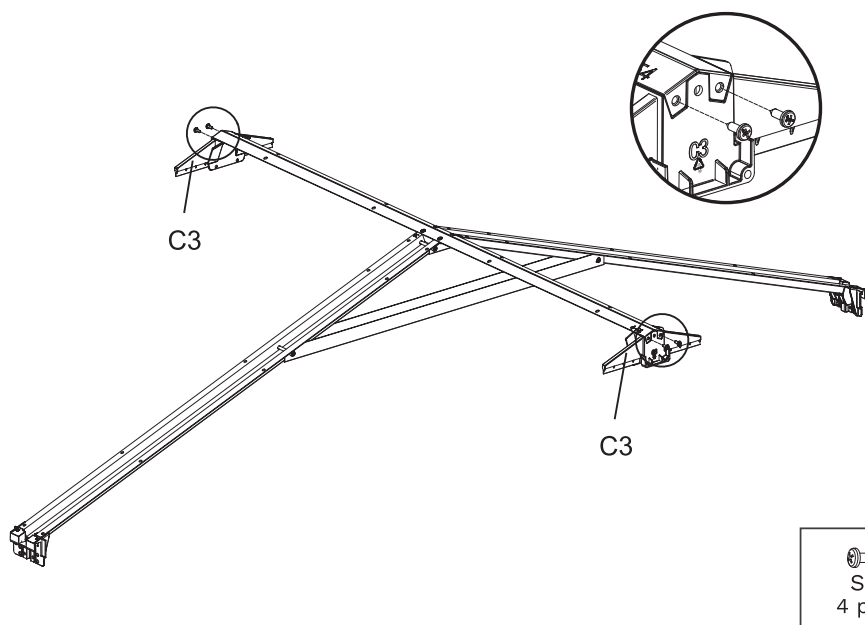



STEP 51

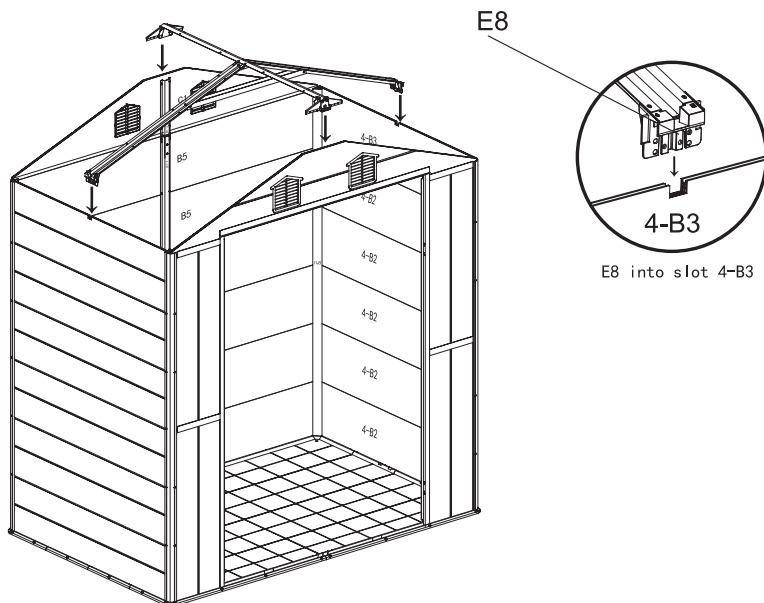

STEP 52


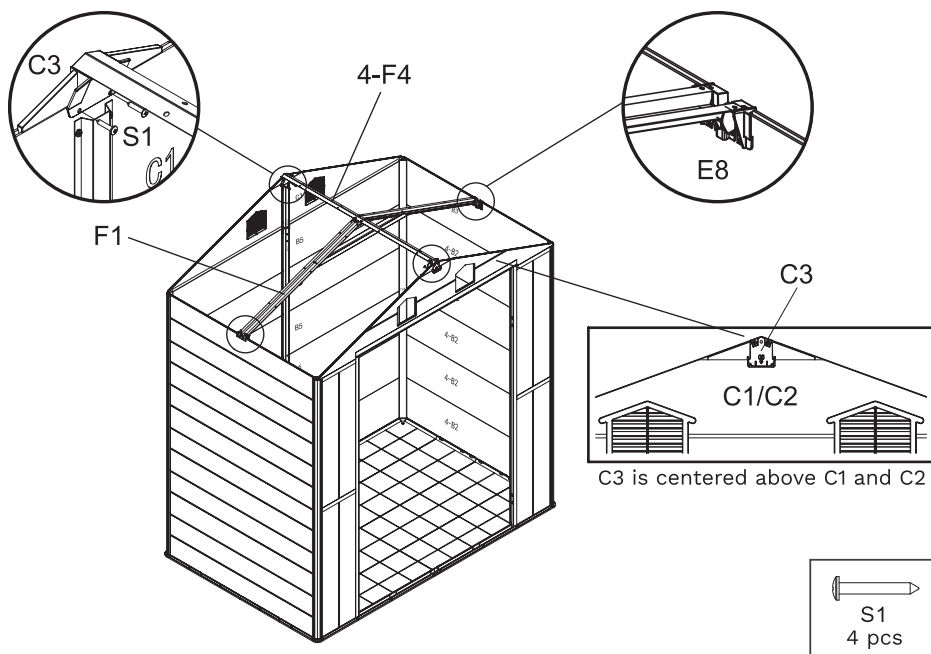


STEP 53

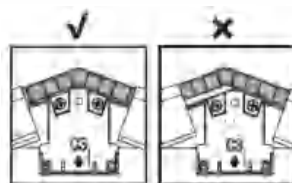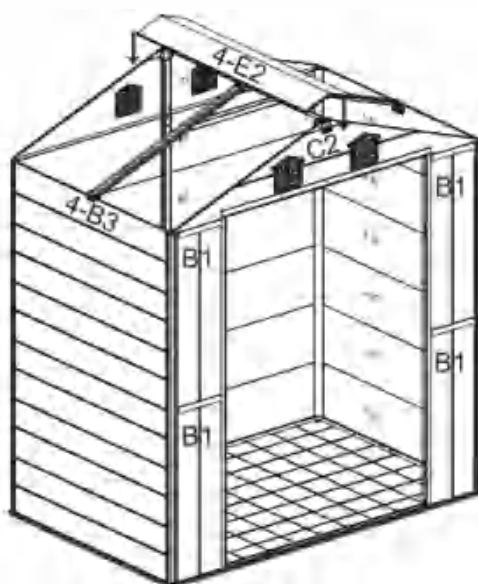


Please make sure 4-E2 is centered.


STEP 54

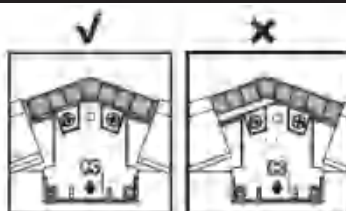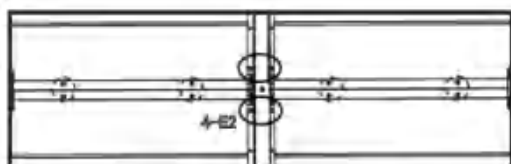

Ensure that 4-E2 is centered before installing screw S4.

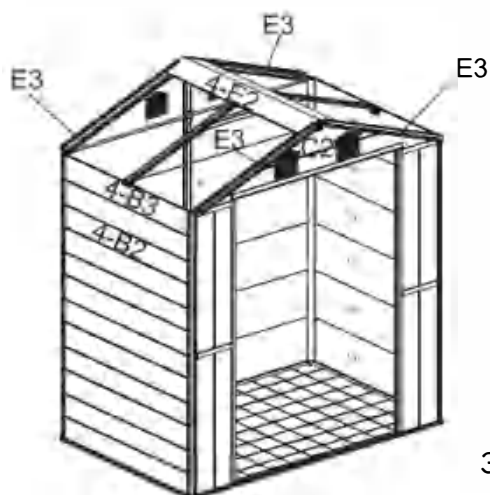


Install E3.

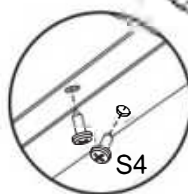




Hold down 4-E2 while installing screw S4.

S4
12 pcs


STEP 55

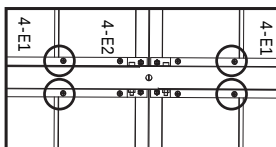

Hold down the upper roof panel while installing screw S4.

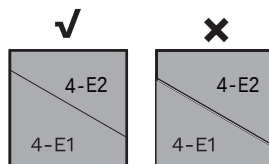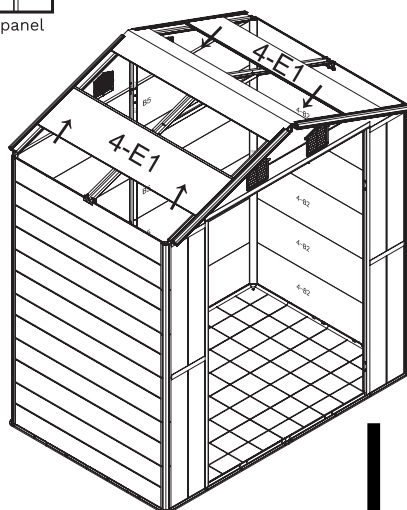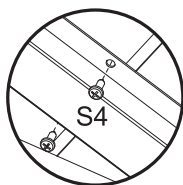


Check the gap between the inner sides of boards 4-E1 and 4-E2.




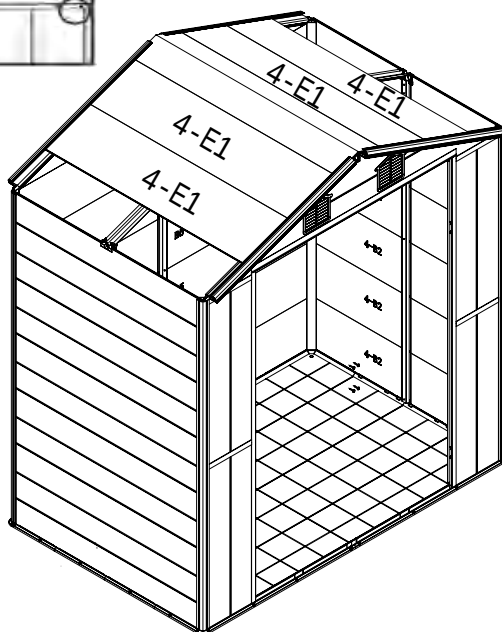


S4
8 pcs

STEP 56


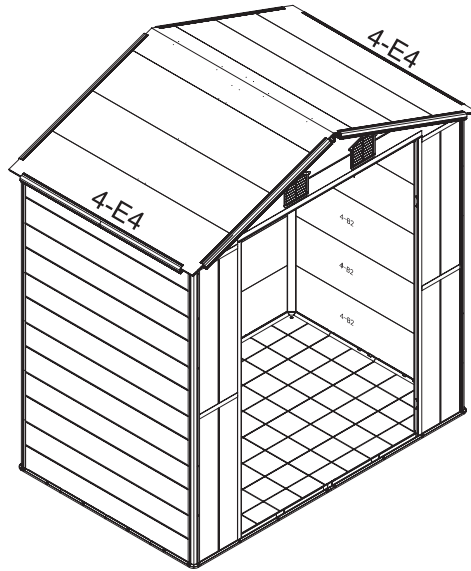


Gently lift 4-E1, align 4-E4 with 4-E1
push forward, and buckle down into
the wall panel.

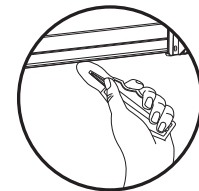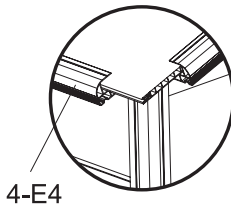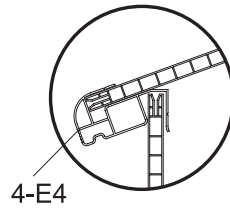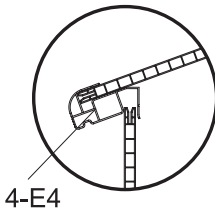


Adjust with a scraper.

STEP 57


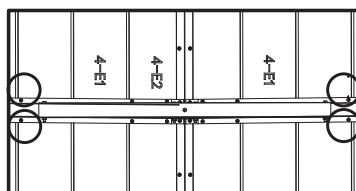
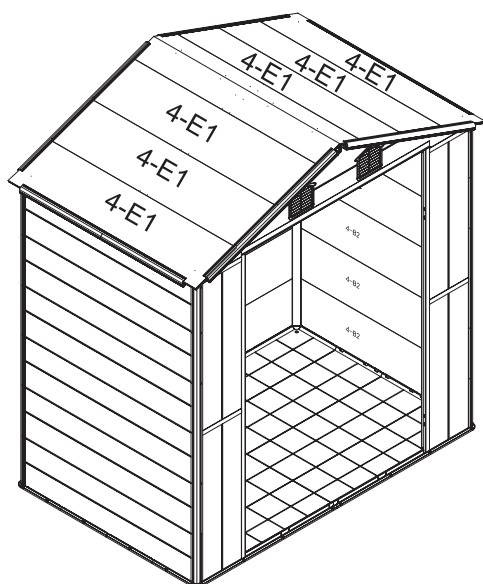


Hold down the upper roof panel while installing screw S4.

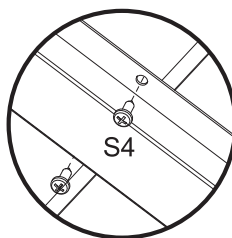


S4
4 pcs





STEP 58

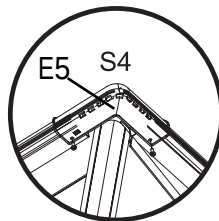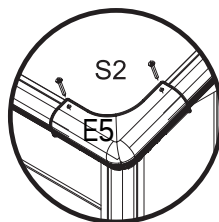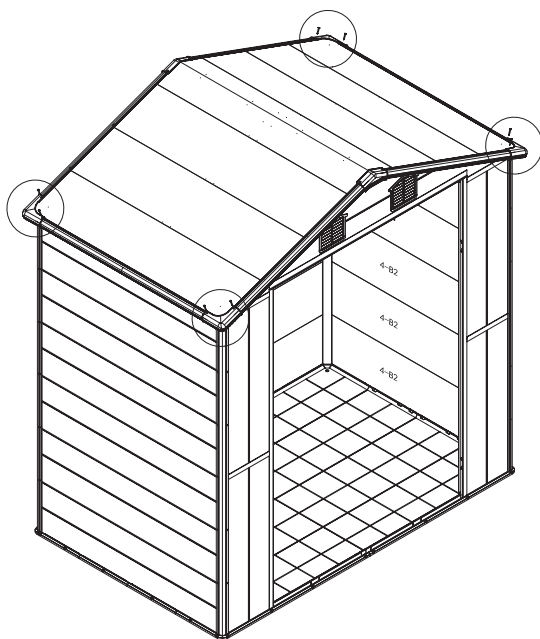


S2
8 pcs


S4
8 pcs




STEP 59

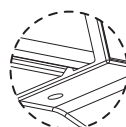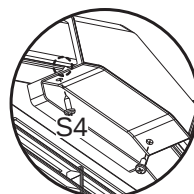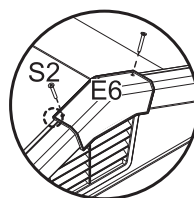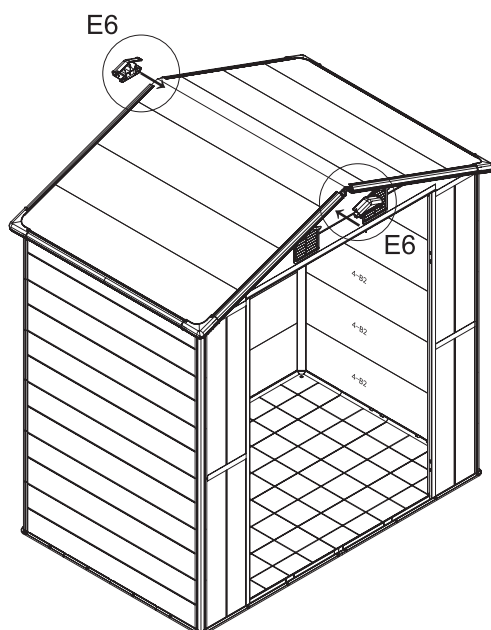



Please check whether the buckle of E6 is fastened to the corresponding position. After confirmation, install S2 and S4.



STEP 60

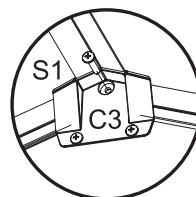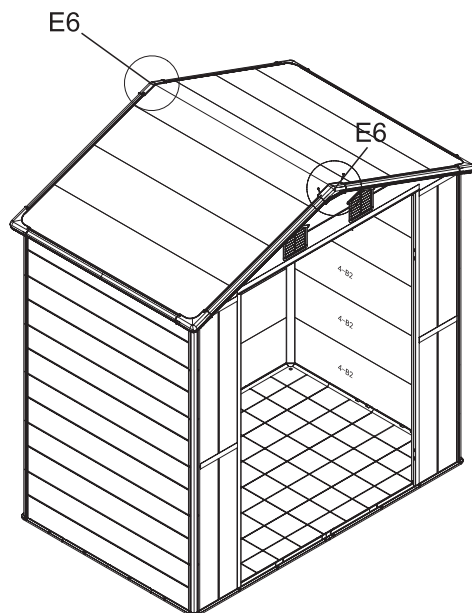


STEP 61

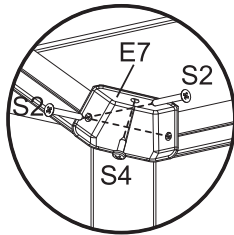
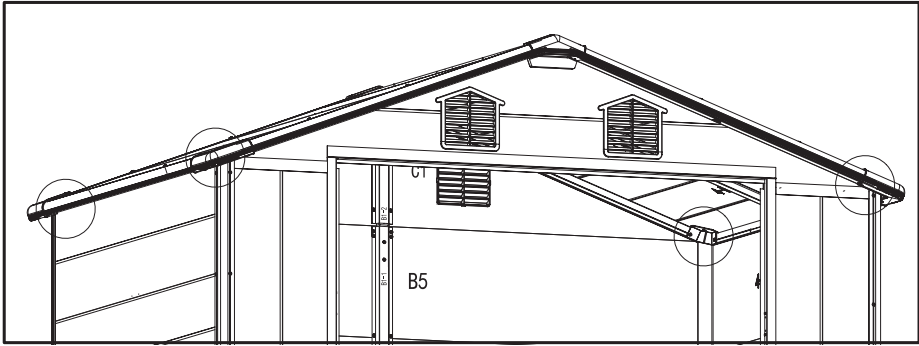


Please install S4 first and then install S2.





X4




STEP 62

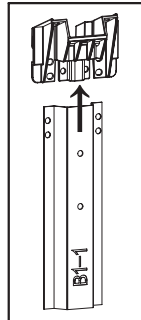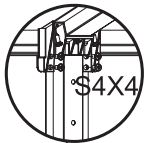





Insert B1-1 into the corresponding slot on E8.

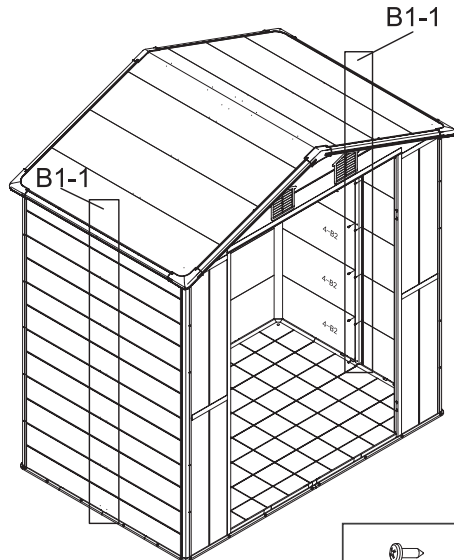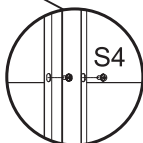

STEP 63

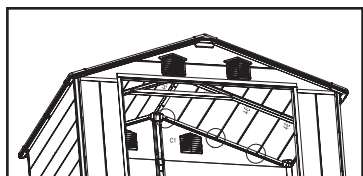


12 internal screws and
16 external screws

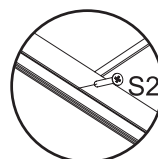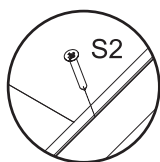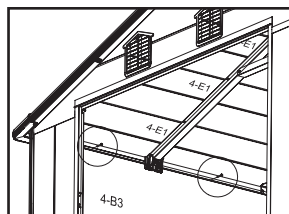


STEP 64


Please measure the door dimensions: height is 68 inches , width is 46 inches , (A tolerance of 0.2 inches is acceptable). Please confirm everything is correct and then proceed to the next step.

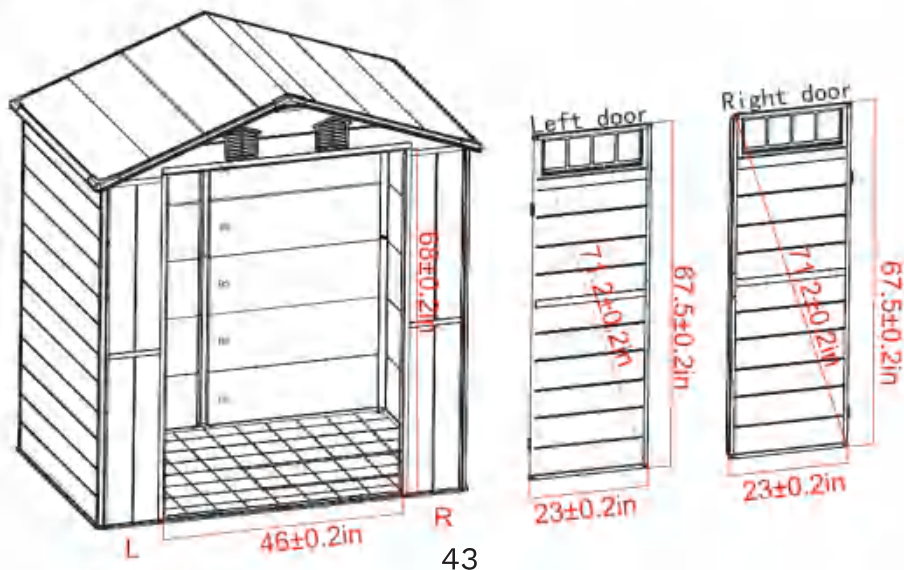

STEP 65

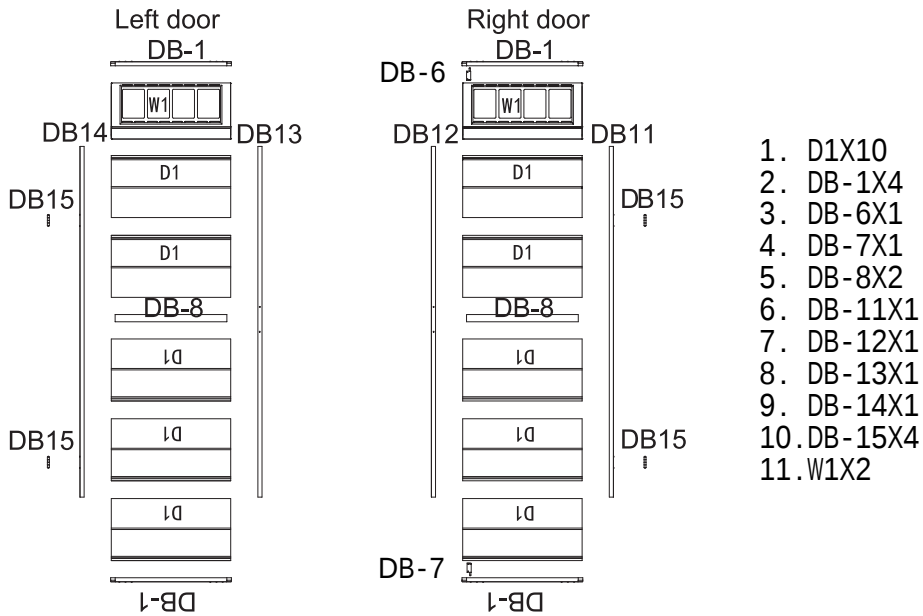

STEP 66

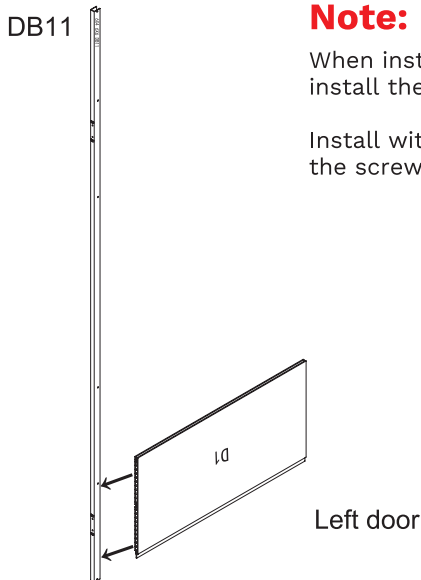


Note:


When installing the door panels, install the first three boards upside down.

Install with the wood grain facing out and the screw holes facing in.


STEP 67

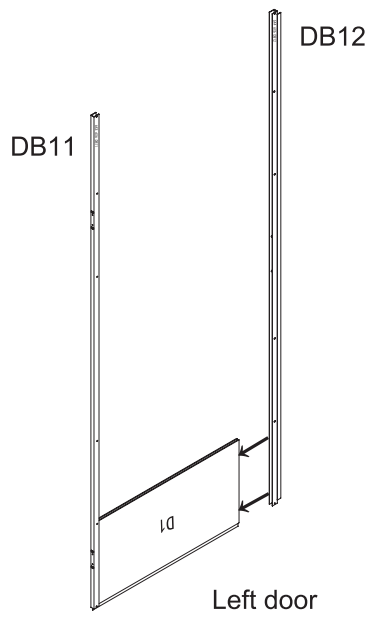


STEP 68

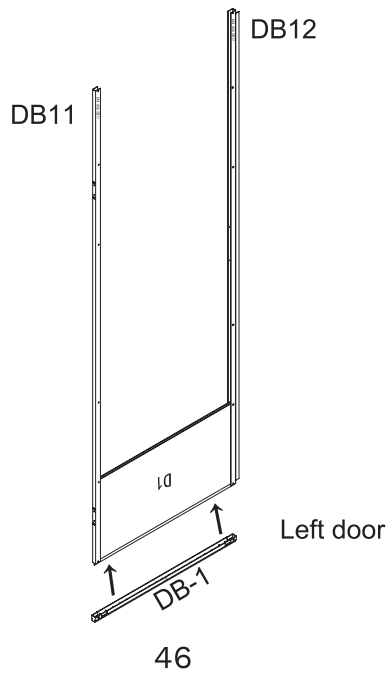


STEP 69

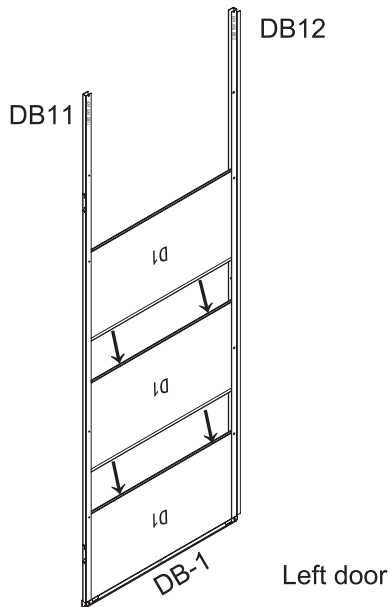


STEP 70

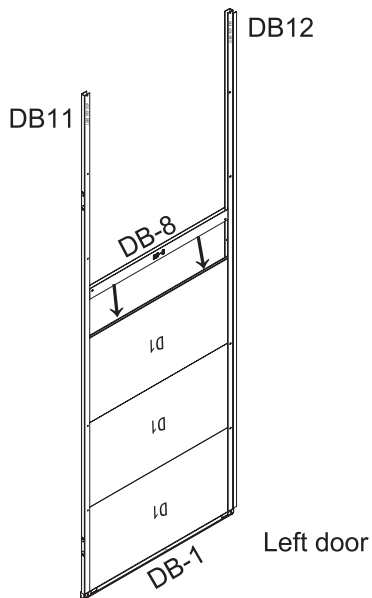


STEP 71

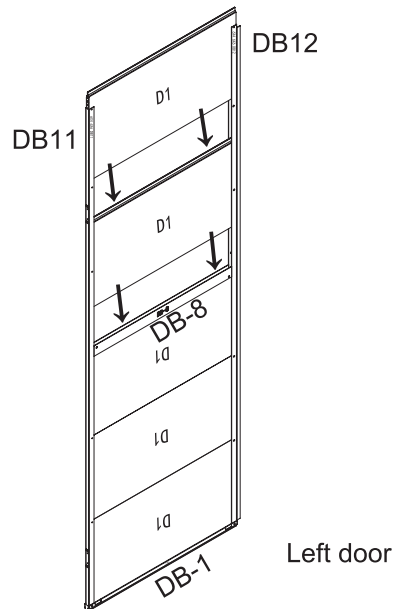

STEP 72

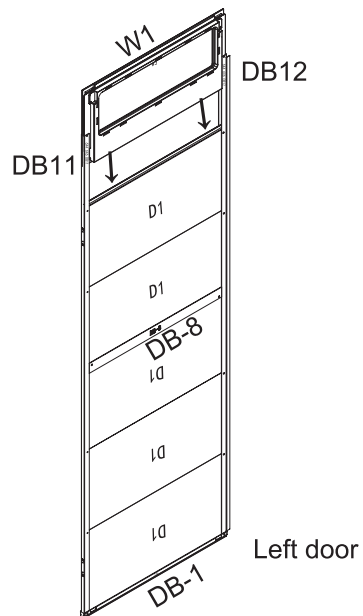


STEP 73

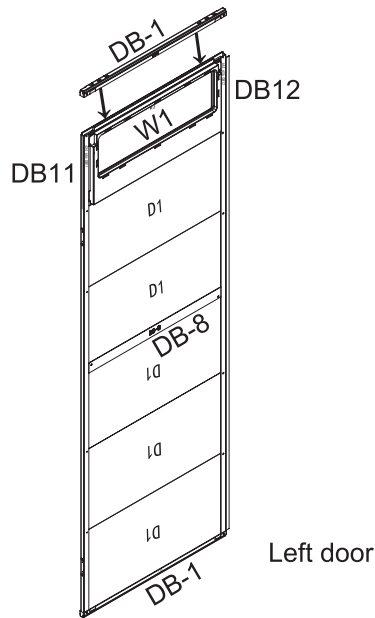



STEP 74

Before installing the screws, please verify the door dimensions: Length 67 ± 0.2 in, Width 23 ± 0.2 in, and Diagonal 71 ± 0.2 in. (Tolerance within 0.2 in). Once confirmed, proceed with the screw installation.

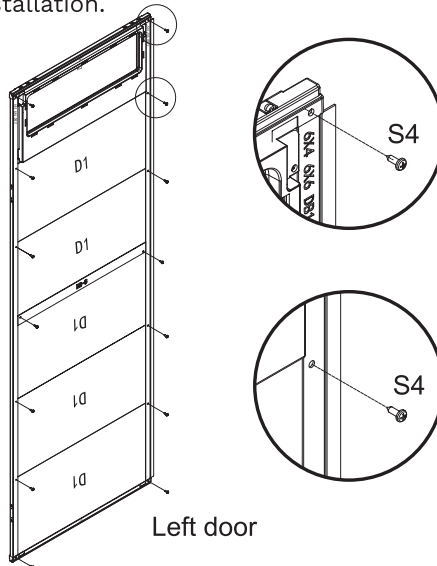



S4
14 pcs

STEP 75

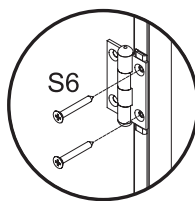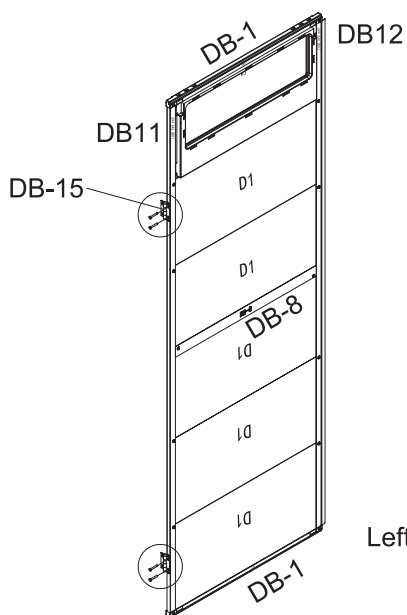


S6
4 pcs

STEP 76

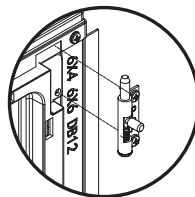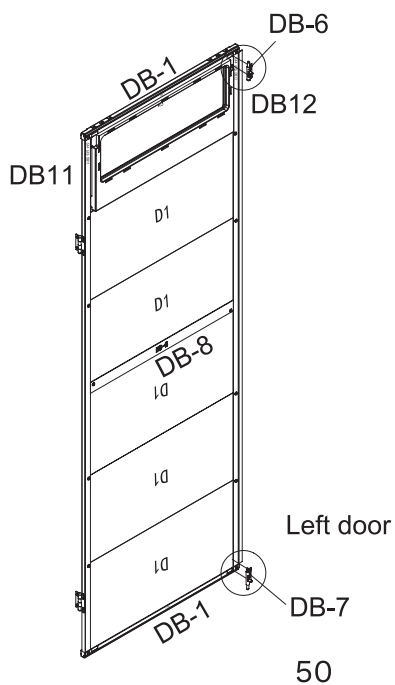


S4
4 pcs


STEP 77

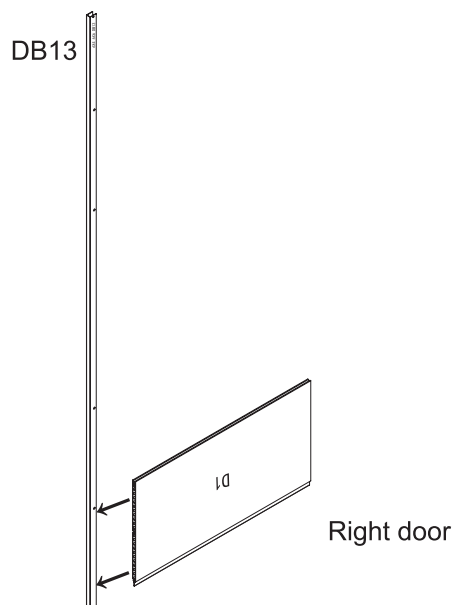


STEP 78

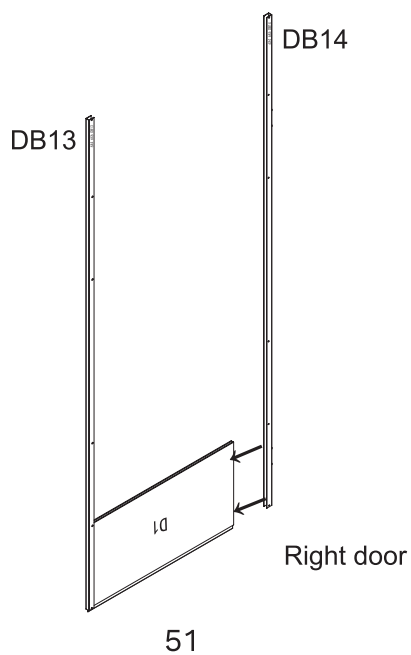


STEP 79

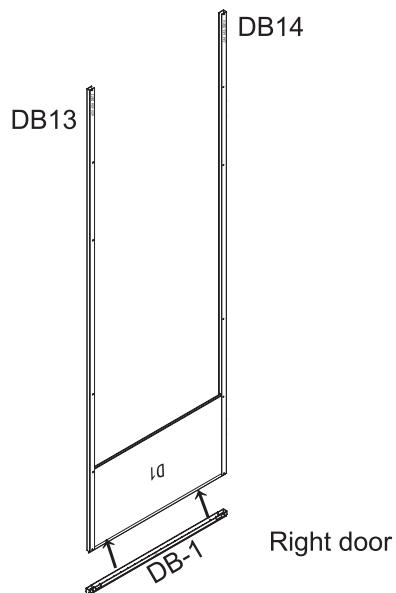


STEP 80

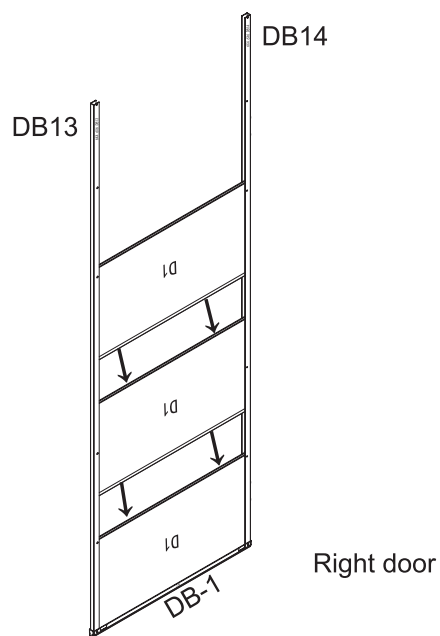


STEP 81

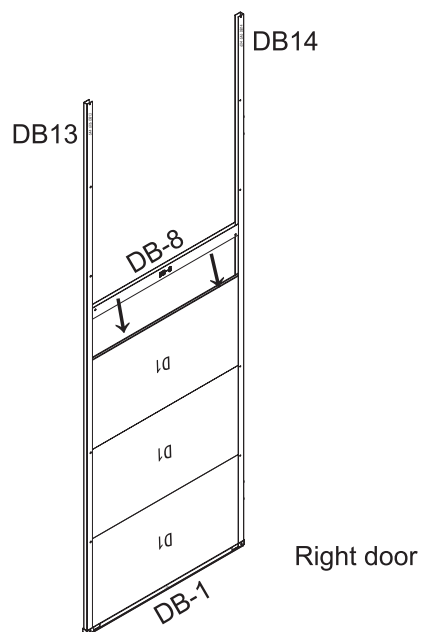


STEP 82

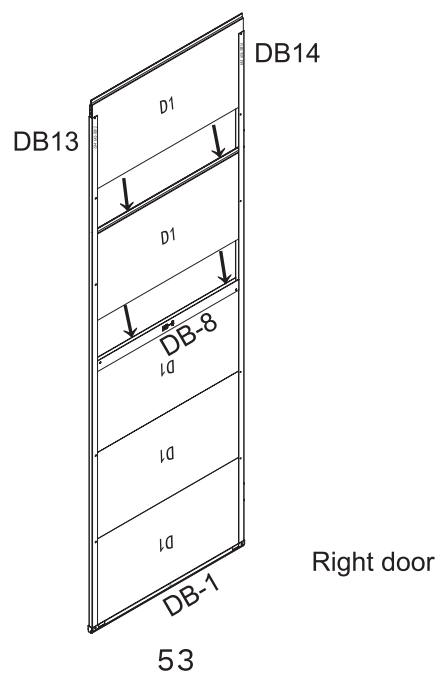

STEP 83

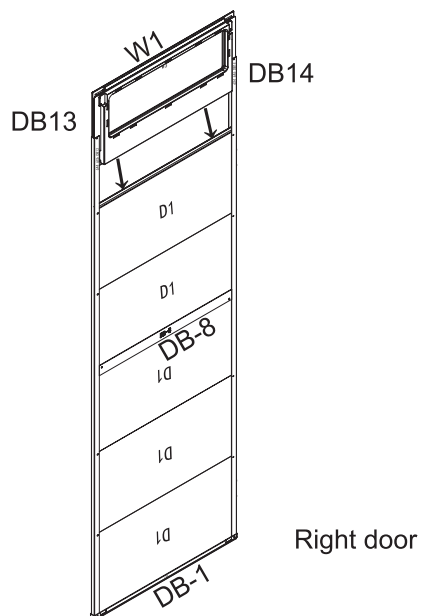


STEP 84

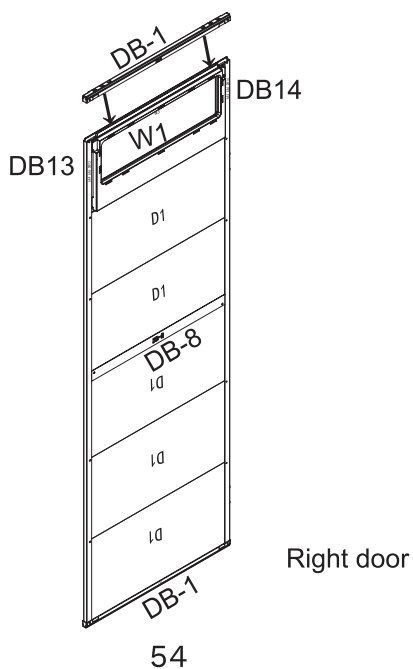


STEP 85




Before installing the screws, please verify the door dimensions: Length 67 ± 0.2 in, Width 23 ± 0.2 in, and Diagonal 71 ± 0.2 in. (Tolerance within 0.2 in). Once confirmed, proceed with the screw installation.

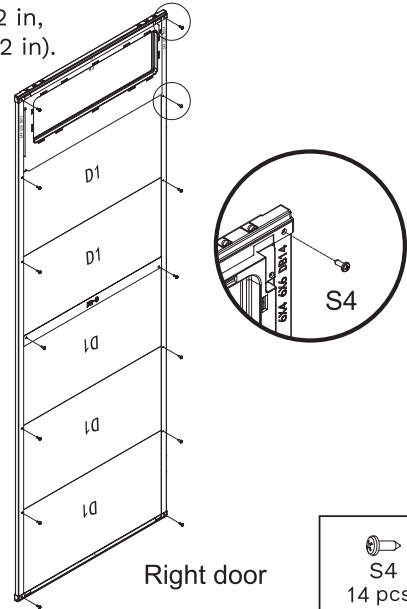




STEP 86

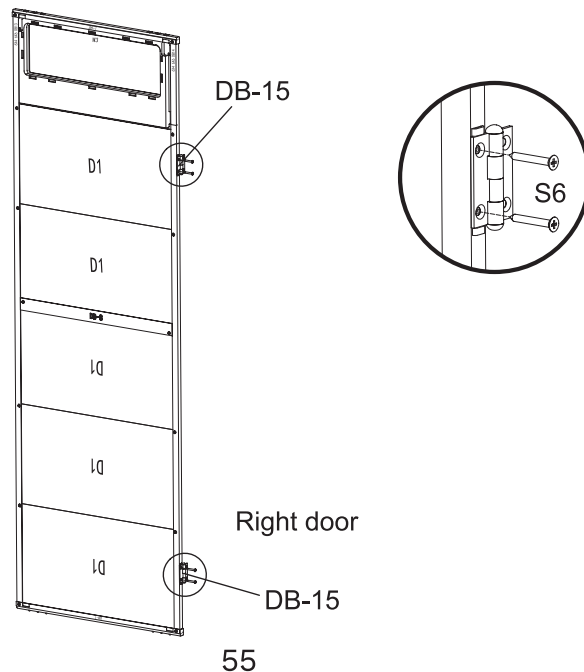

STEP 87

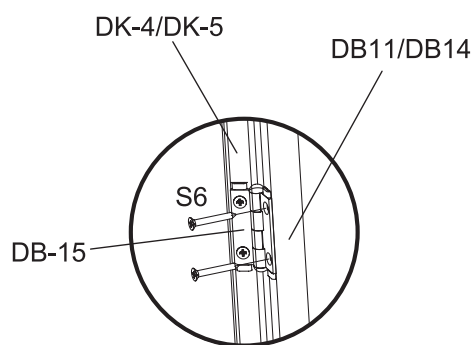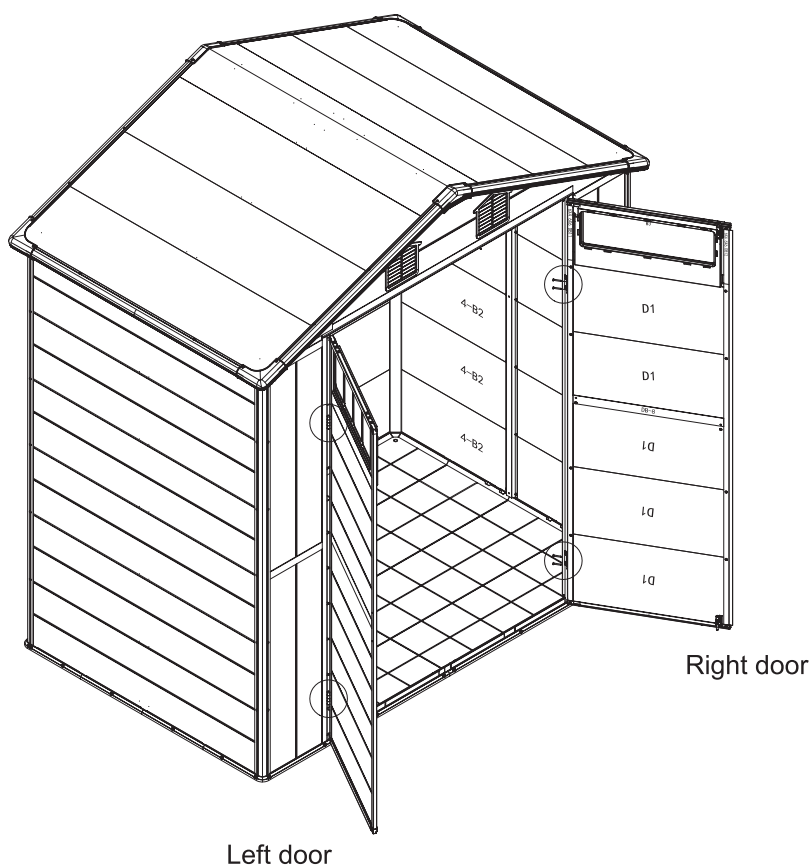

STEP 88

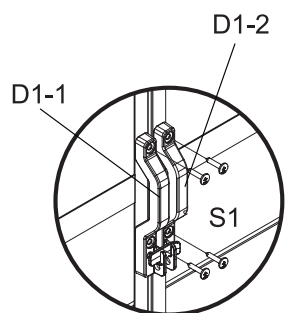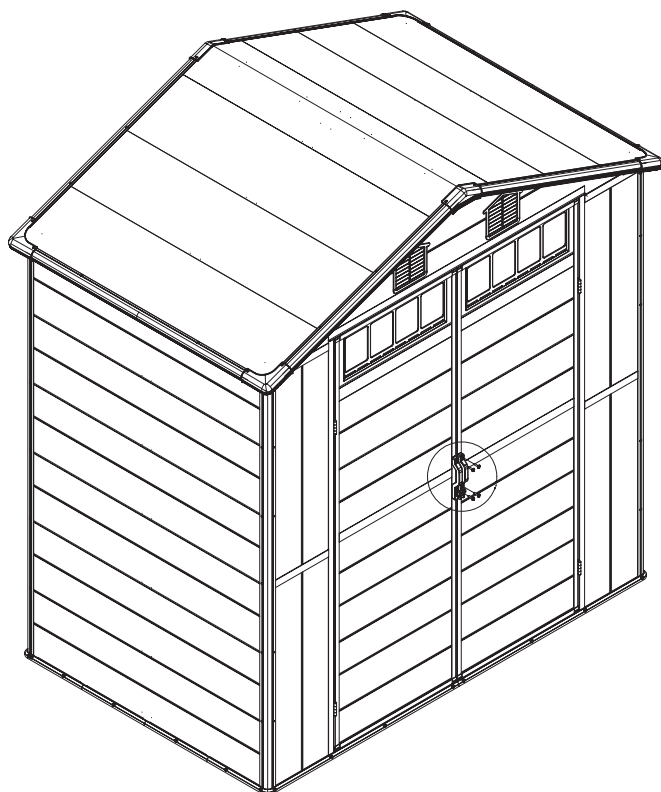

CARE & SAFETY

- In case of fire, do not attempt to extinguish any burning polypropylene with water. Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (size: 1.9"-3", screws are not included).
- Wear safety-goggles and always follow the manufacturer's instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.

