
尺寸：14X21CM

NORTHSKY

ASSEMBLY INSTRUCTIONS

PP RESIN OUTDOOR STORAGE SHED

M2-1042 (M2-1042-A & M2-1042-B & M2-1042-C)
M2-1043 (M2-1043-A & M2-1043-B & M2-1043-C)

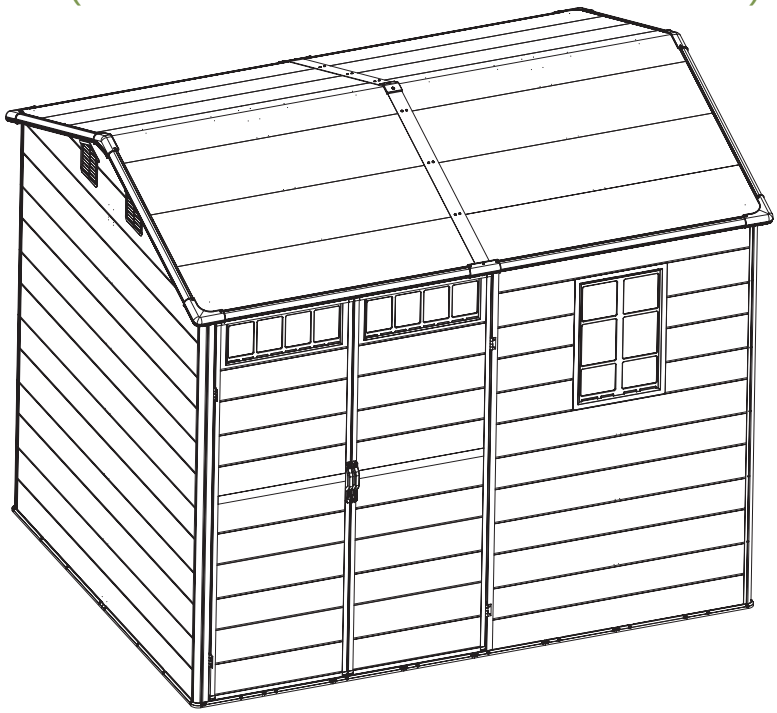

E-mail:
support@northskysupply.com


Please read the instruction manual strictly. Please assemble the resin garden shed in the following steps.

SITE PREPARATION

Level the ground surface.




Use a flat concrete base as the foundation.Have a spirit level ready.

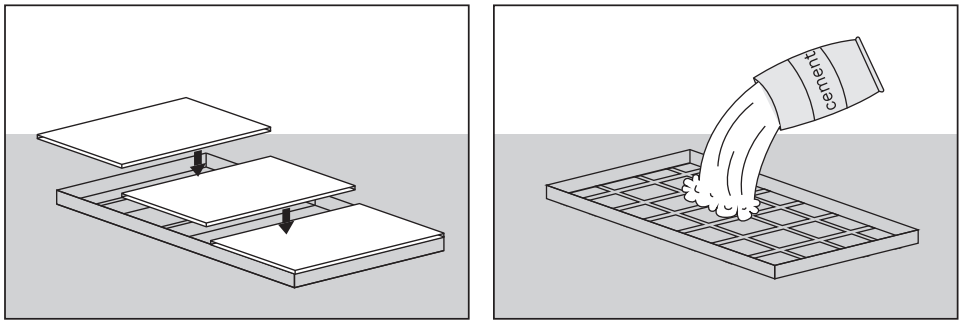

BEFORE STARTING ASSEMBLY

Remove all of the pieces from the 2 packages and spread them out on the ground.
Before installation, please check the type and quantity of parts first.
It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.
Be sure to follow all steps thoroughly.
Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS

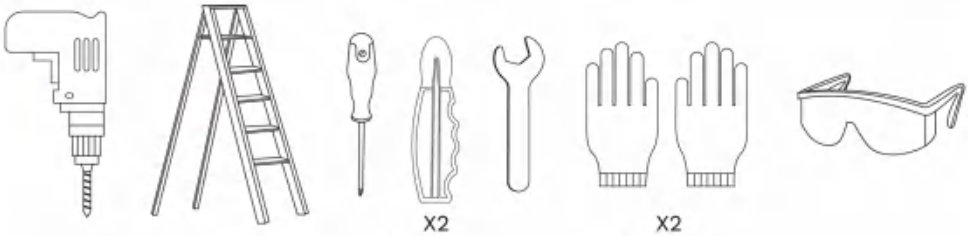

CAUTION

Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.




Requires two people and takes 1-2 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.

DO NOT RETURN YOUR UNIT
TO THE STORE
Contact us first
support@northskysupply.com


SCAN ME

For inquiries and after-sales service
please scan the QR code or email
support@northskysupply.com


FLOOR PARTS

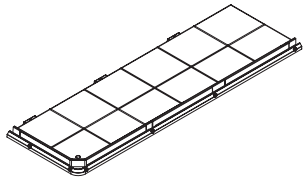


A1 X2

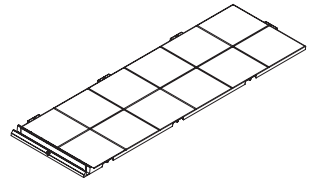

A2 X6

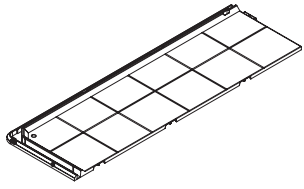

A3 X2

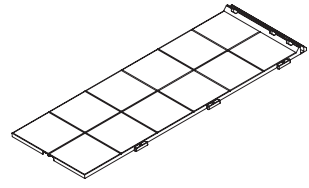

A4 X6

WALL PARTS



B1-1 X5



B1-2 X2

8-B1-3 X1



BJ1 X3



BJ3 X1



BJ4 X1




DK-1 X1


WALL PARTS




DK-2 X1

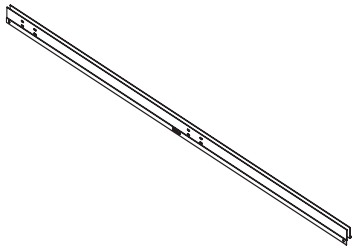


8-DK-3

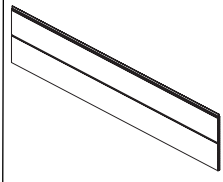


8-B2 X10

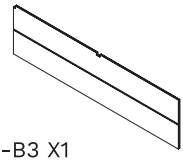


8-B3 X1

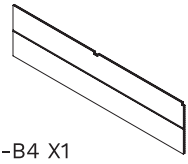


8-B4 X1

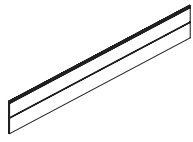


B5 X12

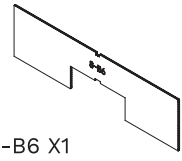


8-B6 X1

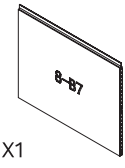


8-B7 X1




8-B8 X1

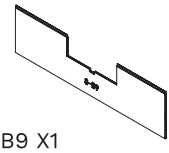


8-B9 X1

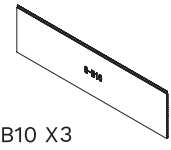

8-B10 X3









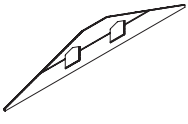


C1 X2






W3 X1










ROOF PARTS

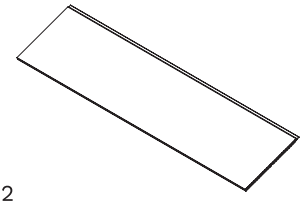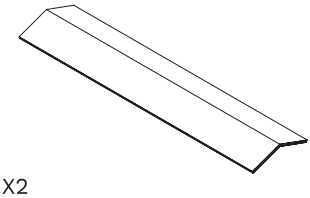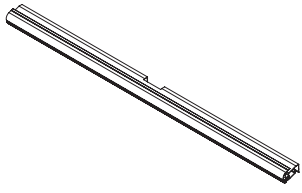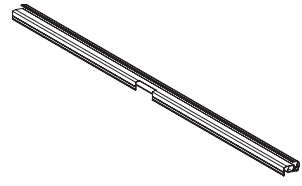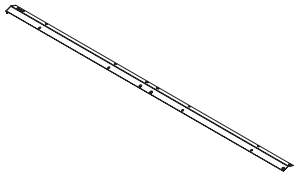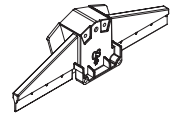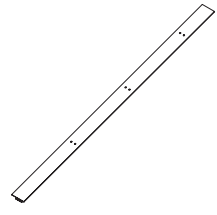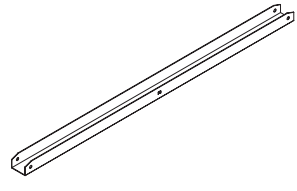 8-E1 X12	 8-E2 X2
 8-E4 X2	 8-E11 X2
 8-F4 X2	 C3 X2
 E3 X4	 E12 X2
 F1 X6	 F2 X3
 F3 X3	


DOOR PARTS

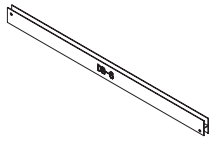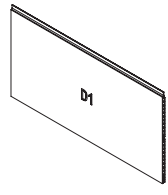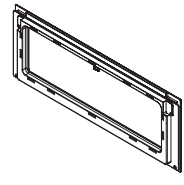 DB-1 X4	DB-2 X1	DB-3 X1	DB-4 X1
 DB-5 X1	 DB-8 X2	 DB X10	 W2 X2


ACCESSORIES

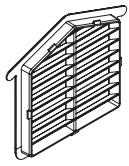 C4 X4	 D1-1 X1	 D1-2 X1	 DB-6
 DB-7	 DB-15 X4	 E5 X4	 E6 X2
 E7 X4	 E8 X4	 E9 X2	 E10 X2
 E13 X1			


SCREW

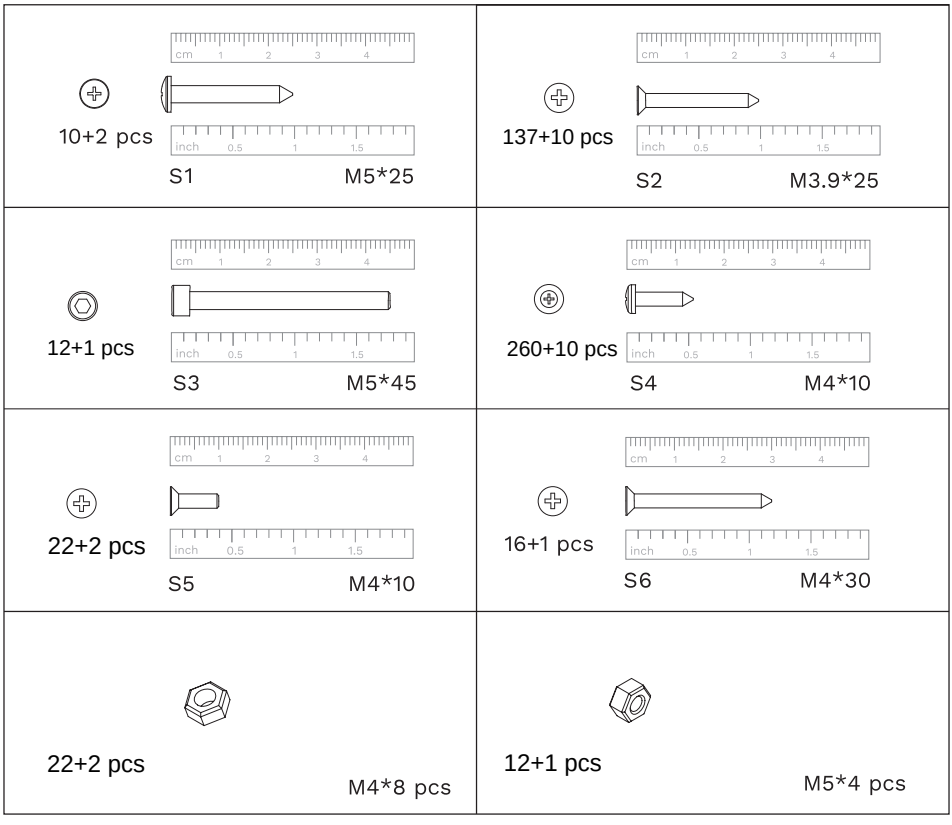
10+2 pcs
S1
M5*25
137+10 pcs
S2
M3.9*25
12+1 pcs
S3
M5*45
260+10 pcs
S4
M4*10
22+2 pcs
S5
M4*10
16+1 pcs
S6
M4*30
22+2 pcs
M4*8 pcs
12+1 pcs
M5*4 pcs


CONTENTS

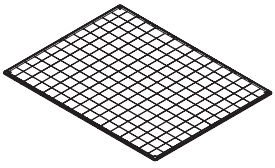


Floor Part Instruction **11 - 15** (page)

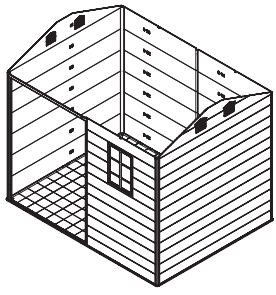

Wall Part Instruction **16 -31** (page)

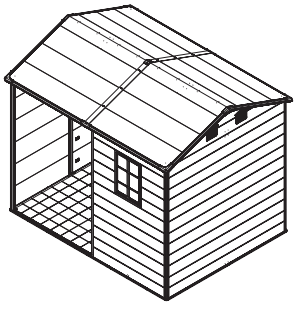


Roof Part Instruction **32 - 53** (page)

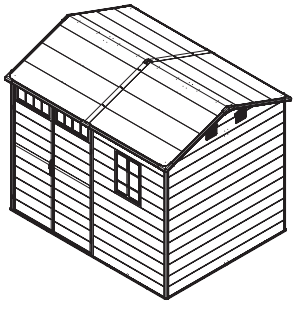


Door Part Instruction **54 - 67** (page)


STEP 1

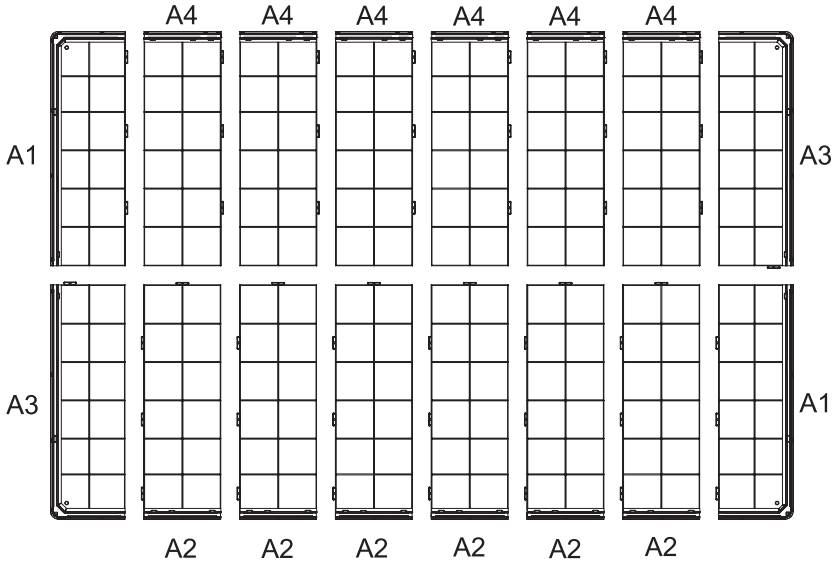

STEP 2

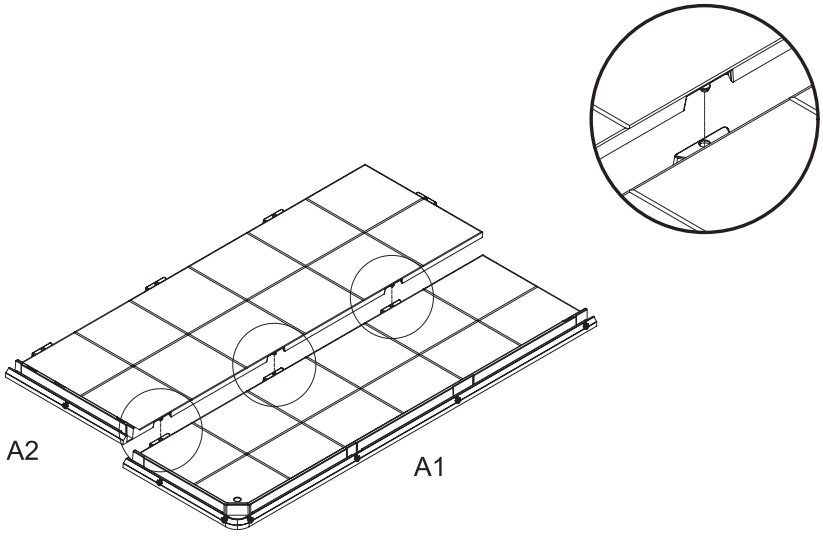


STEP 3

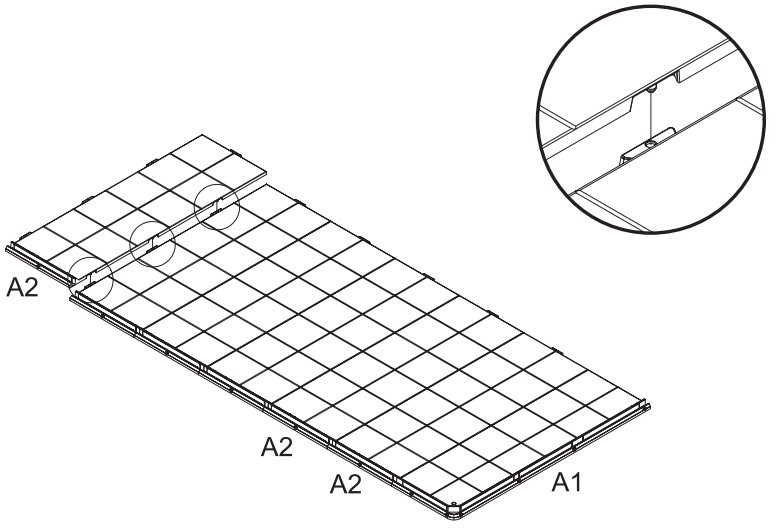


Please install the remaining 5
A2 blocks in sequence.


STEP 4

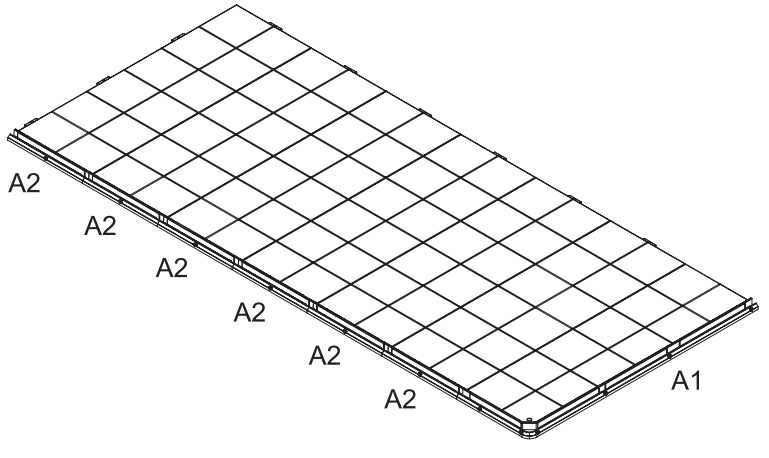


STEP 5

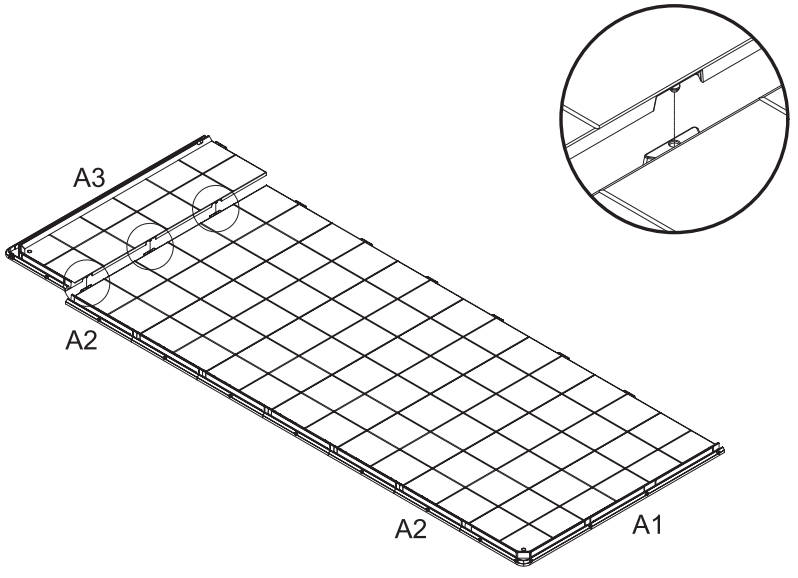


STEP 6

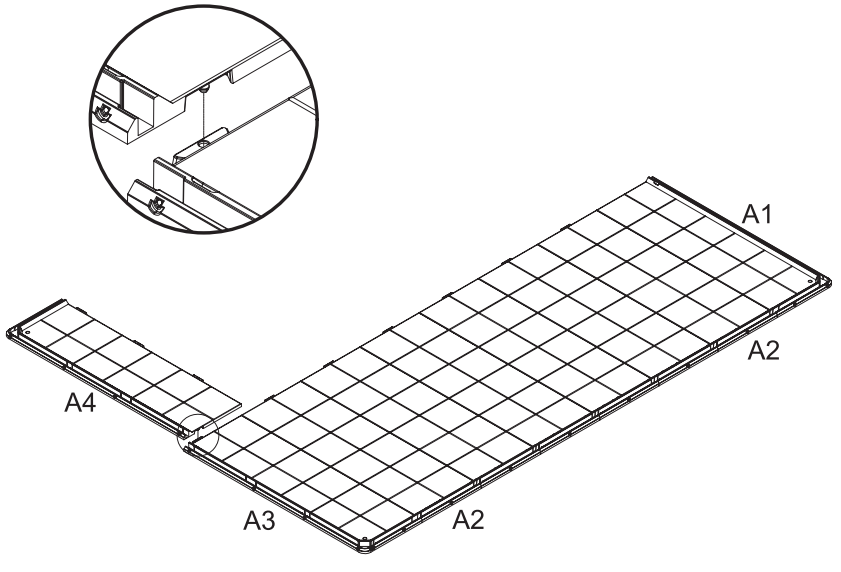

STEP 7

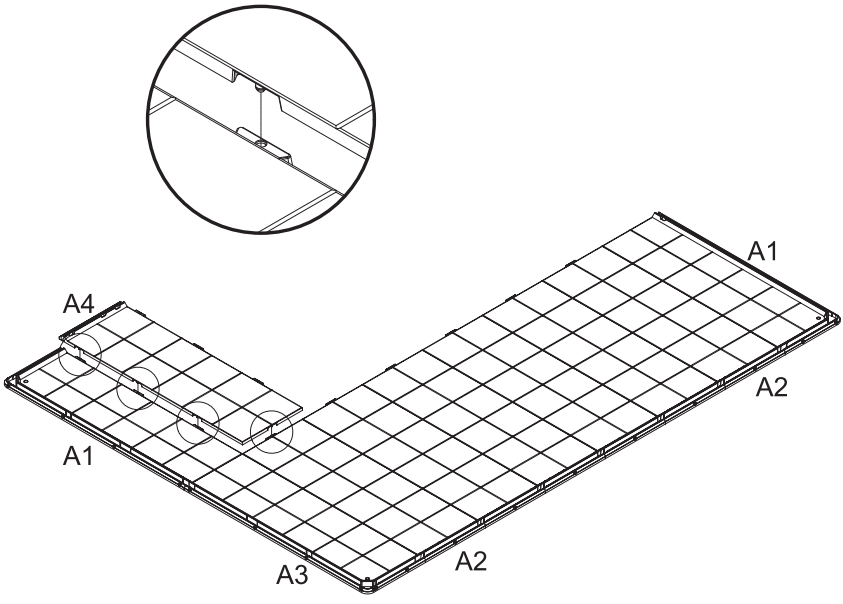


STEP 8

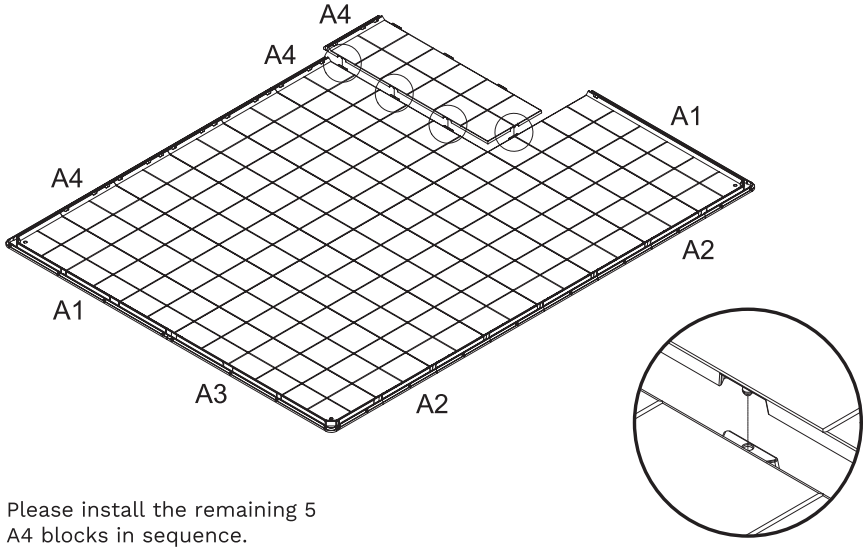


Please install the remaining 5 A4 blocks in sequence.


STEP 9

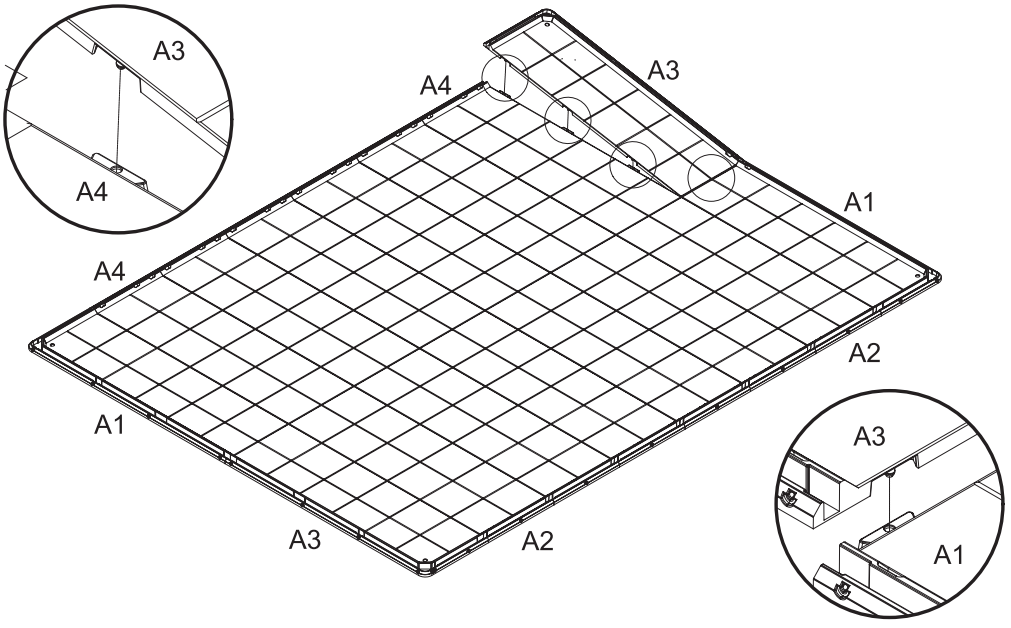

STEP 10

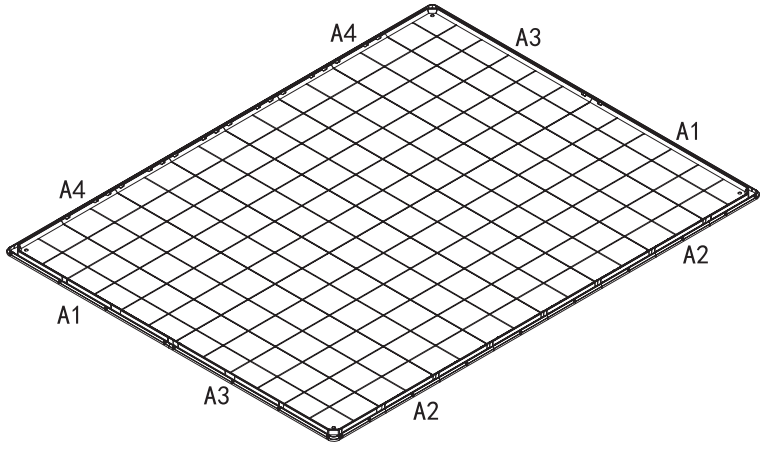


STEP 11

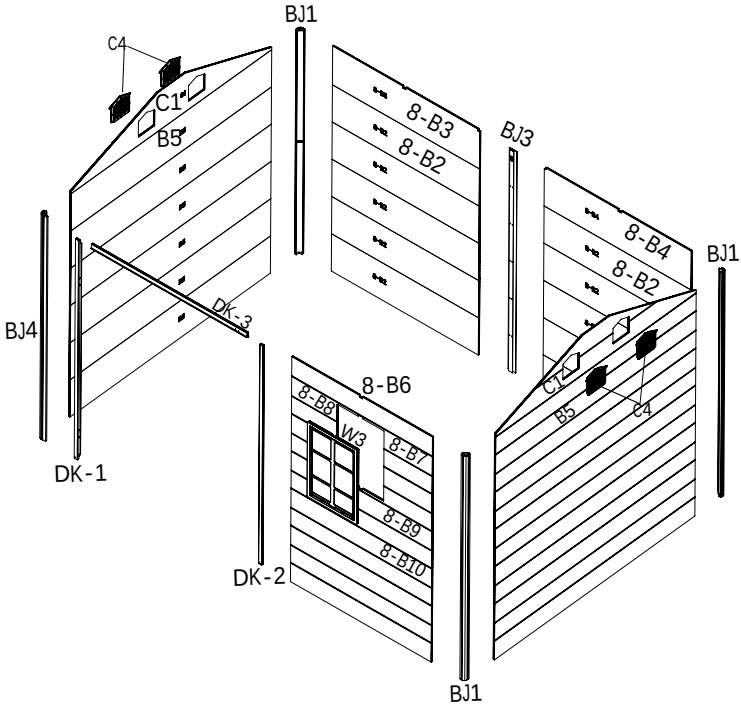


1. 8-B2X10
2. 8-B3X1
3. 8-B4X1
4. B5X12
5. 8-B6X1
6. 8-B7X1
7. 8-B8X1
8. 8-B9X1
10. 8-B10X3
11. C1X2
12. C4X4
13. BJ1X3
14. BJ3X1
15. BJ4X1
16. DK-1X1
17. DK-2X1
18. DK-3X1
19. W3X1


STEP 12

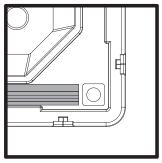


Put 8-B2,8-B10,B5 into the floor corresponding grooves.

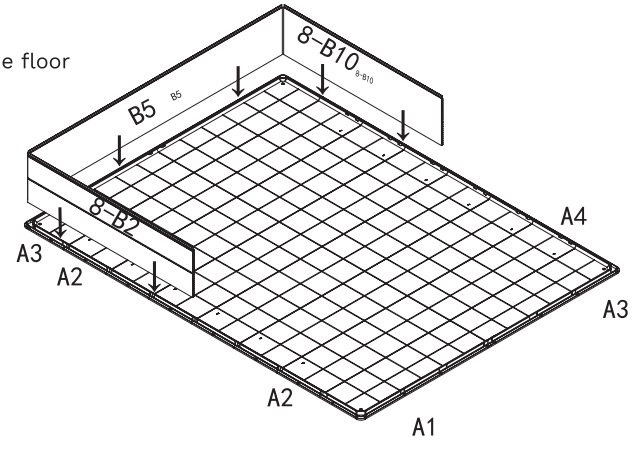


STEP 13

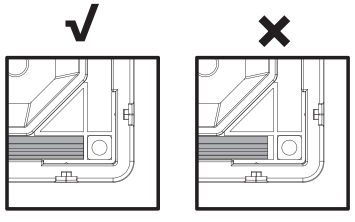


Check the clearance between BJ1,BJ3, DK-2 and the wall panel.

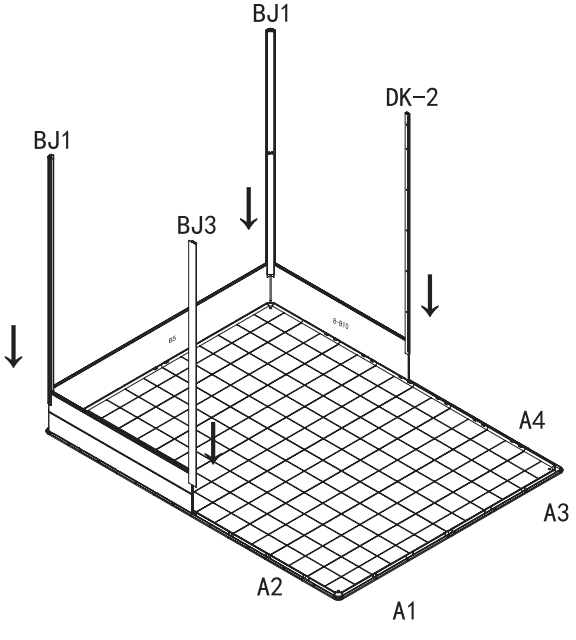


STEP 14

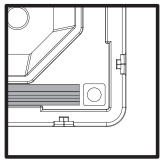


Put 8-B2,B5 into the floor corresponding grooves.

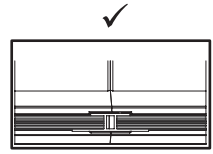


Check the clearance between 8-B2 and BJ3.

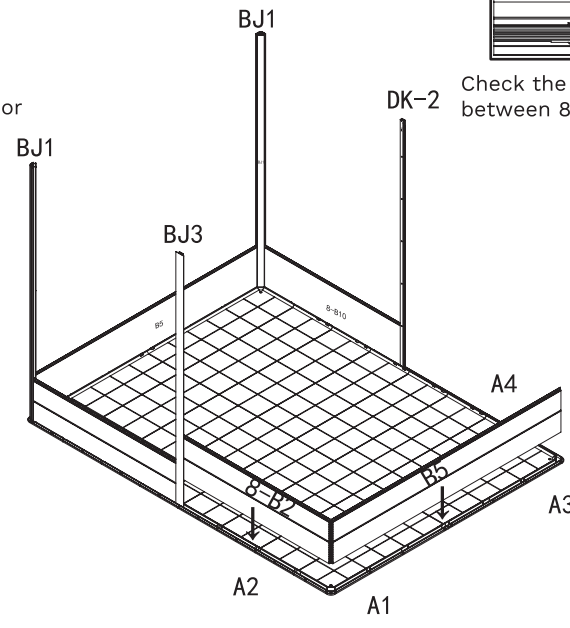


STEP 15

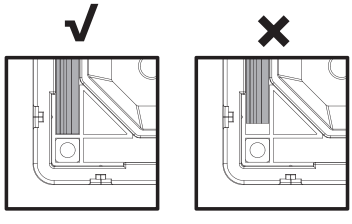


Verify the gaps between BJ1 and 8-B2, B5,as well as between BJ4 and B5.

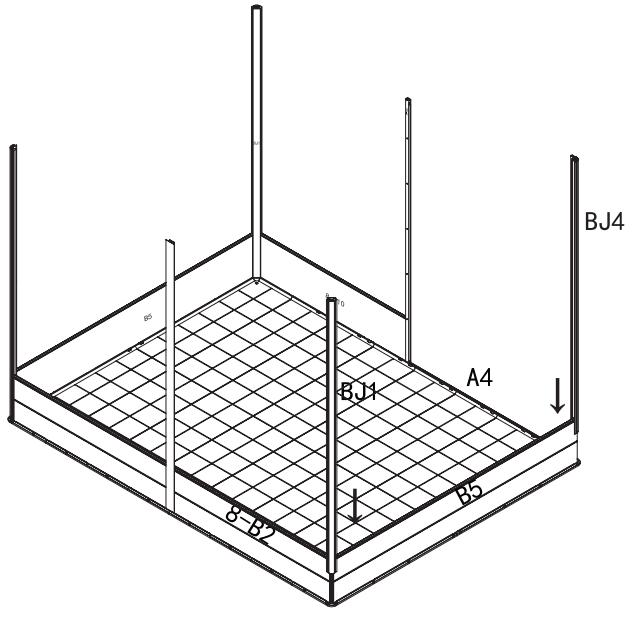


STEP 16

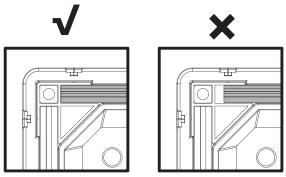


After verifying the gap, fasten using S2.

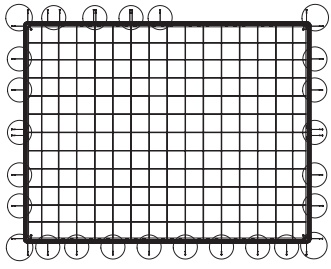


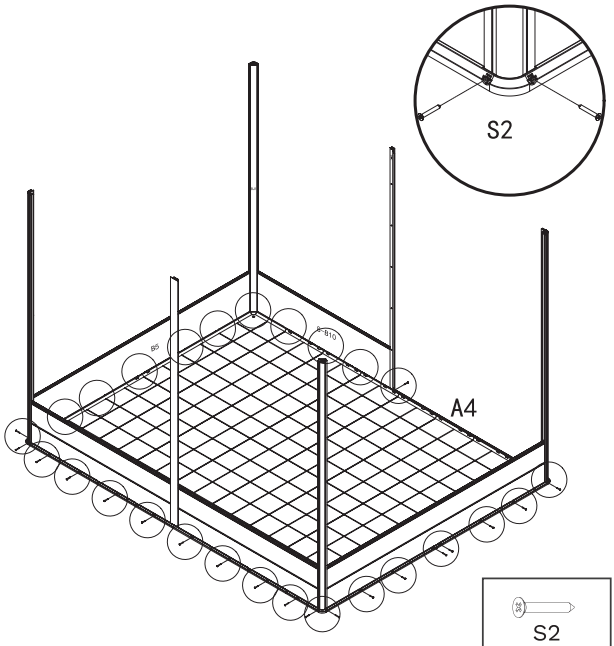

STEP 17

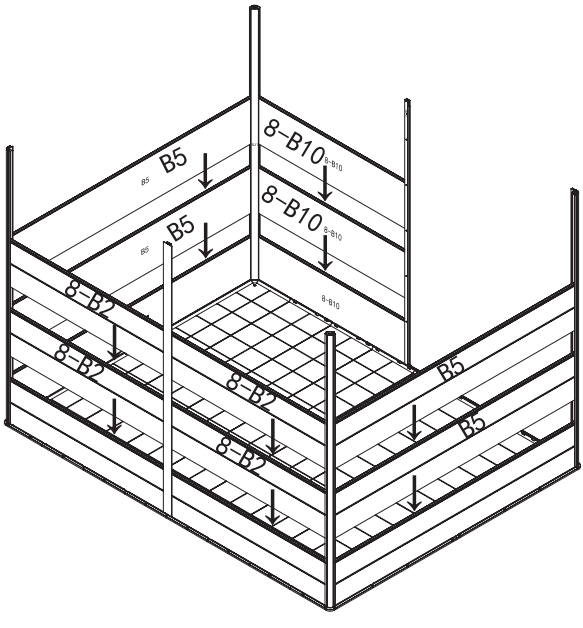



STEP 18

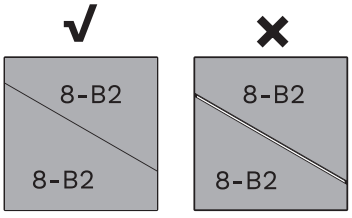


Check the gap between the inside of two plates 8-B2.


After confirming the gap of the above accessories, fix BJ1 and 8-B2 by hand, and then connect and fix with S2.

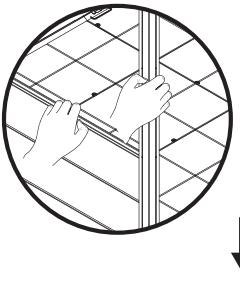

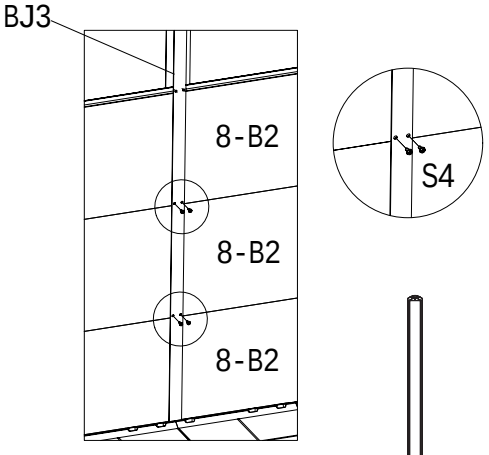

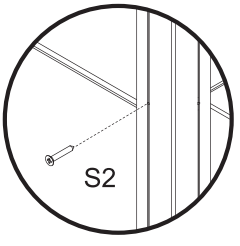



STEP 19

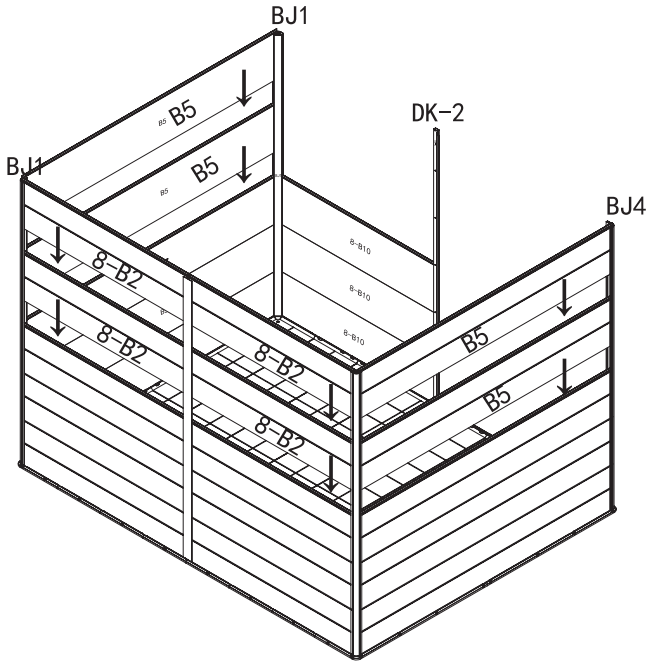



STEP 20


For details, see STEP 18

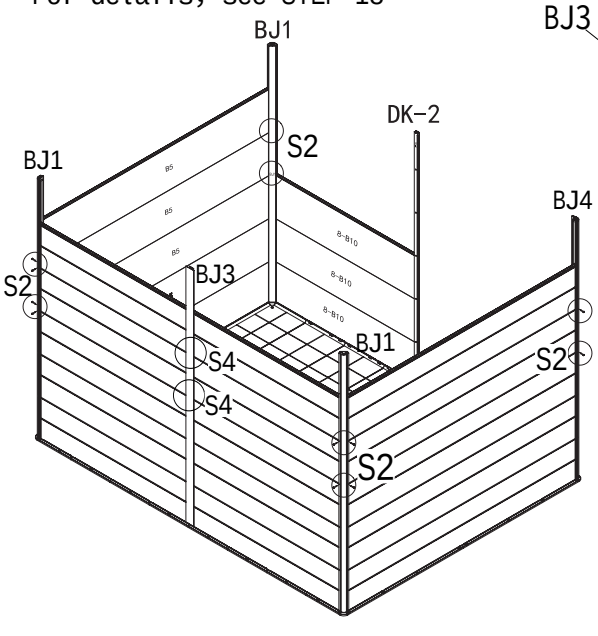

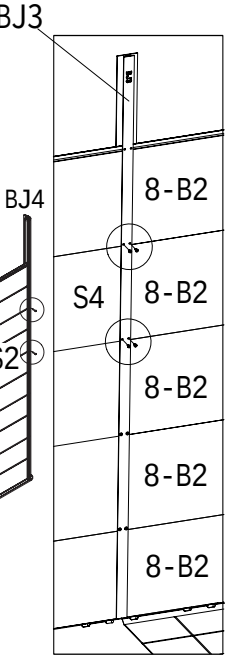


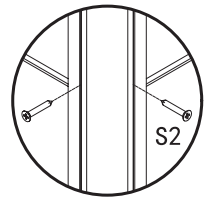

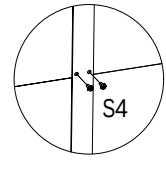

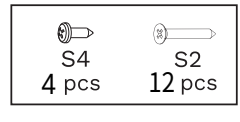



STEP 21

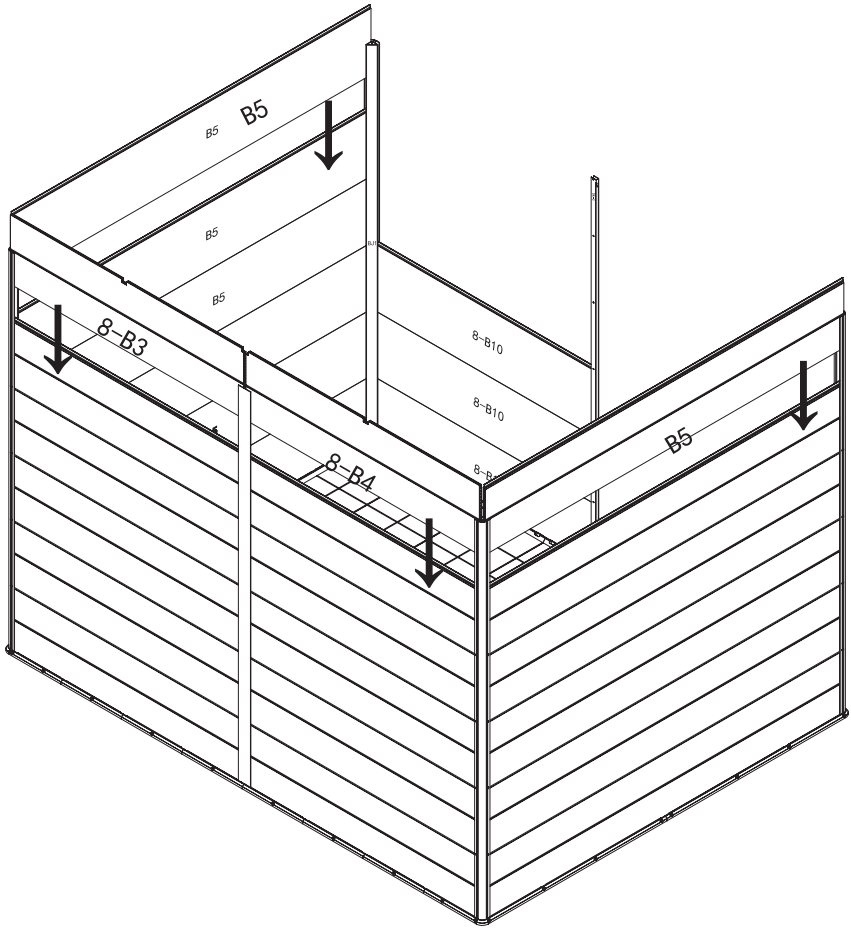



STEP 22


For details, see STEP 18

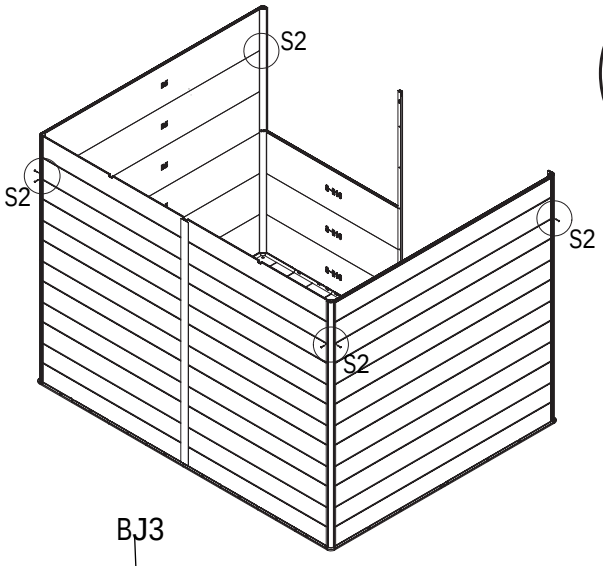


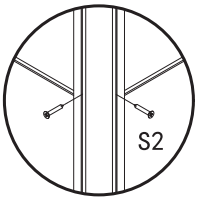

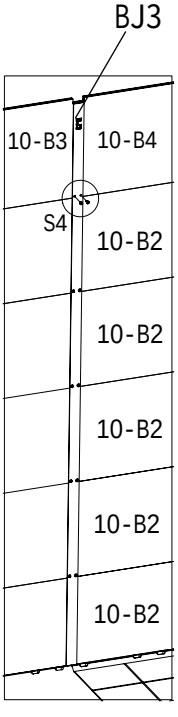


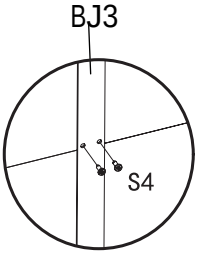


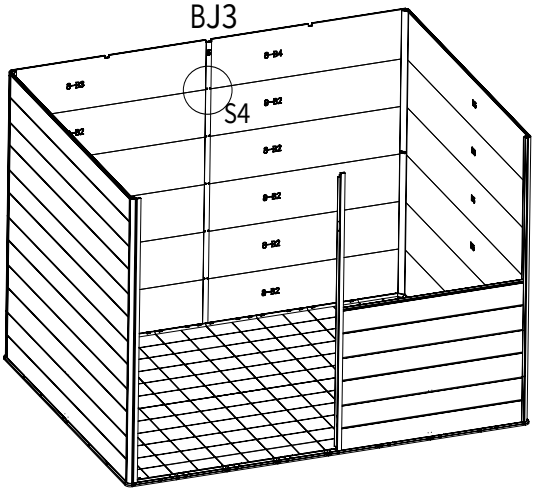

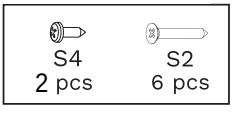



STEP 23

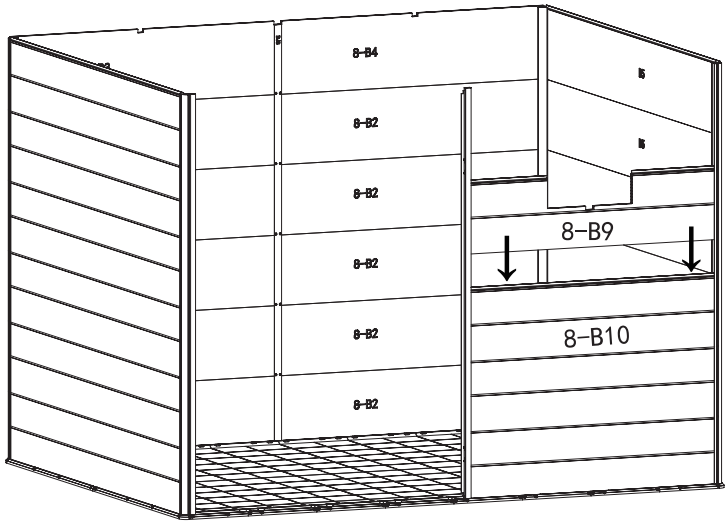

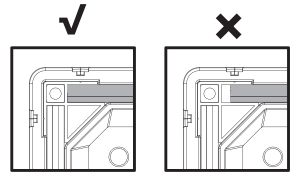


STEP 24

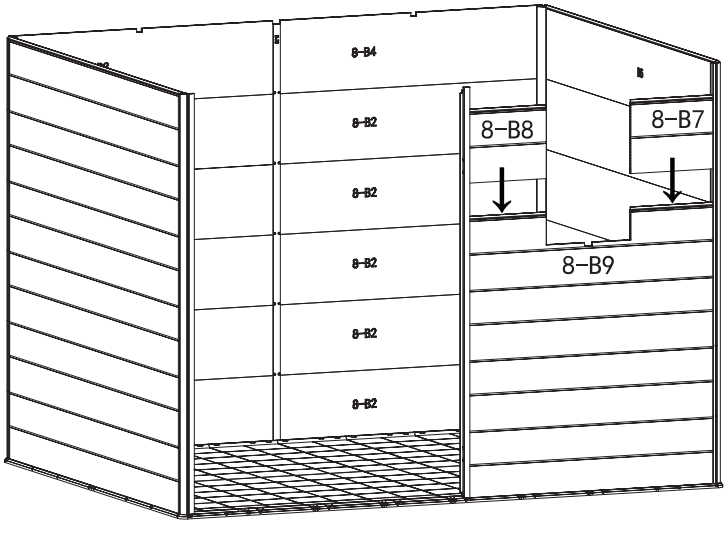

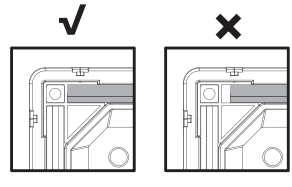


STEP 25

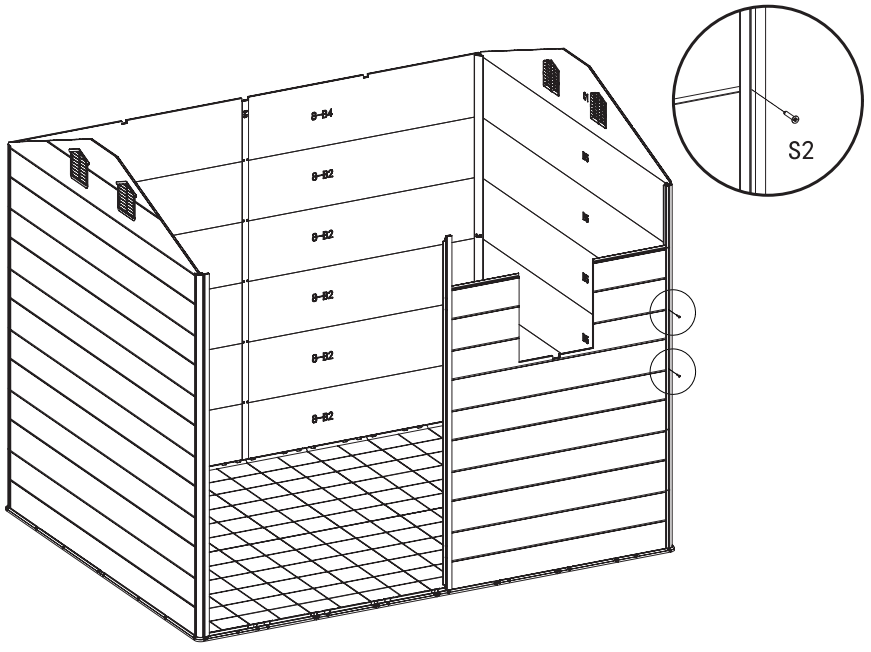


S2
2 pcs


STEP 26



Check the clearance between 8-B8, 8-B7,and window frame W3.

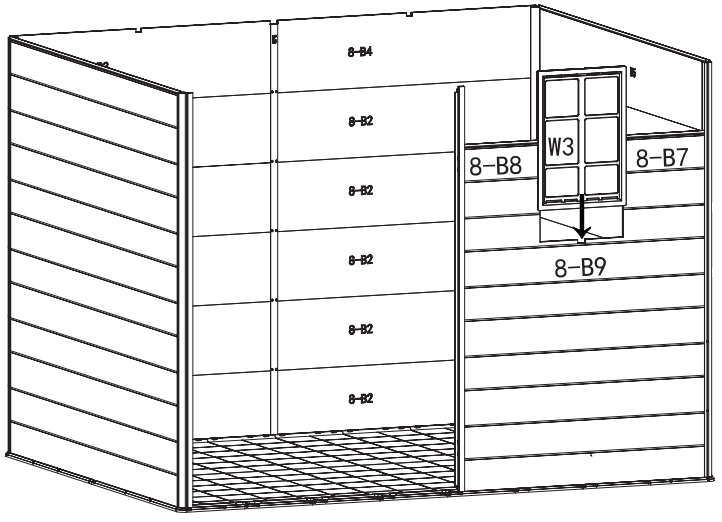



STEP 27

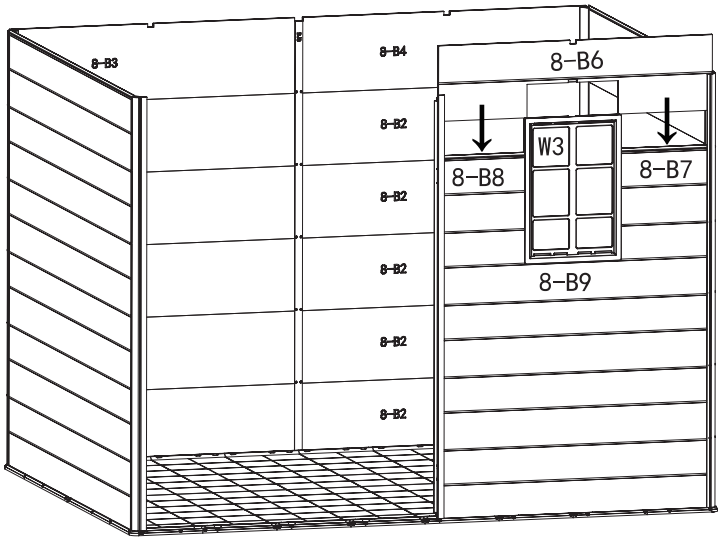


STEP 28


For details, see STEP 18

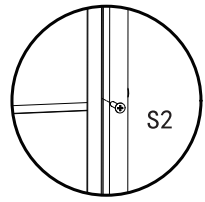

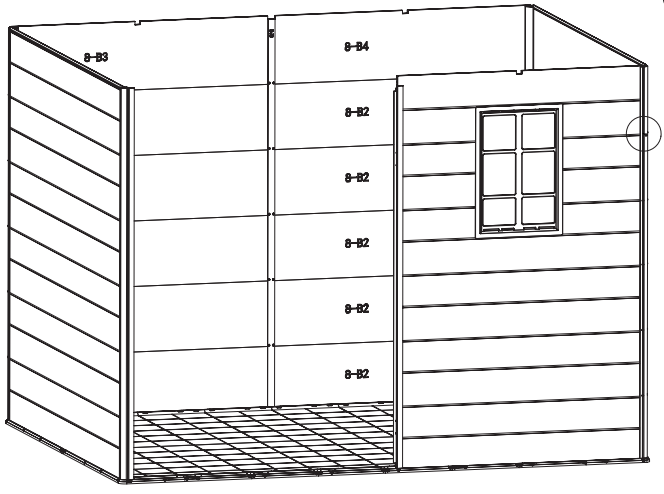





STEP 29

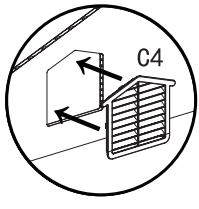



X2

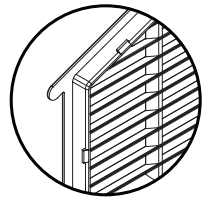

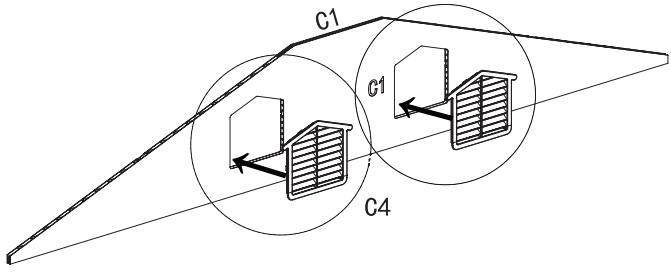


STEP 30

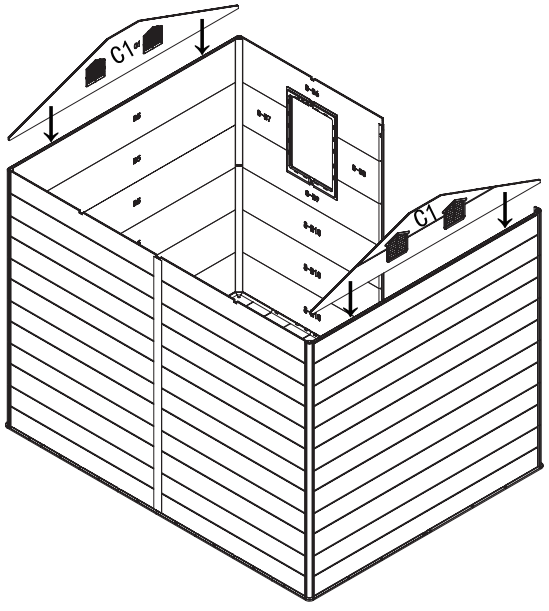


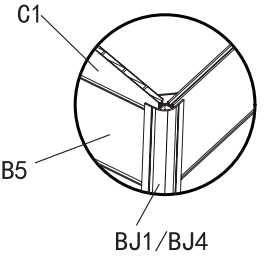

STEP 31

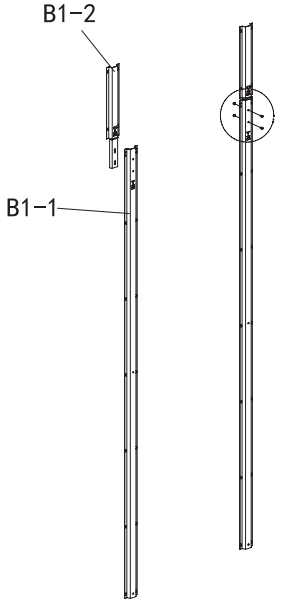



X2

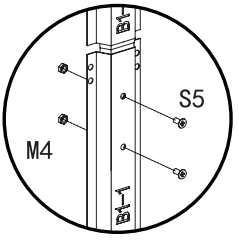


S5	M4
4 pcs	4 pcs

STEP 32

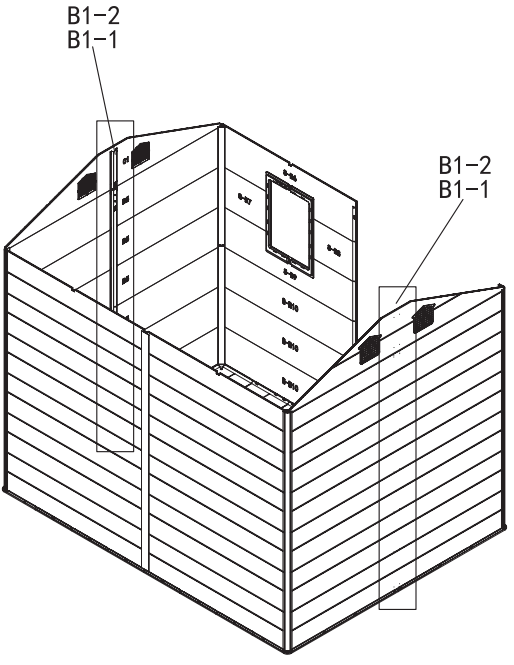

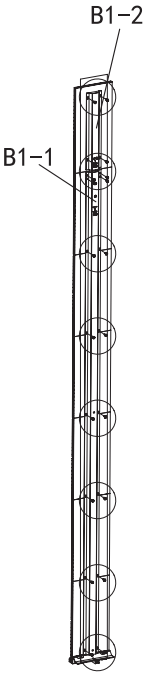

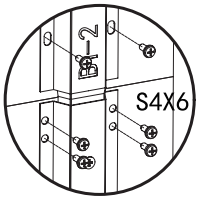


Place it centered on C1 and B5.


X2


S4
40 pcs

STEP 33

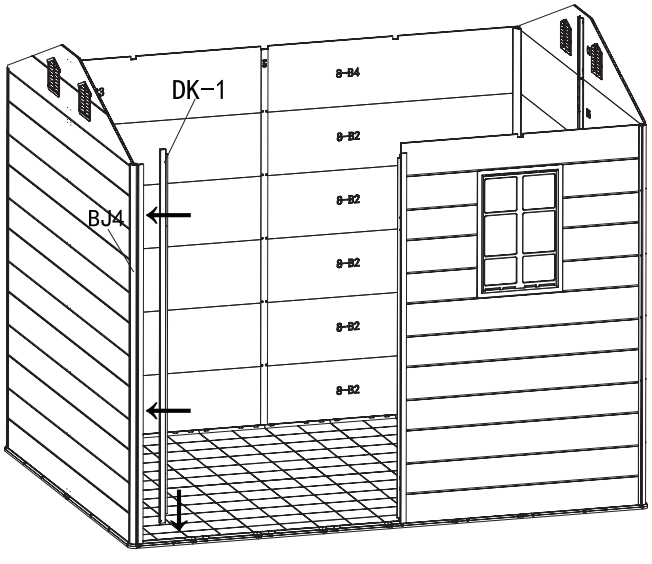


STEP 34

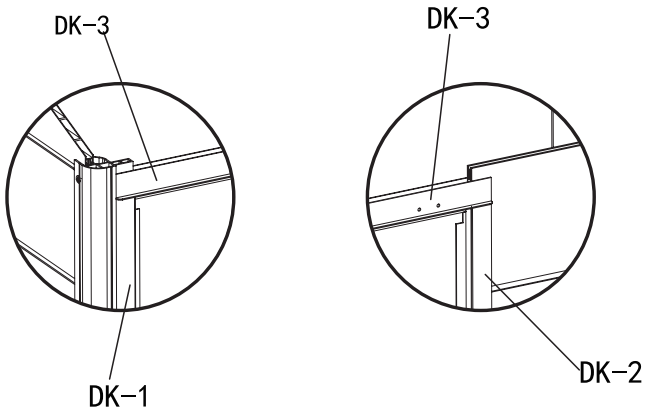


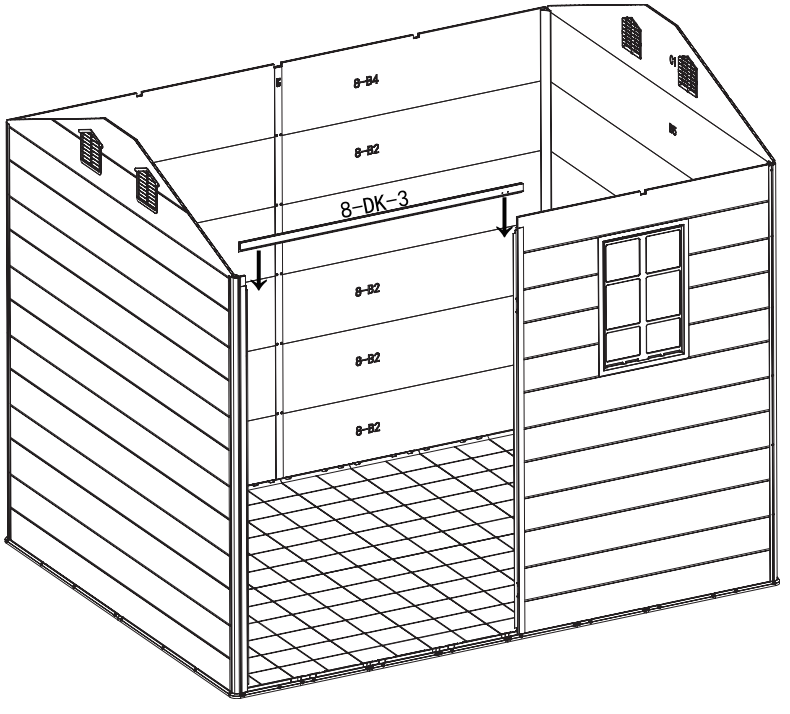


STEP 35


Verify that the door frame dimensions are within tolerance: 65.7 ± 0.2 inches in height, 46.3 ± 0.2 inches in width, and 80.4 ± 0.2 inches diagonally. Only proceed with screw installation once all measurements are confirmed.

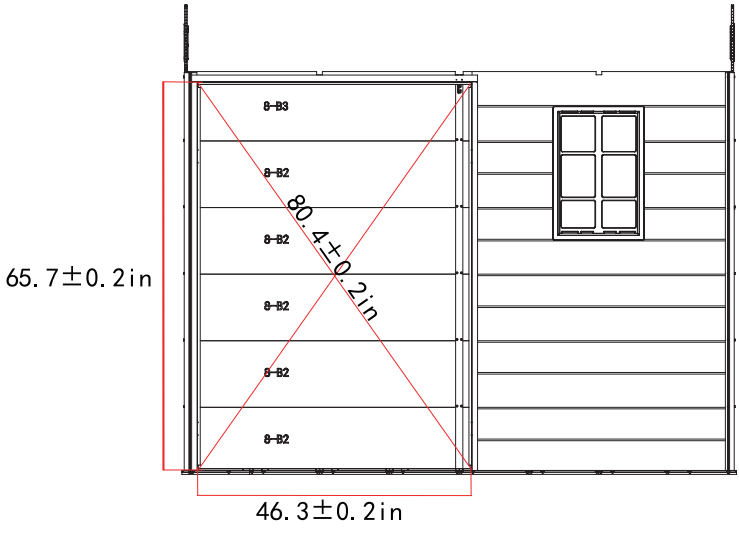

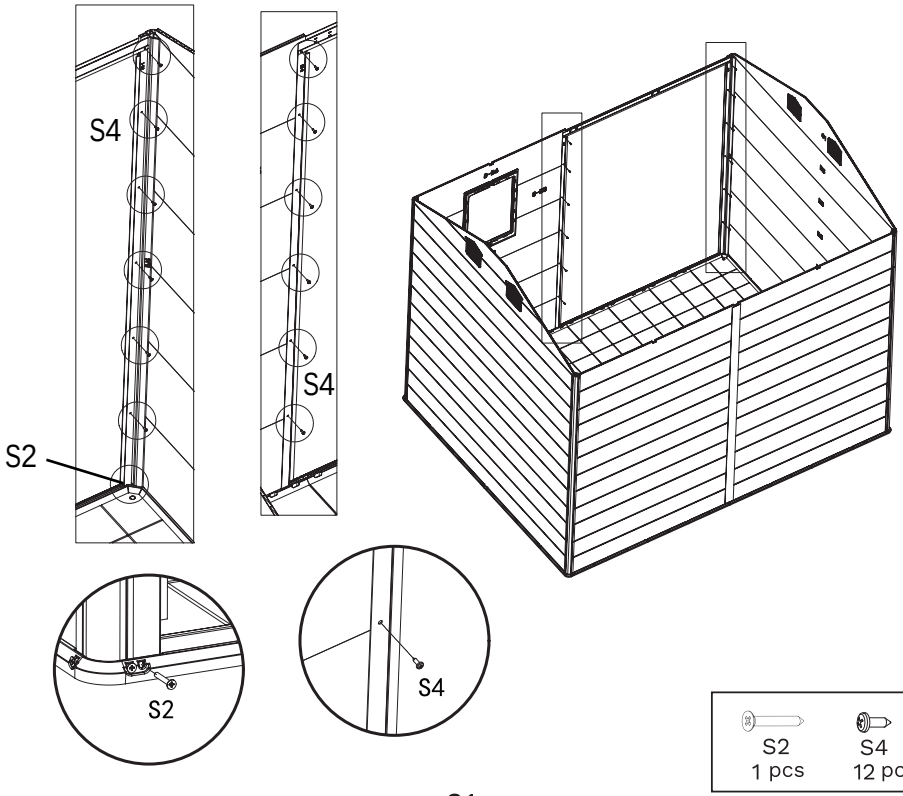

STEP 36

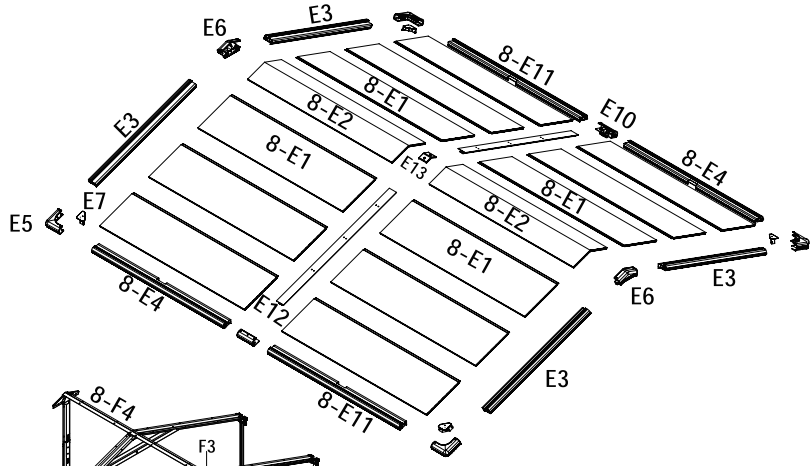


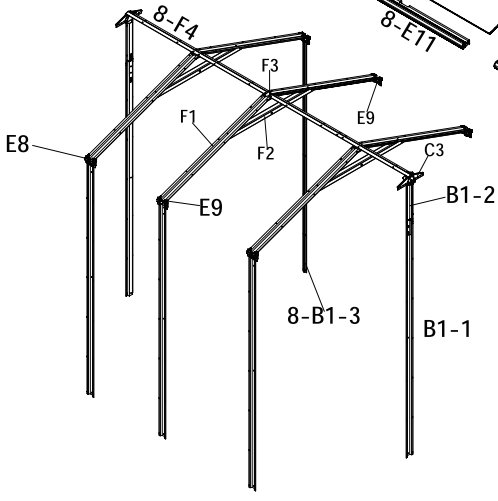


Parts List

1. 8-E1X12
2. 8-E2X2
3. E3X4
4. 8-E4X2
5. E5X4
6. E6X2
7. E7X4
8. E8X4
9. E9X2
10. E10X2
11. 8-E11X2
12. E12X2
13. E13X1
14. F1X6
15. F2X3
16. F3X3
17. 8-F4X2
18. B1-1X5
19. B1-2X2
20. 8-B1-3X1
21. C3X2


STEP 37

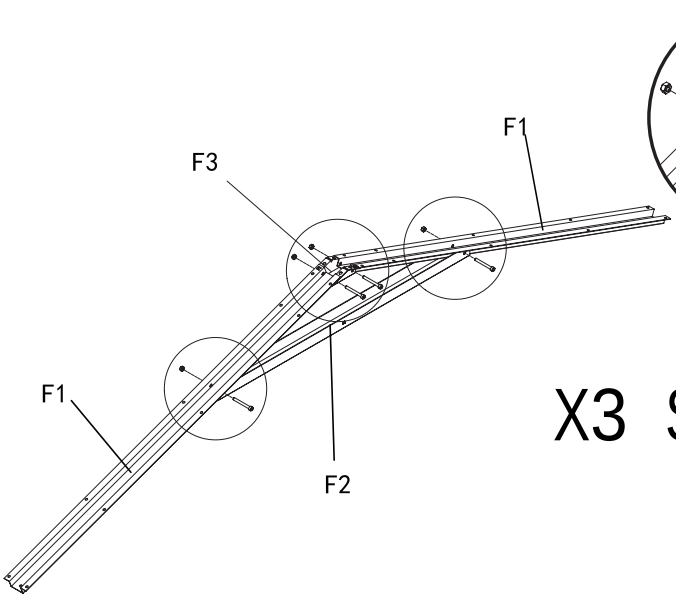

X3 Set




STEP 38

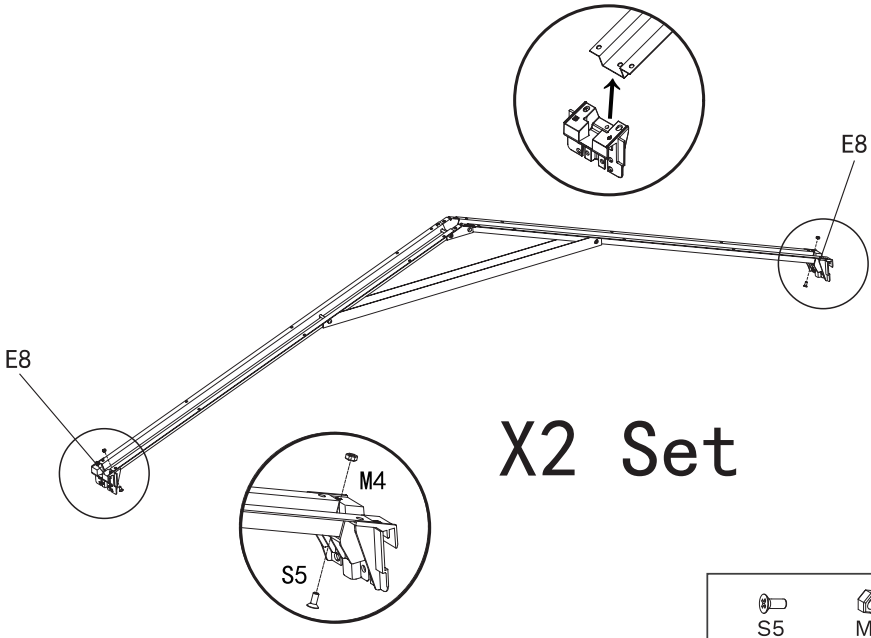


S5	M4
4 pcs	4 pcs

STEP 39

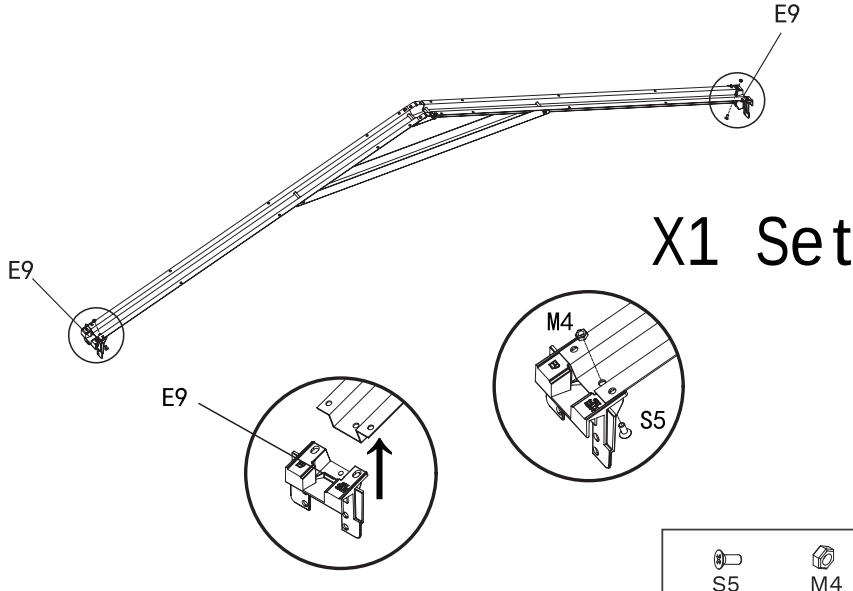

S5	M4
2 pcs	2 pcs


STEP 40

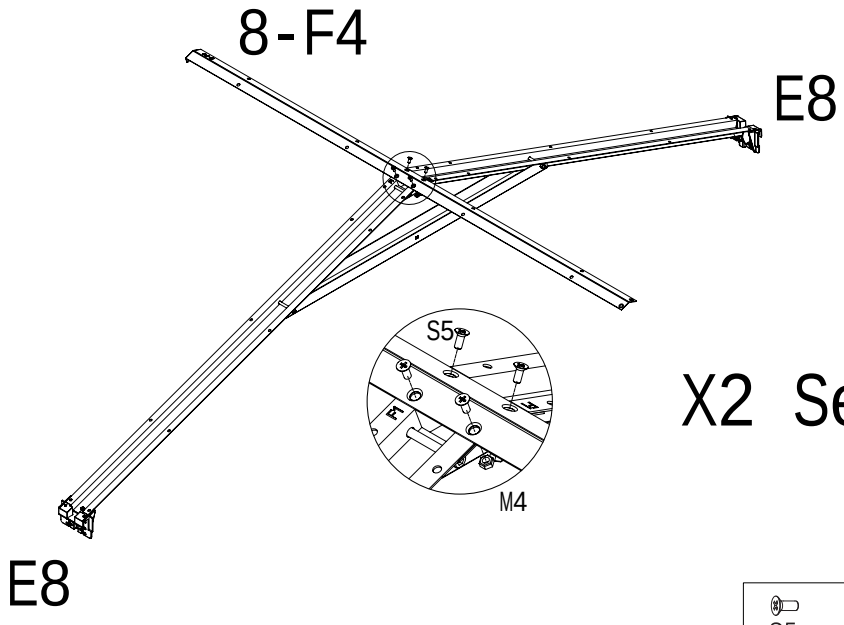

S5 8 pcs


M4 8 pcs

STEP 41

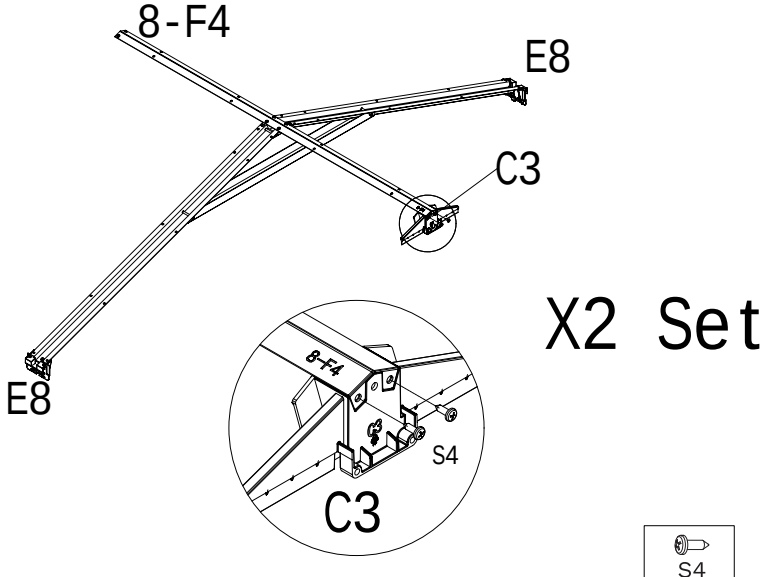


S4 4 pcs

STEP 42

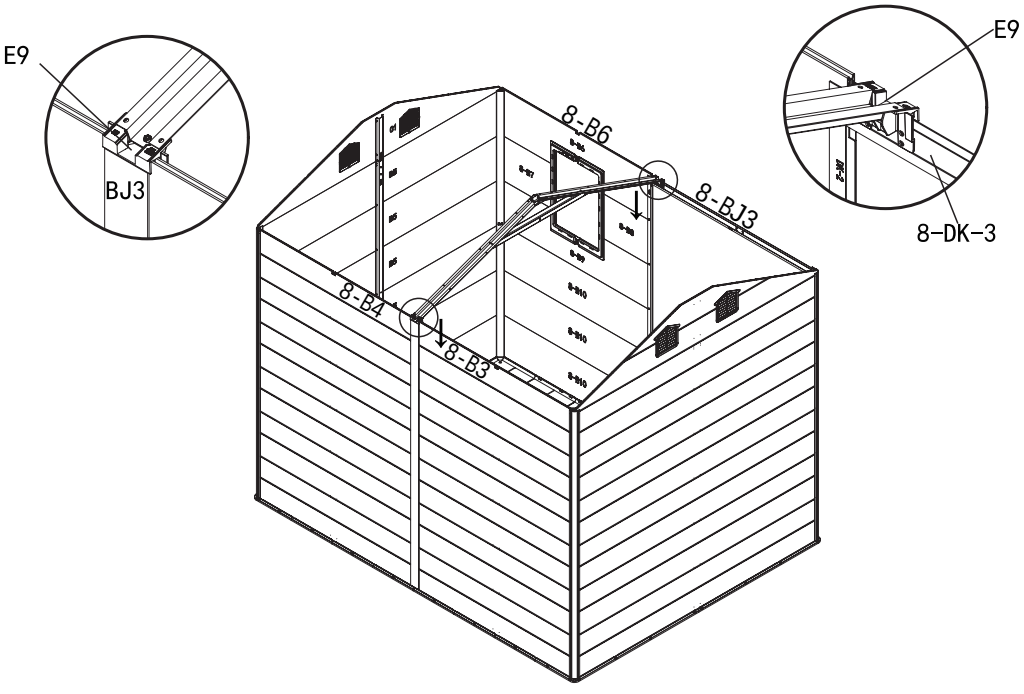


STEP 43

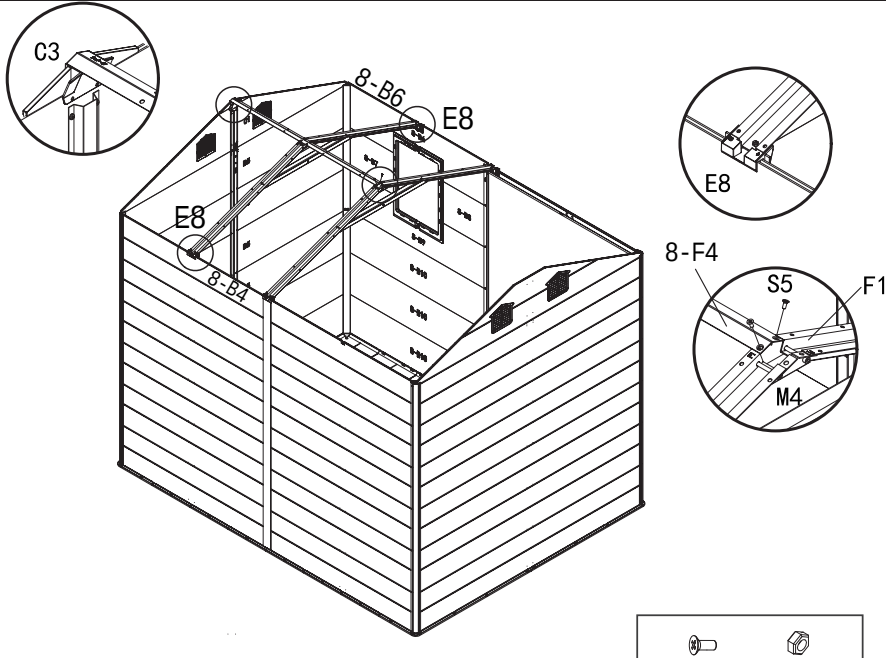


S5	M4
2 pcs	2 pcs


STEP 44

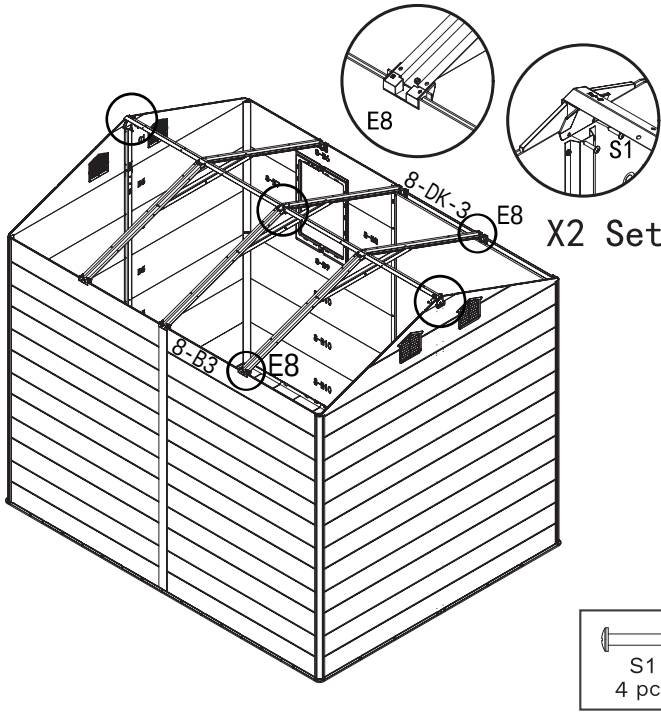

S1	S5	M4
4 pcs	2 pcs	2 pcs


STEP 45

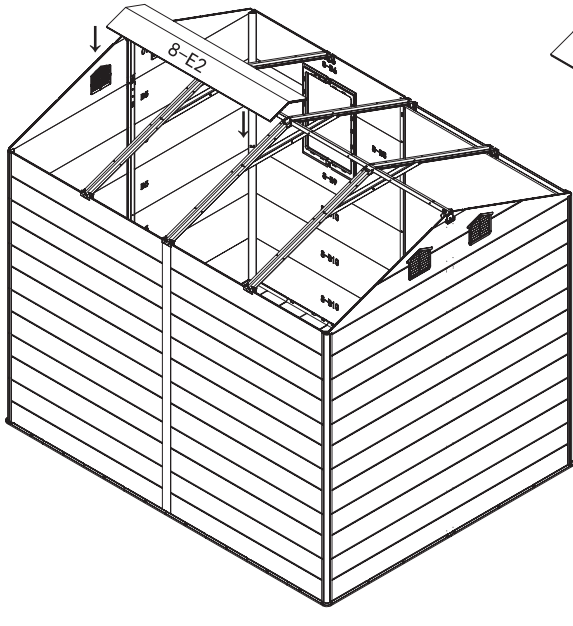


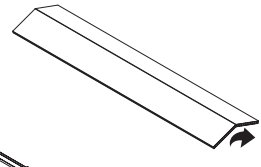


8-E2
Bend 8-E2.

STEP 46

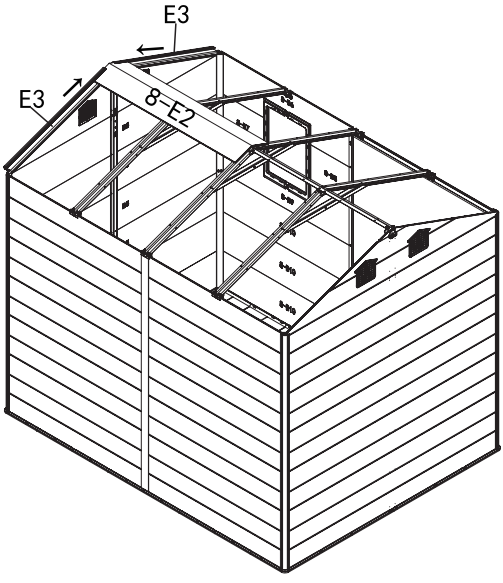

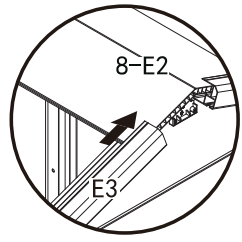



Install E3

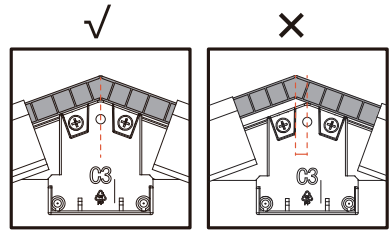

Verify that 8-E2,C3 is centered


STEP 47

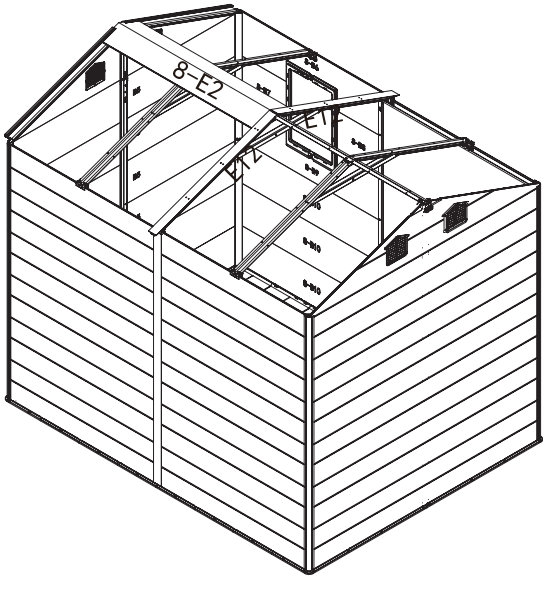


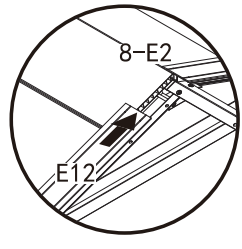


Installing E12


STEP 48

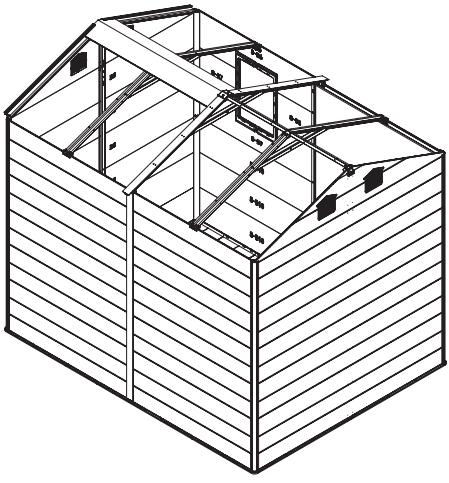

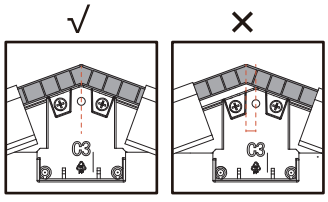


Ensure that 8-E2,C3 is centered before installing screw S4.

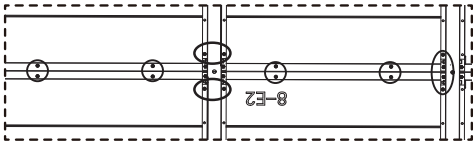


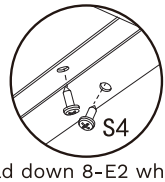


Hold down 8-E2 while installing screw S4.



STEP 49

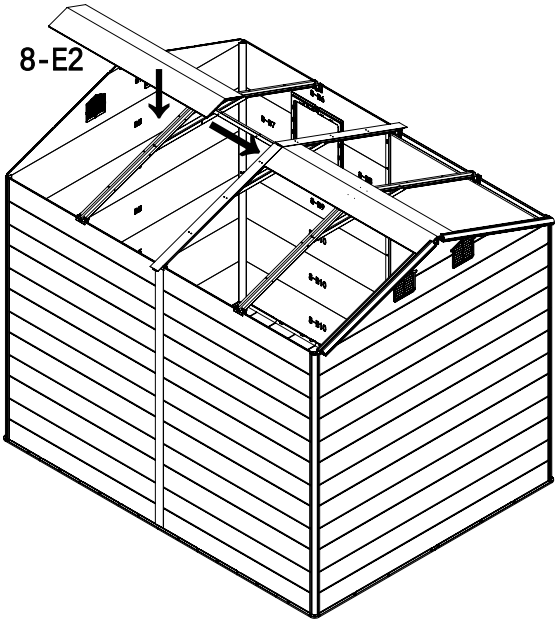


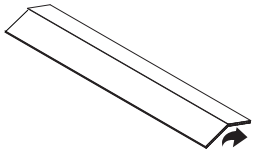


8-E2


Bend 8-E2.

STEP 50

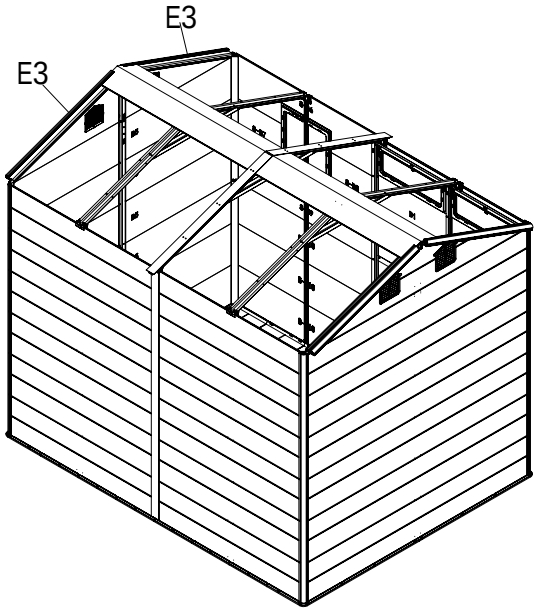

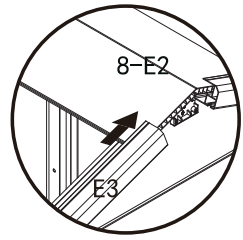



Install E3

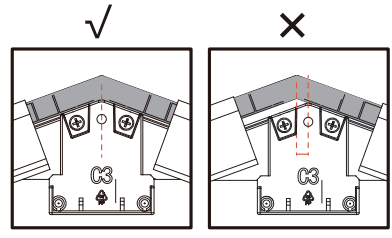


Verify that 8-E2,C3 is centered


STEP 51

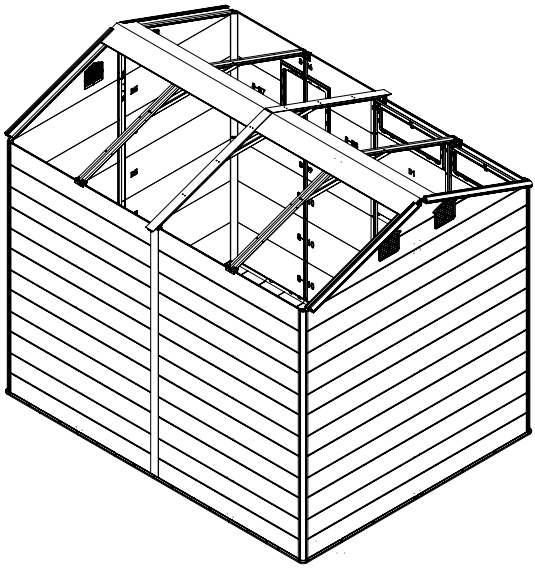

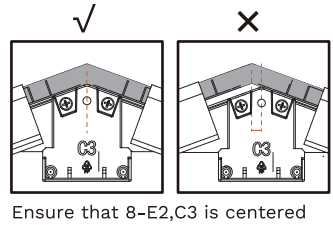

Ensure that 8-E2,C3 is centered before installing screw S4.

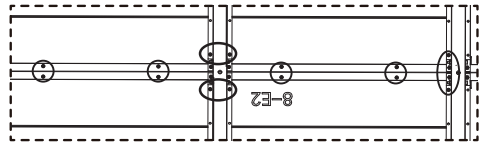


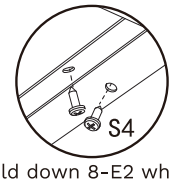



Hold down 8-E2 while installing screw S4.

S4
14 pcs


STEP 52

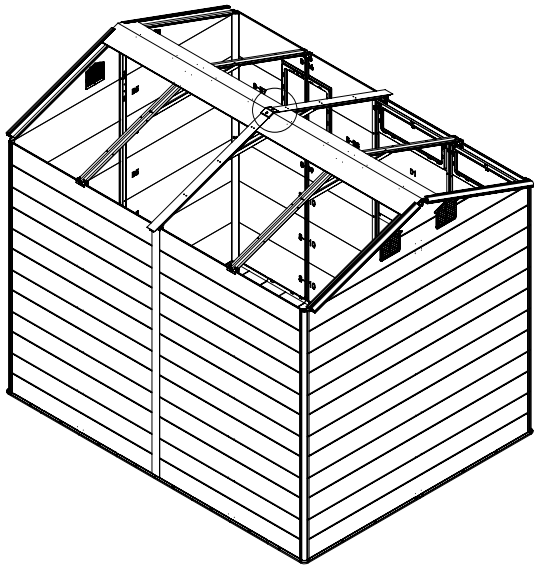


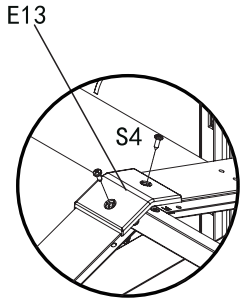





STEP 53

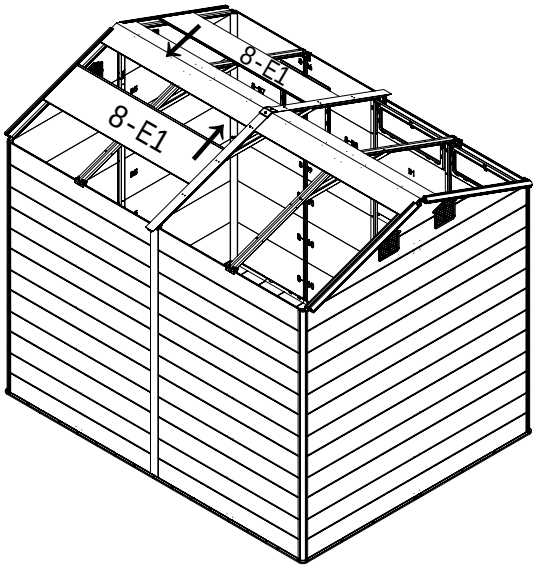


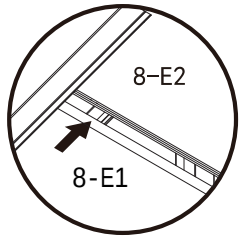


STEP 54

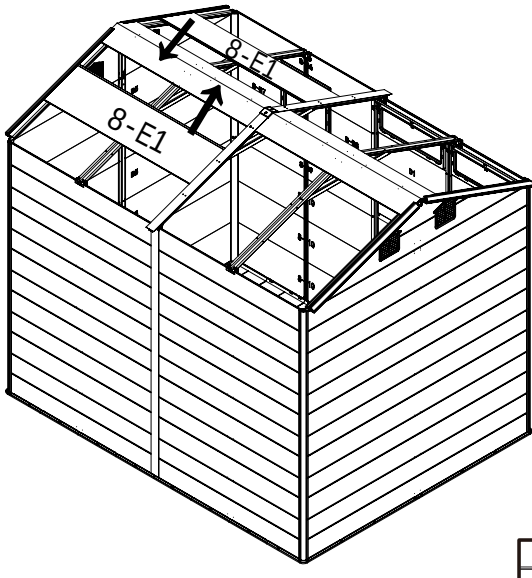

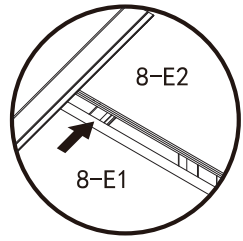


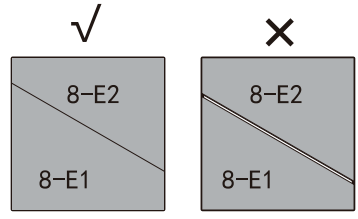



Check the gap between the inner sides of plates 8-E1 and 8-E2.

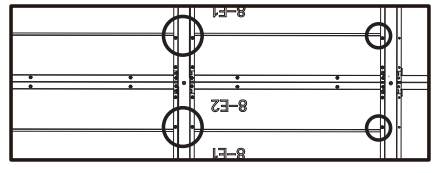

Hold down the upper roof panel while installing screw S4.

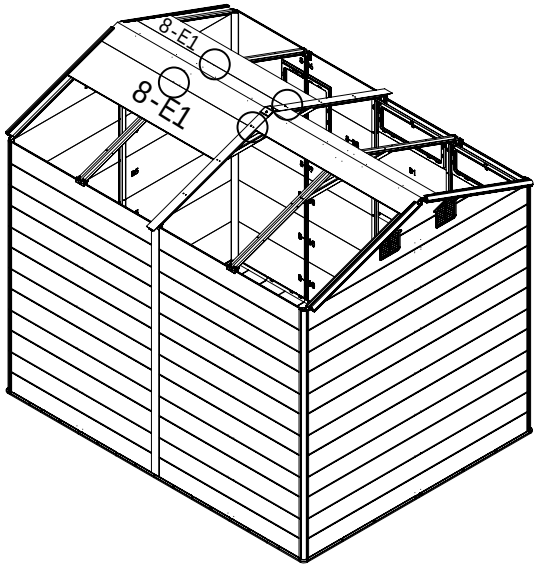


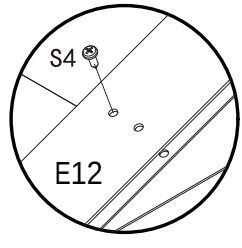


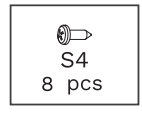


STEP 55


For details, see STEP 54

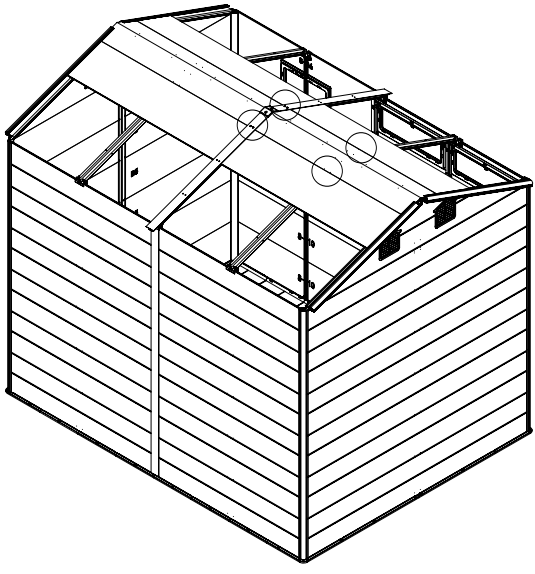


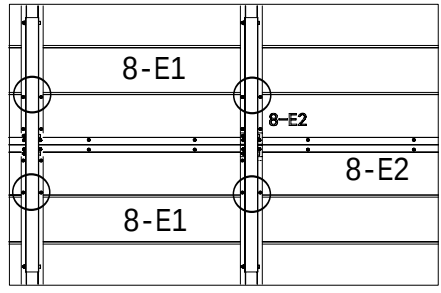

Hold down the upper roof panel while installing screw S4.

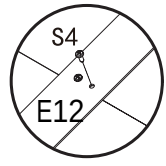


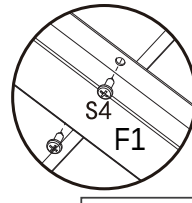





STEP 56


For details, see STEP 54

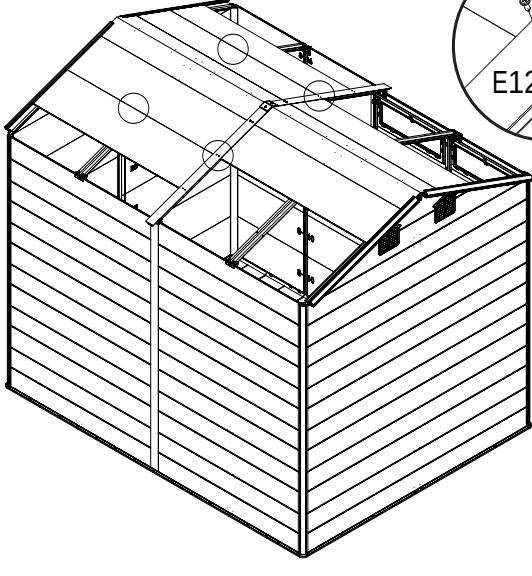


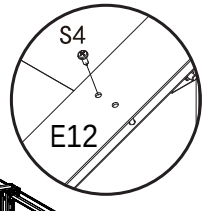

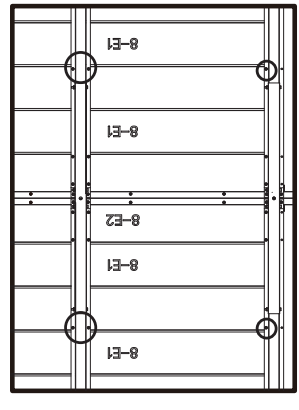


Hold down the upper roof panel while installing screw S4.

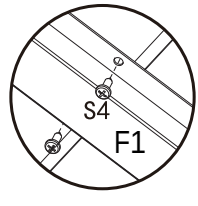


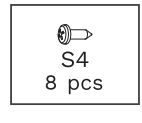


STEP 57


For details, see STEP 54

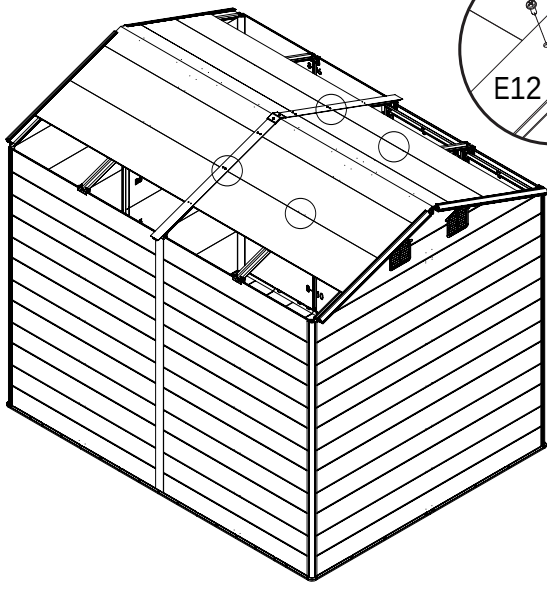


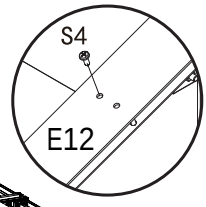

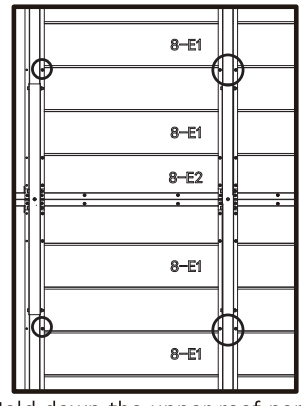


Hold down the upper roof panel while installing screw S4.

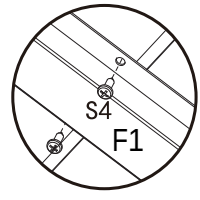





STEP 58


For details, see STEP 54

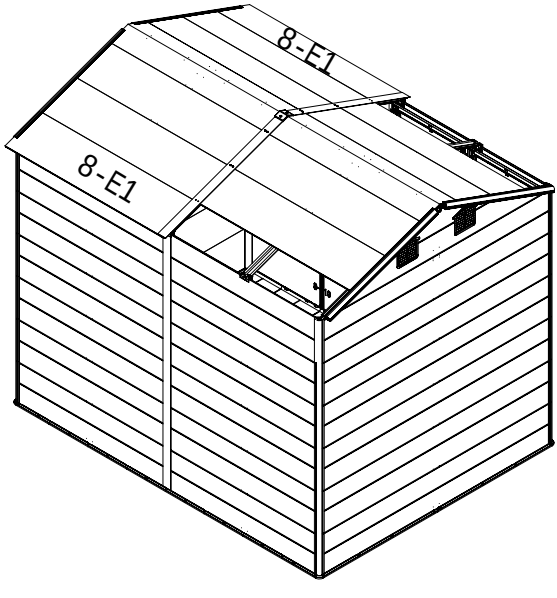

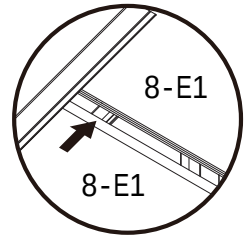



STEP 59

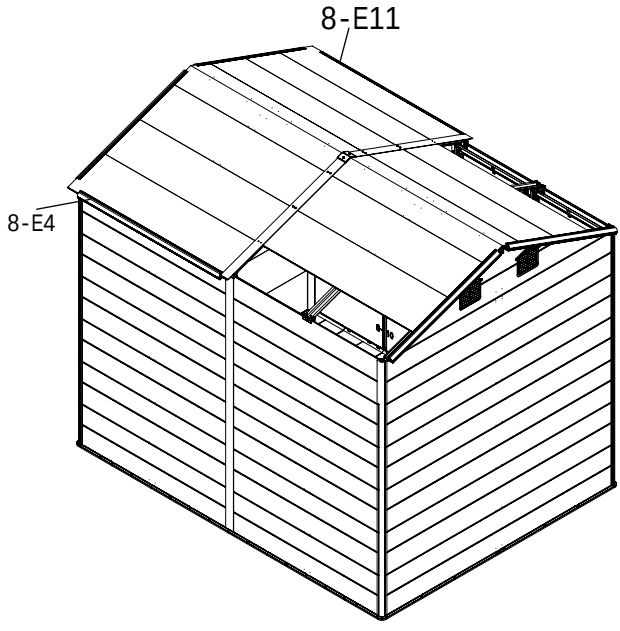


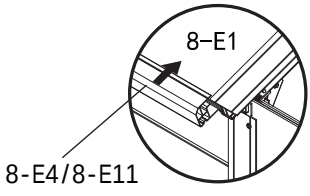

Gently lift 8-E1, align 8-E4/8-E11 with 8-E1,push forward, and buckle down into the wall panel

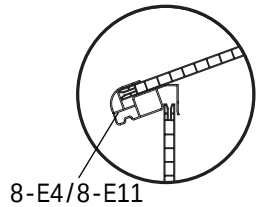


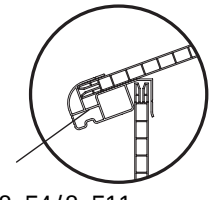


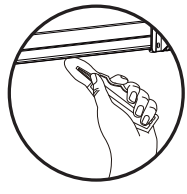


Adjust with a scraper

STEP 60

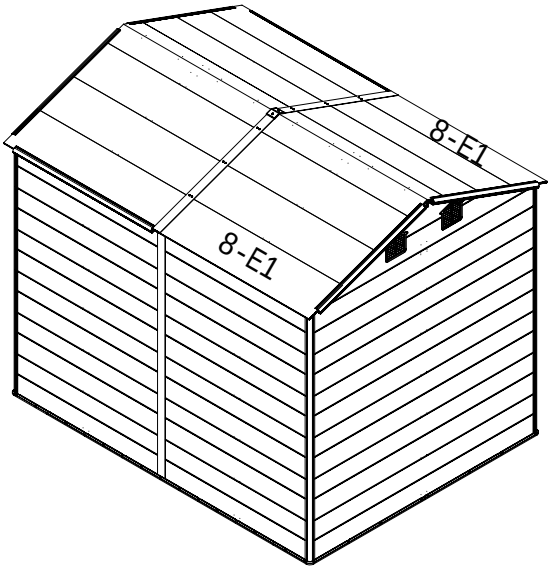


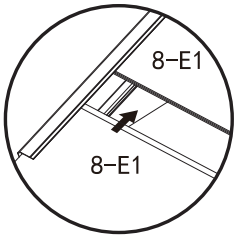





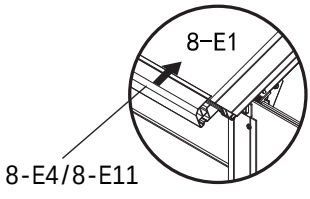


Gently lift 8-E1, align 8-E4/8-E11 with 8-E1,push forward, and buckle down into the wall panel

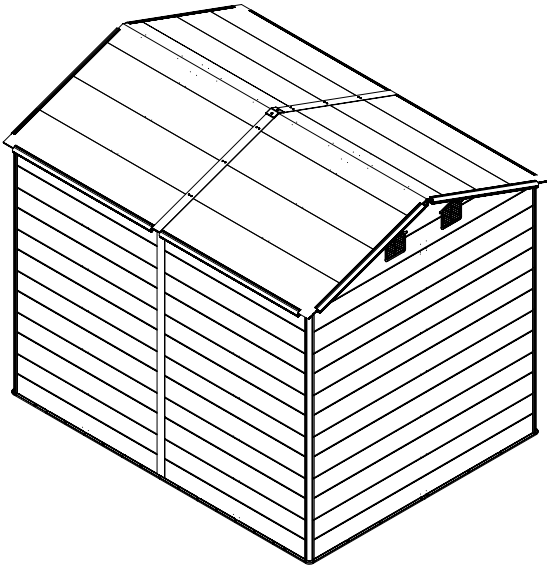

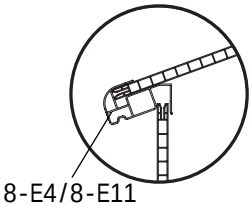


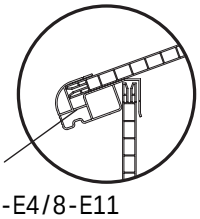

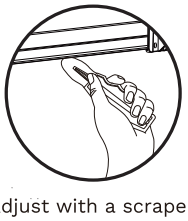



Adjust with a scraper


STEP 61

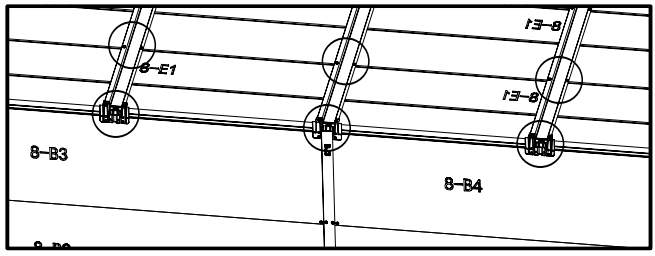



Hold the top roof panel 8-E1 while installing the screws S4.
Note
that the screws S4 should also be installed in the same position on the other side of the roof panel.

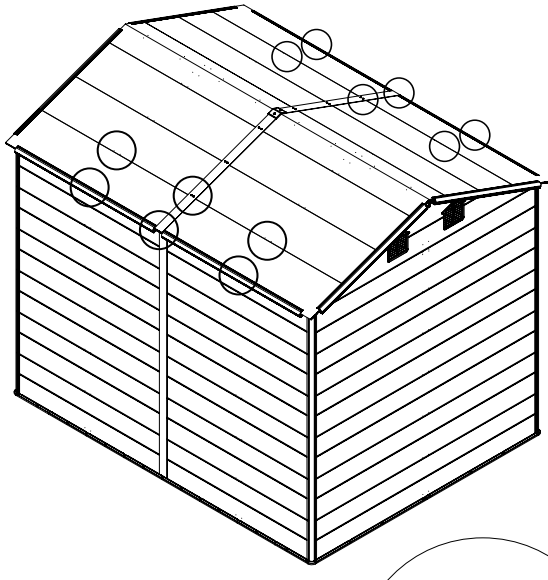


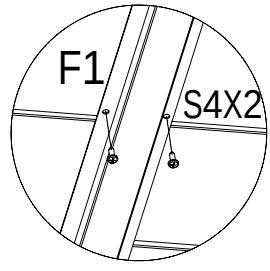

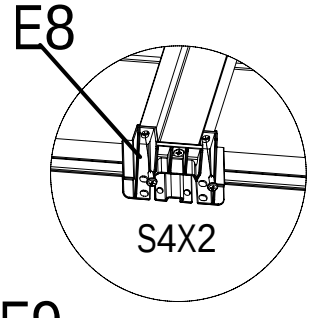


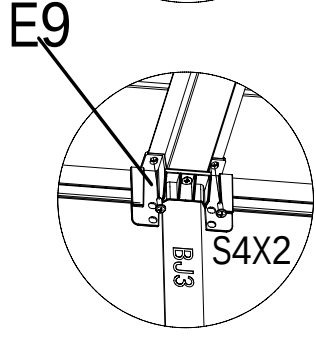


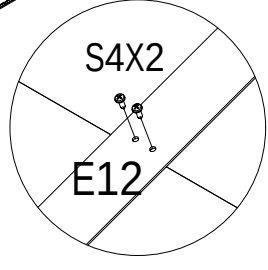


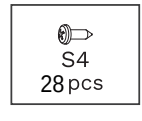


STEP 62

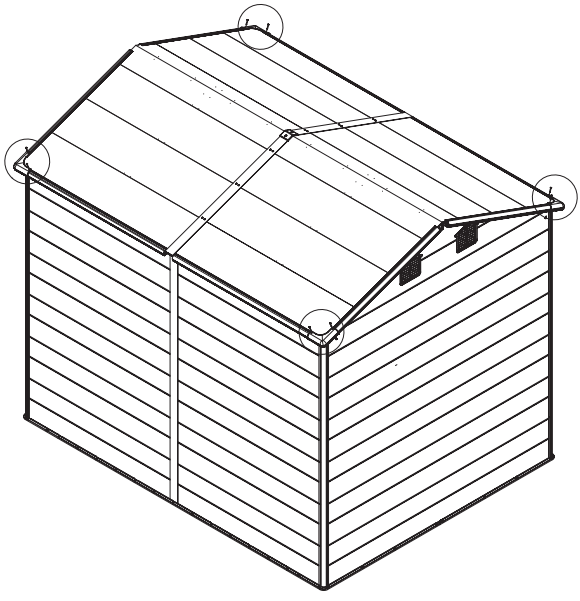

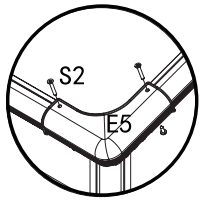


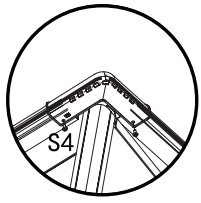





STEP 63


Note: Please check whether the buckle of E6 is fastened to the corresponding position, and then install S2 and S4.

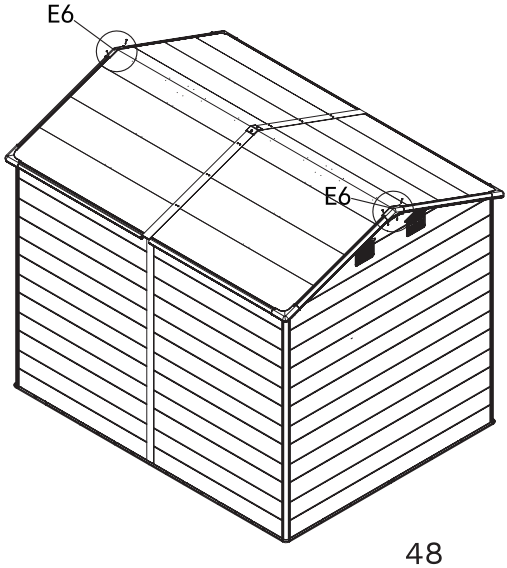


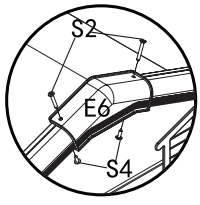


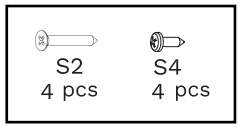


STEP 64

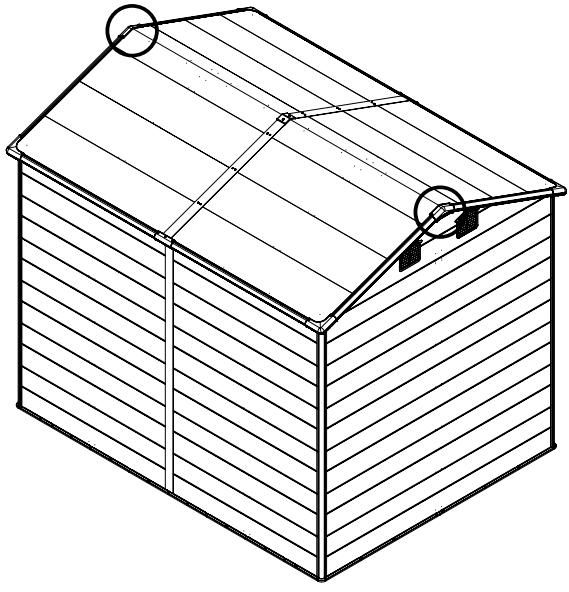


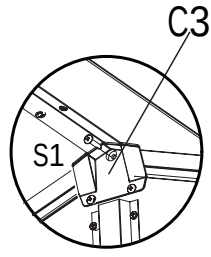


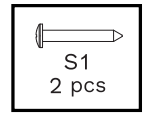


STEP 65

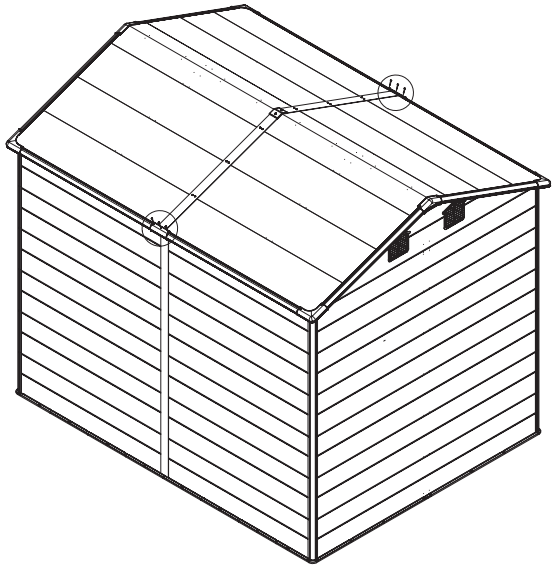


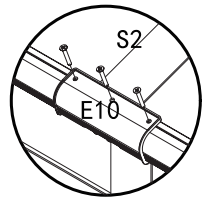


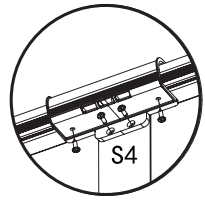

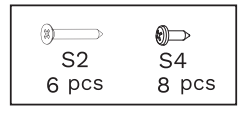



STEP 66

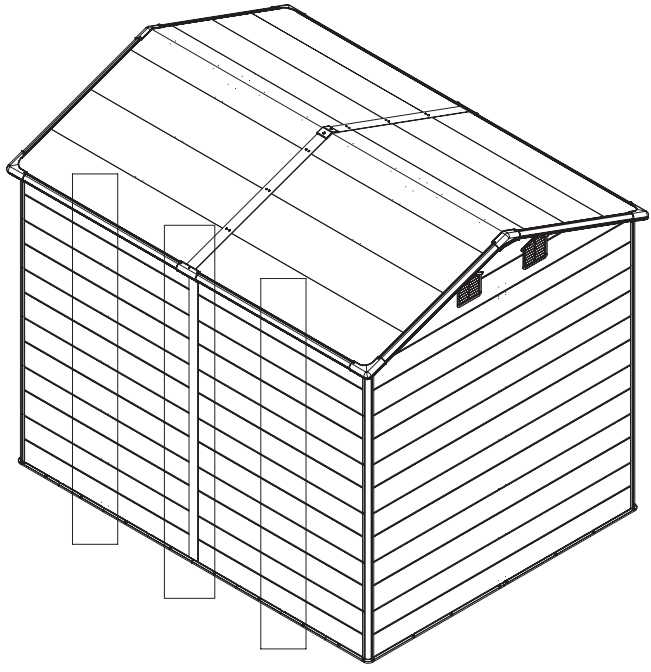


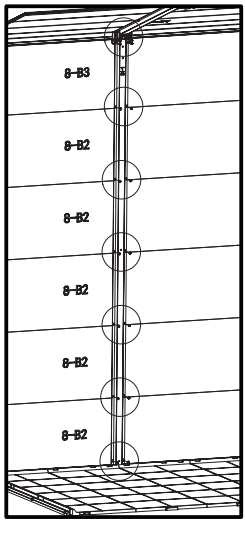

X3 Set

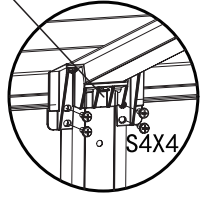

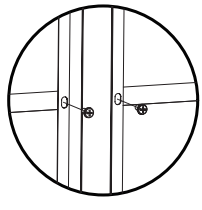


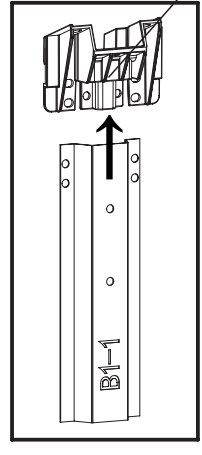


Insert B1-1 into the corresponding slots on E8 and E9.


S4
48 pcs


STEP 67

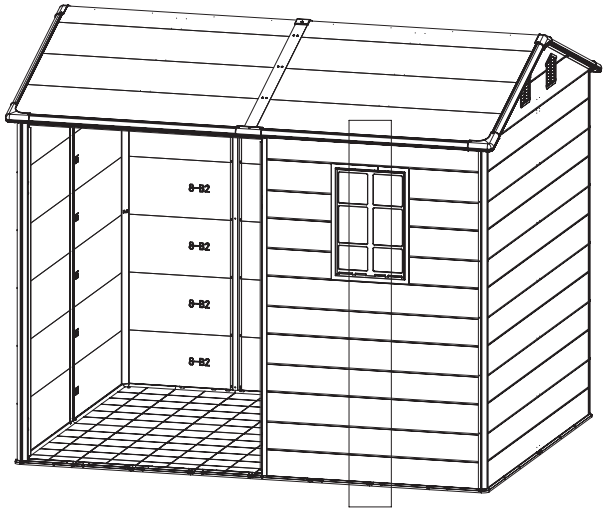


Place 8-B1-3 into the W3 window frame groove.

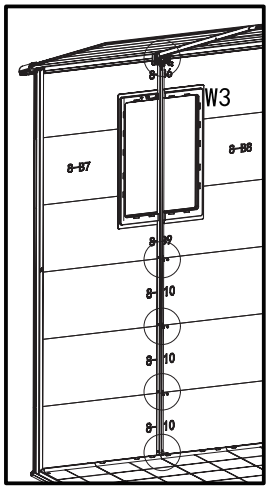


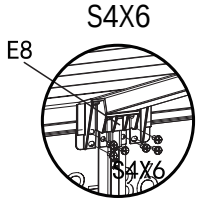

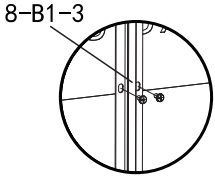


Insert B1-1 into the slot corresponding to E8.

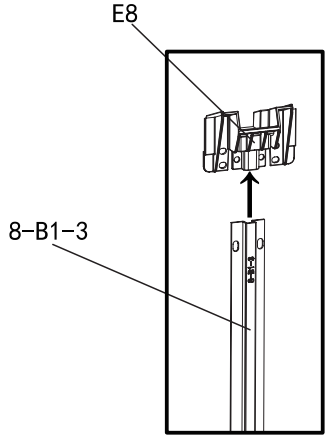


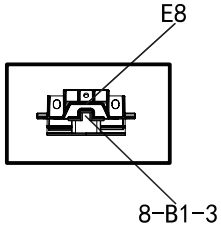


S4
14 pcs

STEP 68

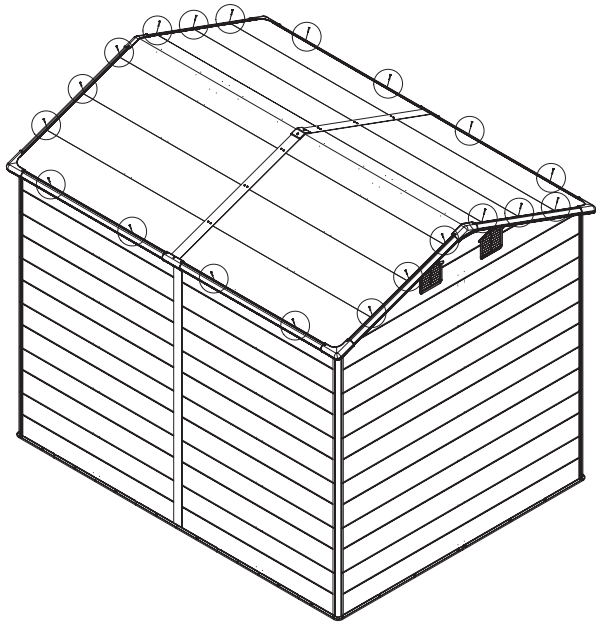


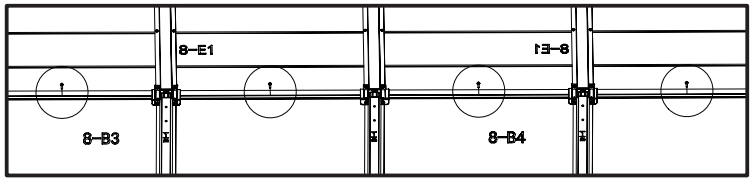


X2

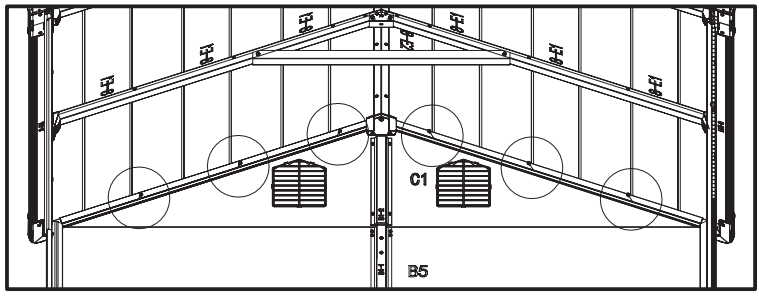


X2

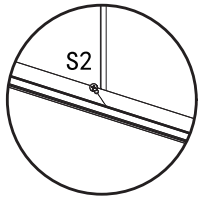


20 external screws and 20 internal screws.

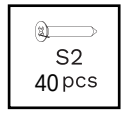


STEP 69

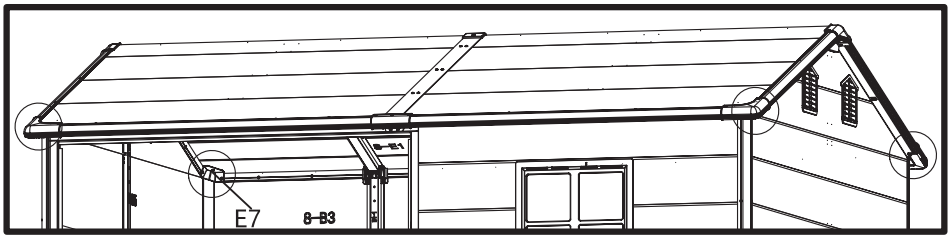

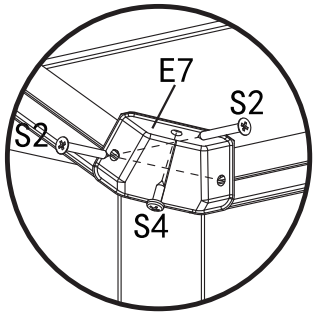


Please install S4 first and then S2.

X4

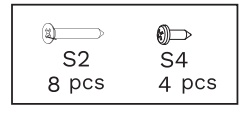


Door checklist

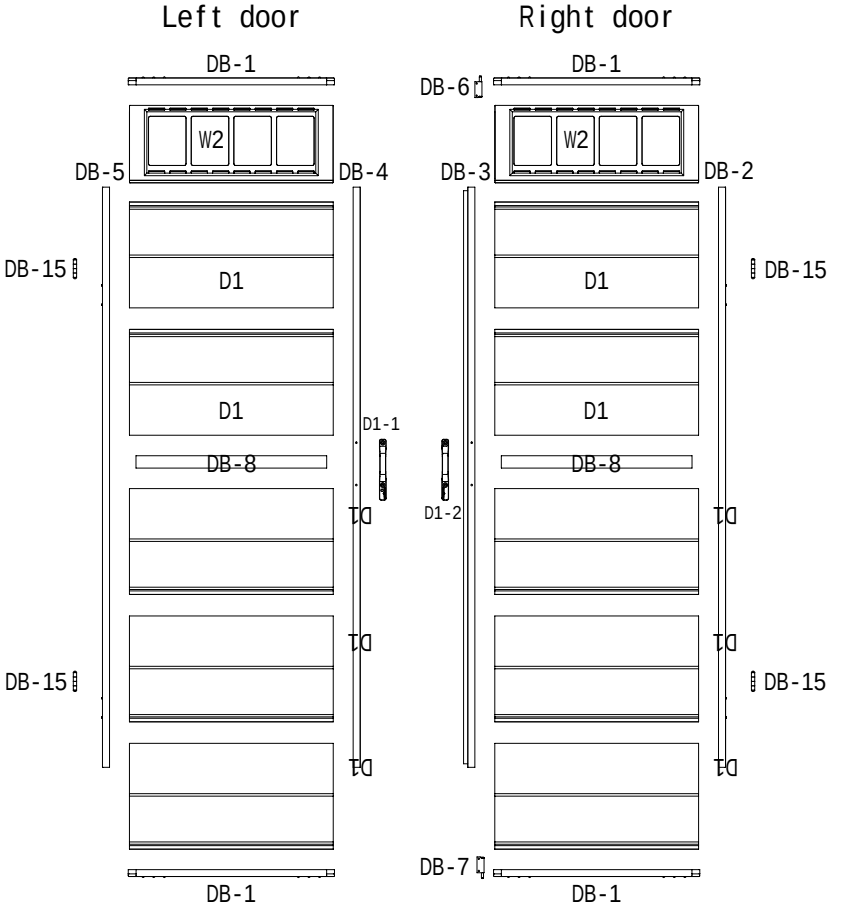

1. D1X10
2. D1-1X1
3. D1-2X1
4. DB-1X4
5. DB-2X1
6. DB-3X1
7. DB-4X1
8. DB-5X1
9. DB-6X1
10. DB-7X1
11. DB-8X2
12. DB-15X4
13. W2X2

STEP 70

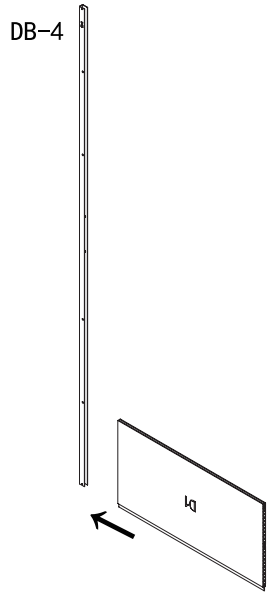


Note:


When installing the door panels,
install the first three boards upside down.

Install with the wood grain facing out and
the screw holes facing in.

STEP 71

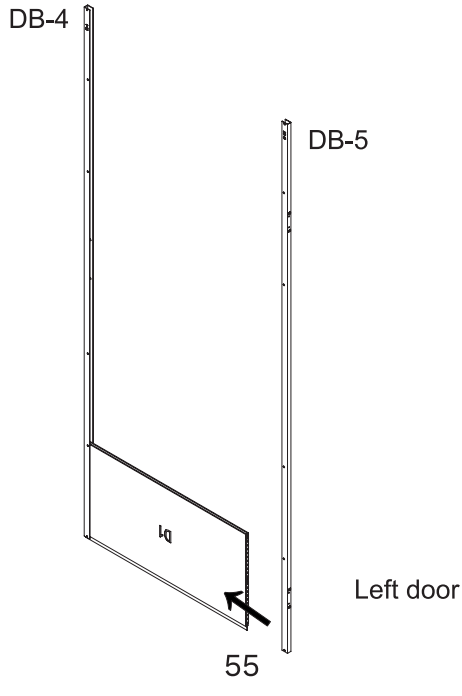


STEP 72

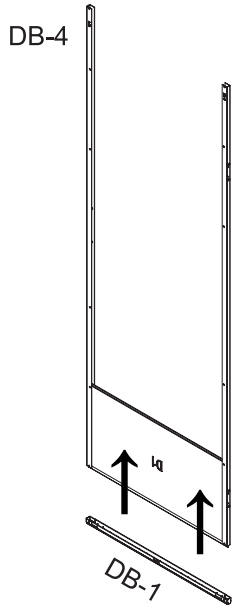


Left door

STEP 73

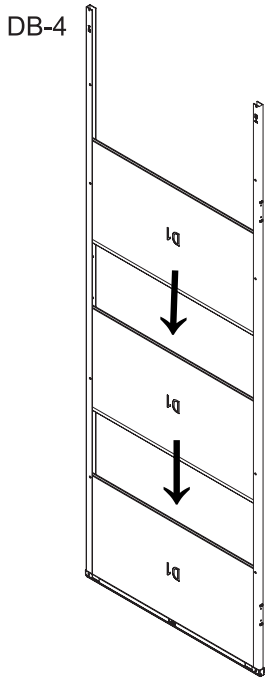


Left door

STEP 74

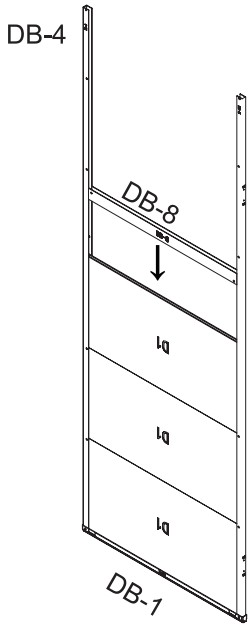


Left door

STEP 75

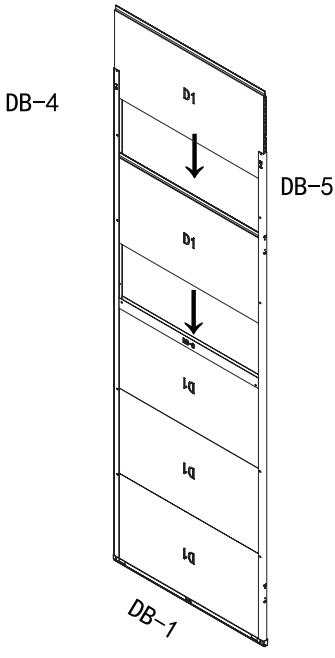

Left door


STEP 76

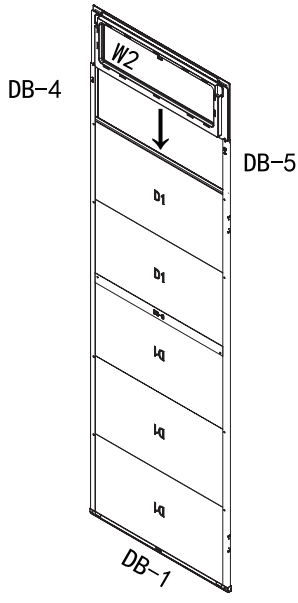


Left door

STEP 77


Before installing the screws,please be sure to verify the specific dimensions of the door:a length of 65.5±0.2 inches, a width of 23±0.2 inches,and a diagonallength of 69.3±0.2 inches.The margin of error must be within 0.2 inches. Once confirmed,you may proceed with the screw installation.

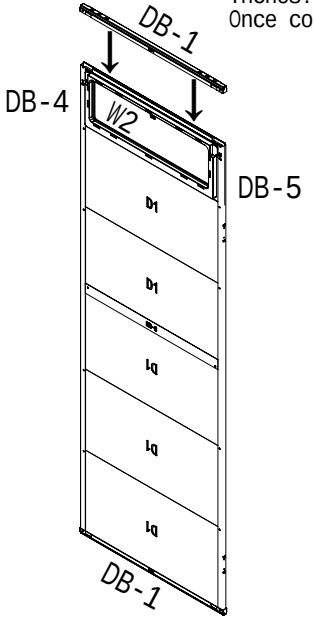


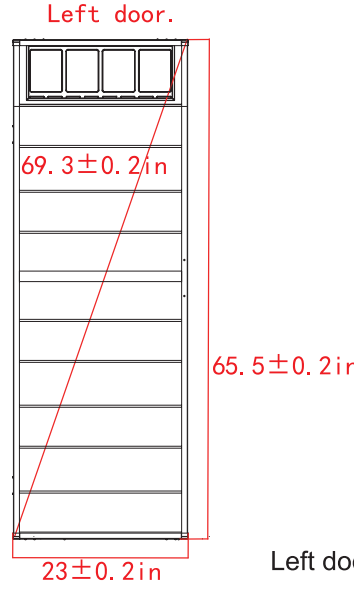

Left door

STEP 78

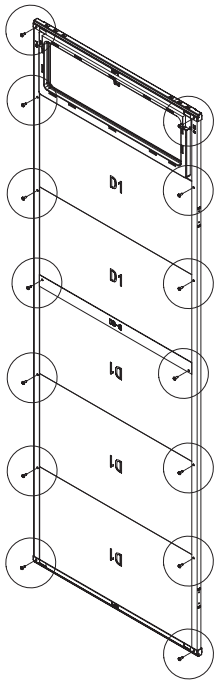


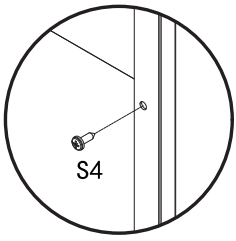


Left door

S4
14 pcs

STEP 79

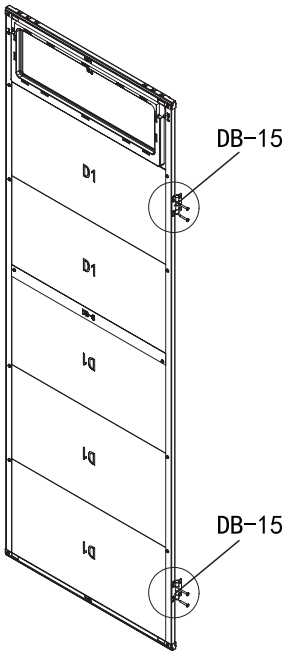


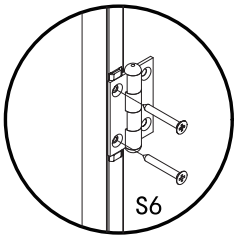

Left door

S6
4 pcs

STEP 80

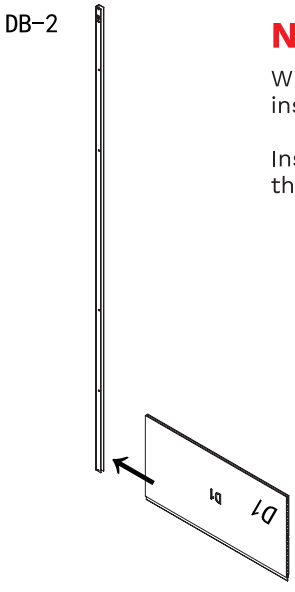


Note:

When installing the door panels,
install the first three boards upside down.

Install with the wood grain facing out and
the screw holes facing in.


Right door

STEP 81

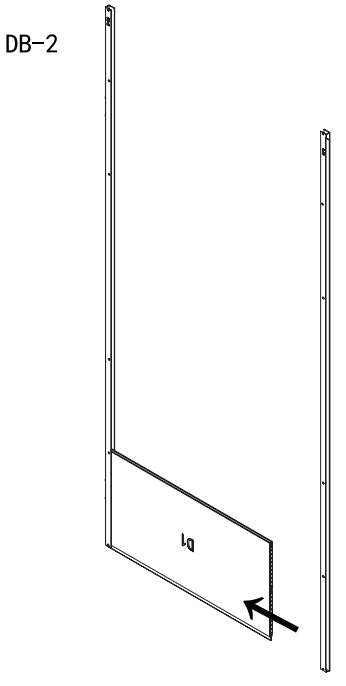


Right door

STEP 82

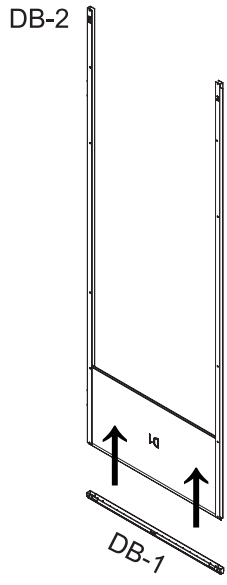


Right door

STEP 83

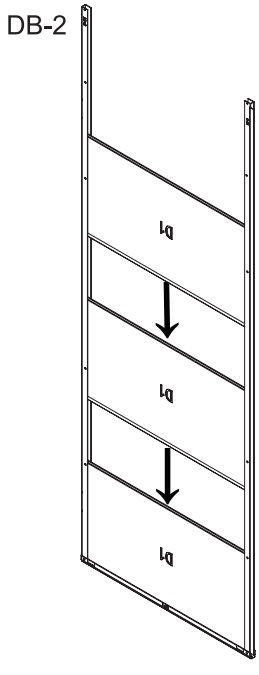


Right door

STEP 84

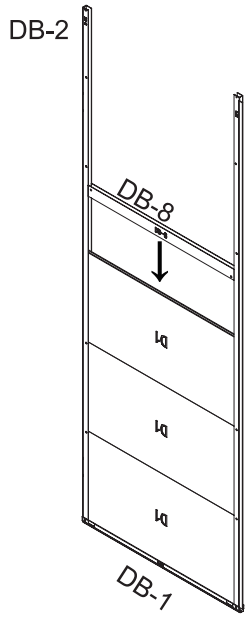


Right door

STEP 85

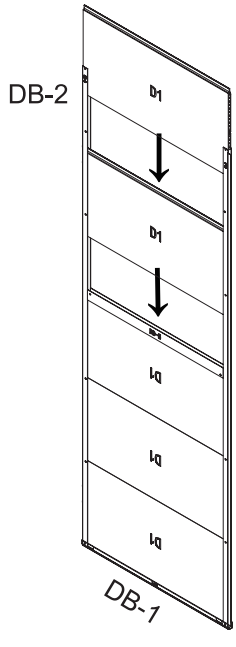


Right door

STEP 86

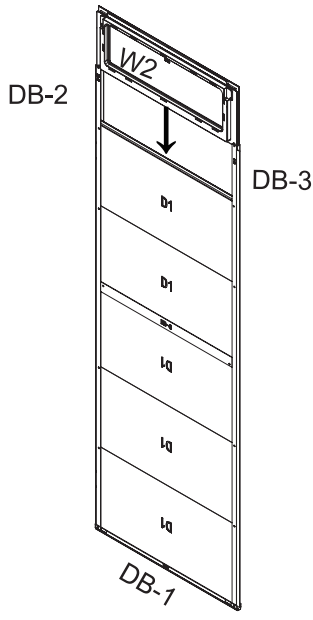


Right door

STEP 87

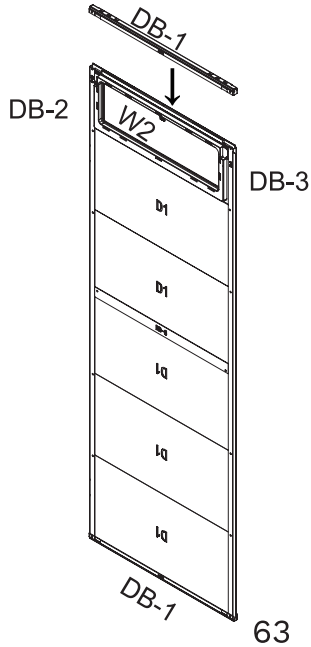

Right door


STEP 88

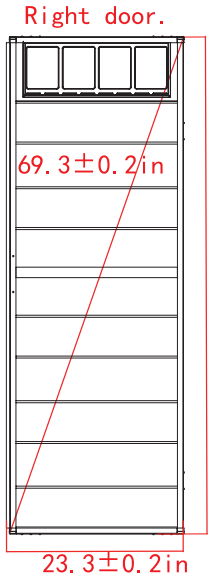

Note


Before installing the screws, please be sure to verify the specific dimensions of the door :a length of 65.5±0.2 inches,a width of 23±0.2 inches,and a diagonallength of 69.3±0.2 inches.The margin of error must be within 0.2 inches.
Once confirmed,you may proceed with the screw installation.


STEP 89

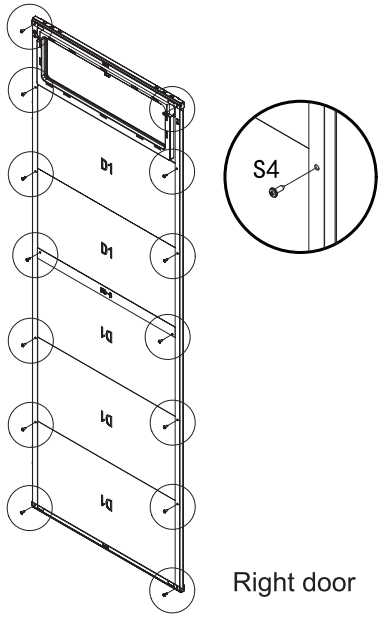

Right door

STEP 90

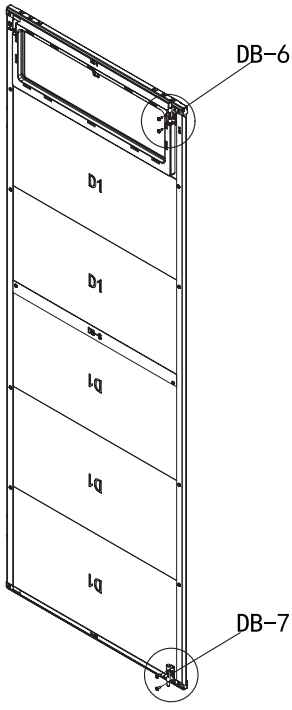


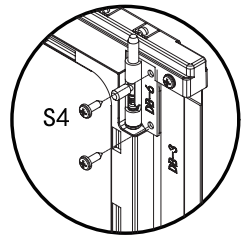


Right door

S4
4 pcs

STEP 91

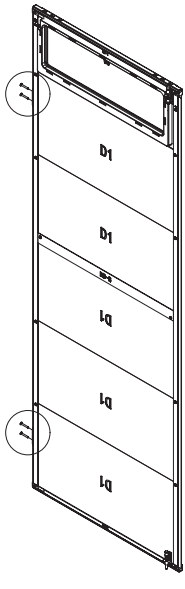


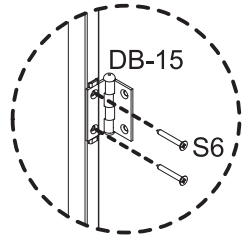

Right door


S6
4 pcs


STEP 92

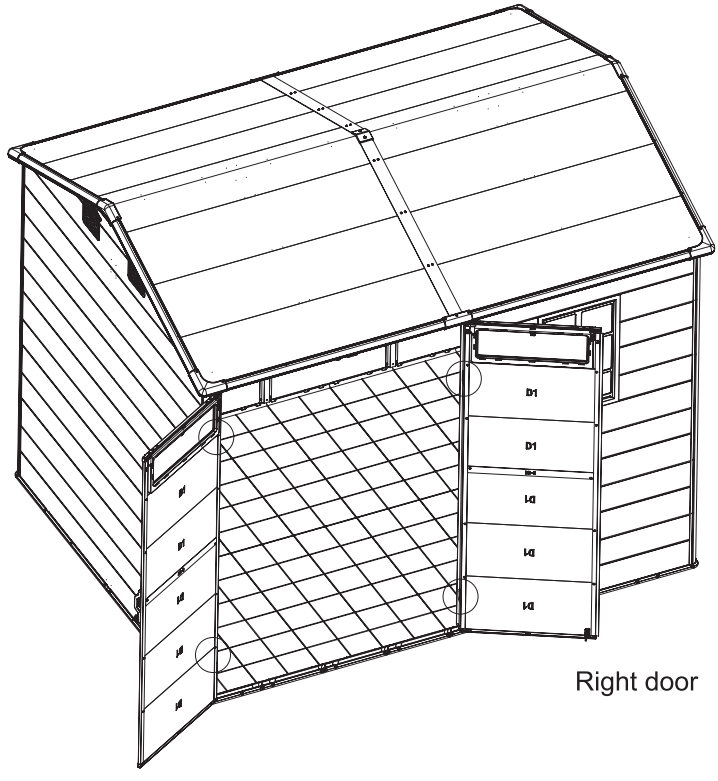


Right door


Left door

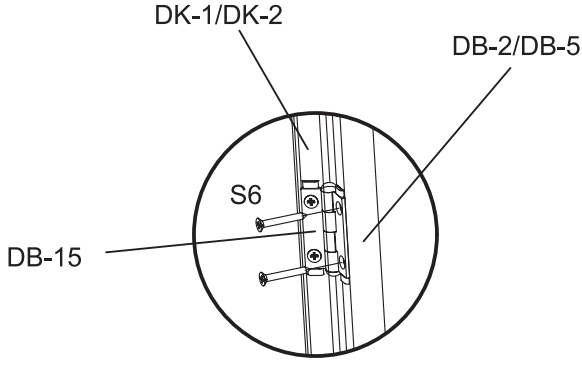




STEP 93

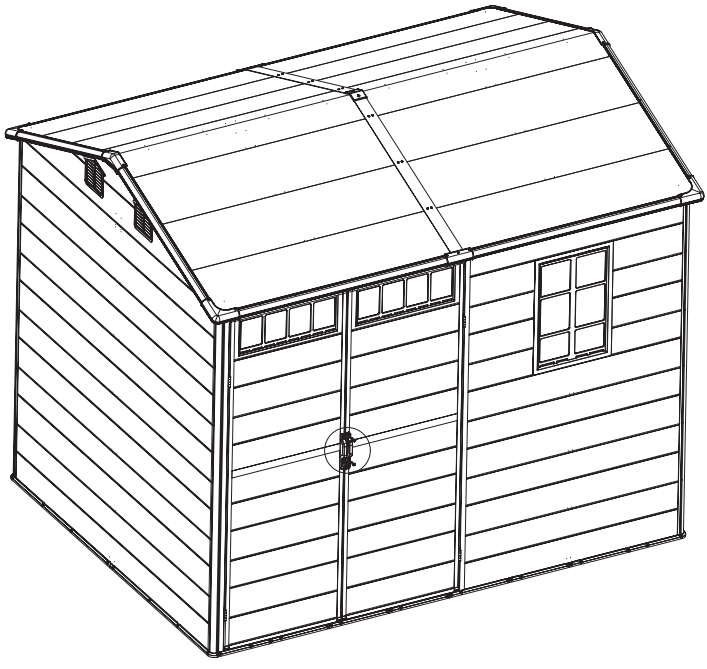

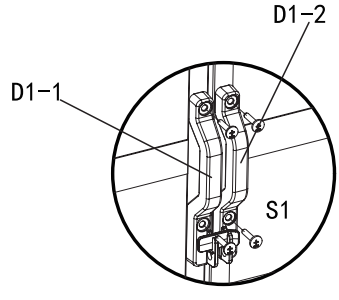

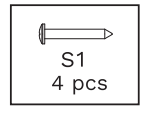

CARE & SAFETY

- In case of fire, do not attempt to extinguish any burning polypropylene with water Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (size: 1.9”-3” ,screws are not included).
- Wear safety-goggles and always follow the manufacturer’s instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.